



DAEWOO[®]
ELECTRICALS



**SONIC BEAT ANC
WIRELESS HEADPHONES**

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using your Wireless Headphones.
- Before using your Wireless Headphones, visually check that the unit is intact and has not suffered any transit damage.
- Only charge the headphones from a suitable USB outlet, any other power source may cause permanent damage to the headphones.
- The headphones must be fully charged via the USB port before use.
- Do not operate these headphones after a malfunction or after being dropped or damaged in any way.
- Never allow children to play with the headphones. Small parts may be a choking hazard.
- Do not allow the USB charging cable to hang over sharp edges or come in contact with hot surfaces.
- These headphones are intended for household use only and should not be used for industrial purposes.
- Do not use these headphones for anything other than their intended use.

-
- Do not immerse the headphones in water or any other liquids.
 - Do not expose the headphones to moisture, rain or humidity, as they are not waterproof.
 - Before cleaning, ensure the earphones are not connected to the USB supply.
 - Never clean the headphones with solvents or harsh or abrasive cleaners.
 - Do not attempt to dismantle the earphones, it does not contain any user serviceable parts.
 - Whilst not in use, store the headphones in a cool dry place free from extreme temperatures, humidity or dust.

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

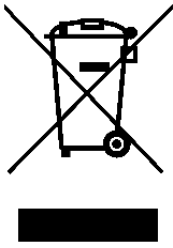

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.

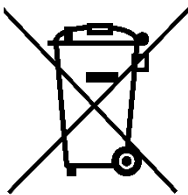 

This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

 


This symbol indicates that this product conforms to the Radio Equipment Directive (RED).



Warning: To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Description of Parts

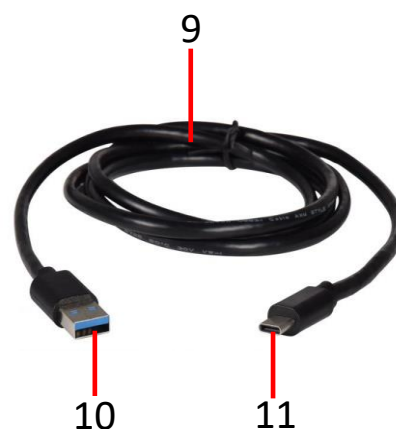

1. ON/OFF, Play/Pause, Answer Call
2. LED Indicator
3. Next Track/Volume Up
4. Previous Track/Volume Down
5. 3.5mm AUX Input
6. Microphone
7. USB Charging Port
8. Active Noise Cancelling (ANC) ON/OFF
9. USB Cable
10. A-Type USB Plug
11. C-Type USB Plug
12. 3.5mm AUX Cable

Charging Your Headphones

Before first using your Headphones ensure they are fully charged as follows:

1. Insert the **C-Type USB Plug (11)** of the **USB Cable (9)** into the **USB Charging Port (7)** in the Headphones.
2. Insert the **A-Type USB Plug (10)** into a suitable USB outlet such as a laptop, PC or USB Wall Charger.
3. Whilst the Headphones are on charge, the **LED Indicator (2)** will glow red, once the internal battery is fully charged the **LED Indicator (2)** will go out.

NB Charging time will take 1-2 hours – remove the charging cable once the headphones are fully charged.

Re-Charging Your Headphones

A low tone in the Headphones whilst listening to music indicates that the battery is nearly flat and will need recharging – follow the above procedure to re-charge your Headphones.

NB the percentage of battery charge will be shown in the ‘Paired Devices’ on your wireless device.

Pairing and using Your Headphones

1. Press the **ON/OFF, Play/Pause, Answer Call** Button (1) for 2-3 seconds and the **LED Indicator** (2) will flash alternate Red/Blue colour showing the headphones have powered up and are ready to pair.
2. Enable the wireless mode on your Phone, Tablet or other wireless compatible device and set it to search.
3. Select ‘**AVS1598**’ from the search results and the headphones will now pair with your device.
4. Once the two are paired successfully, the **LED Indicator** (2) will flash slowly blue.

NB The Headphones will reconnect automatically after power up if your device has previously paired with the headphones and the pairing process will not be needed.

Playing Music after Pairing

1. Press the **ON/OFF, Play/Pause, Answer Call** button (1) to start playing music, press the button again to pause playing music.
2. Briefly press the **Next Track/Volume Up** button (3) to increase the volume level.*
3. Briefly press the **Previous Track/Volume Down** button (4) to lower the volume level.
4. Press and hold the **Next Track/Volume Up** button (3) for one second to skip to the next music track.
5. Press and hold the **Previous Track/Volume Down** button (4) for one second to skip back to the previous music track.

Using the Auto-Noise-Cancelling (ANC) Mode

1. Move the **ANC Switch** (8) to the ‘ON’ position to activate ANC mode.
2. The **LED Indicator** (2) will light green to show the noise cancelling mode is in operation.
3. Move the **ANC Switch** (8) to the ‘OFF’ position to cancel ANC mode.

About Auto Noise Cancelling

The Auto Noise Cancelling mode will electronically reduce the background noise level, giving the user a better audio experience.

The ANC mode can also be used independently from the audio mode so the headphones can be used to eliminate background noise whilst wearing the headphones.

Handling Telephone Calls

Answering a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Press the **ON/OFF, Play/Pause, Answer Call** button (1) to answer the call.
3. Briefly press the **Next Track/Volume Up** button (3) to increase the call volume level.*
4. Briefly press the **Previous Track/Volume Down** button (4) to lower the call volume level.
5. Press the **ON/OFF, Play/Pause, Answer Call** button (1) to end the call.
NB The callers voice will be heard in the headphones and your voice will be picked up by the built in **Microphone** (6) in the headphones.

Rejecting a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Press the **ON/OFF, Play/Pause, Answer Call** button (1) for two seconds to reject a call.

Redialing the last Call Made

1. Press the **ON/OFF, Play/Pause, Answer Call** button (1) twice to redial the last call made.
2. Briefly press the **Next Track/Volume Up** button (3) to increase the call volume level.*
3. Briefly press the **Previous Track/Volume Down** button (4) to lower the call volume level.
4. Briefly press the **ON/OFF, Play/Pause, Answer Call** button (1) to end the call.
NB The callers voice will be heard in the headphones and your voice will be picked up by the built in **Microphone** (6) in the headphones.

*Two high pitched beeps will be heard warning when the maximum volume setting has been reached.

Using Your Headphones 3.5mm AUX Input (5)

If the Headphone battery goes flat whilst in use or the device you are using has no wireless output, plugging your device or audio source into the **3.5mm AUX Input** (5) via the supplied **3.5mm AUX Cable** (12) will allow normal playback through the headphones.

NB The wireless mode will not operate whilst using the wired AUX connection.

Technical Specification


Model Number	AVS1598
Wireless Version	5.3
Wireless Range	12-15M
Operating Frequency	2402-2480MHz
Output Power	10dBm e.i.r.p
Drive Unit	40mm
Impedance	36Ω
Sensitivity	85dB ±3dB
Maximum Input Power (Aux)	100mW
Battery	300mAh 3.7V Rechargeable Battery
Unpacked Weight	Approx. 218g
Dimensions (Approx.)	Approx. 170 (w) x 80 (d) x 190 (h) mm
Playing Time ANC On	8 – 10 hours (70% volume)
Playing Time ANC Off	10 – 12 hours (70% volume)
Charging Time	1 – 2 hours
This product conforms to Radio Equipment Directive 2014/53/EU	

Recycling Information


Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper recycling facilities.
Dispose of recyclable plastics in appropriate plastic recycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

 Disposal of the Product

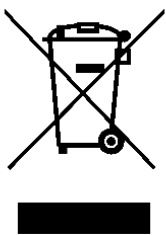

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

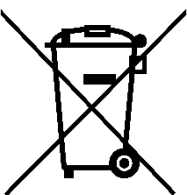 

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.

 
Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

**UK
CA** 

CE 

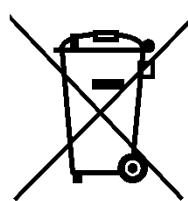



DAEWOO[®]
ELECTRICALS

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

***Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.**

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com