



DAEWOO[®]
ELECTRICALS



BOOM BEAT PRO BOOMBOX SPEAKER

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this Speaker.
- Before plugging your unit into the USB supply, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the USB power supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the Speaker for sufficient ventilation.
- Ensure that the ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the Speaker.
- Do not position the Speaker close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- The Speaker shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall

be placed on the apparatus.

- Do not immerse the Speaker or its supply in water or any other liquids.
- Do not leave the Speaker unattended during use.
- Do not leave the Speaker unattended whilst connected to the USB supply.
- Close supervision is required when using this Speaker near children.
- Never leave this Speaker within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- It is imperative to unplug the power supply after the Speaker has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- Do not operate this appliance after a malfunction or after being dropped or damaged in any way.
- Do not allow the power cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the USB charging cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this product other than those supplied or recommended by

supplier.

- Do not use this product for anything other than its intended use.
- Do not push objects into any openings as damage to the product and/or electric shock may occur.


Explanation of Symbols

The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

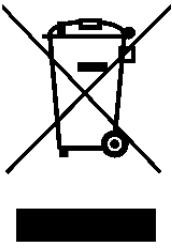

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.

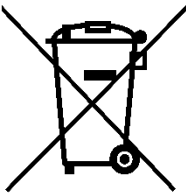

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.




This symbol indicates that this product conforms to the Radio Equipment Directive (RED).




Warning: To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Description of Parts – Control Panel

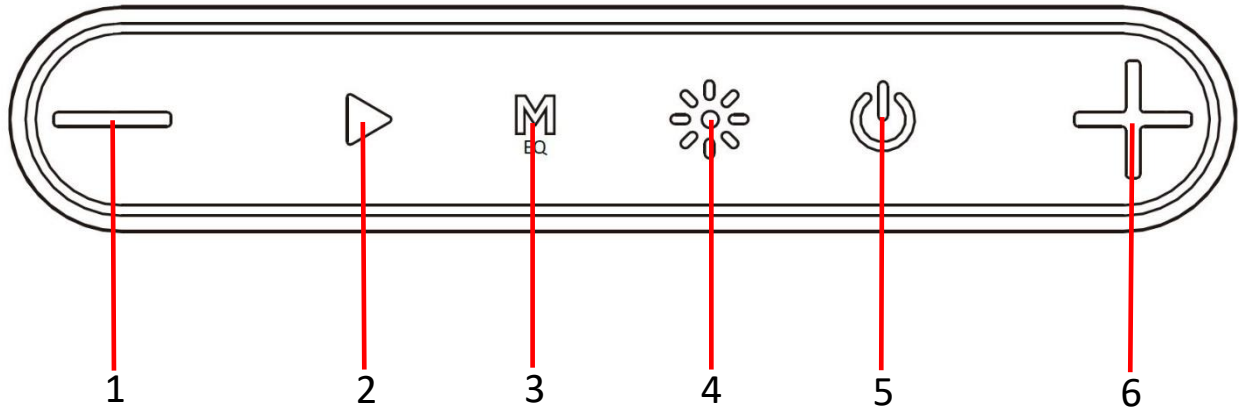

1. Volume Down/Previous Track
2. Play/Pause
3. EQ Effects
4. Light Effects
5. Power ON/OFF
6. Volume Up/Next Track

Description of Parts – Rear Connection Panel

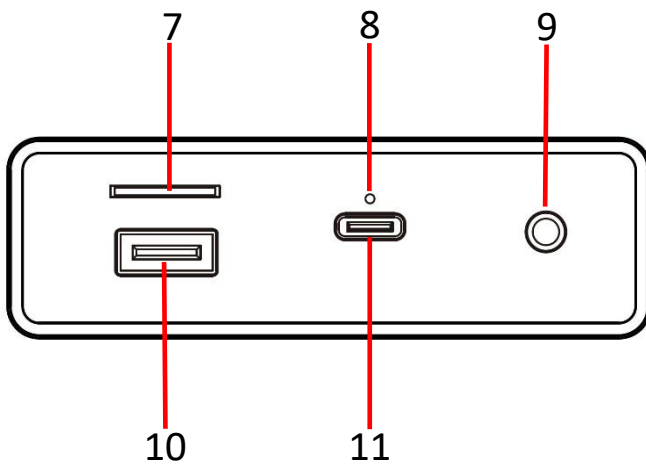

7. Micro SD Player
8. Charging/Wireless Indicator
9. AUX Input
10. USB Memory Stick Player
11. USB Charging Port
12. A-Type USB Plug
13. USB Charging Cable
14. C-Type USB Plug
15. AUX Cable



Charging Your Boom Beat Pro Boombox Speaker




Before using your Speaker ensure that it is fully charged as follows:

1. Insert the **C-Type USB Plug** (14) of the **USB Cable** (13) into the **USB Charging Port** (11) on the rear connection panel.
2. Insert the **A-Type USB Plug** (12) into a suitable USB outlet such as a laptop, PC or USB Wall Charger.
3. Whilst the speaker is on charge, the **Charging/Wireless Indicator** (8) will glow red, once the internal battery is fully charged the **Charging/Wireless Indicator** (8) will go out.

NB Charging time will take approximately 3-4 hours – remove the charging cable once the speaker is fully charged.



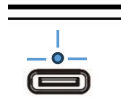


Using Your Boom Beat Pro Boombox Speaker

Using the Wireless Mode

1. Press and hold the Power **ON/OFF** button (5)  for two seconds to power up the speaker.
2. The **Charging/Wireless Indicator** (8) on the rear connection panel will quickly flash Blue showing the speaker has powered up and is ready to pair. The light effects around the speakers and on the sides will also illuminate. 
3. Enable the wireless mode on your Phone, Tablet or other wireless compatible device and set it to search.
4. Select '**AVS1622**' from the search results found by your device which will now pair with the speaker.
5. Once the two are paired successfully, the **Charging/Wireless Indicator** (8) will flash slowly and the speaker will chime. 



 
NB The speaker will reconnect automatically after power up if your device has previously paired therefore the pairing process will not be needed.

Playing Music after Pairing

1. Press the **Play/Pause** button (2)  to start playing music, press the button again to pause playing music.
2. Briefly press the **Volume Up/Next Track** button (6)  to increase the volume level.*
3. Briefly press the **Volume Down/Previous Track** button (1)  to lower the volume level.
4. Press and hold the **Volume Up/Next Track** button (6)  for one second to skip to the next music track.
5. Press and hold the **Volume Down/Previous Track** button (1)  for one second to skip back to the previous music track.






 
Using the AUX Input (9)

The AUX Input allows a direct wired connection of an external audio device (such as a Laptop, PC, music player, etc.) via a 3.5mm jack socket input on the Rear Connection Panel.

1. Press and hold the **ON/OFF** button (5)  for two seconds to power up the speaker.
2. Insert the **AUX Cable** (15) into the **AUX Input** (9) on the Rear Connection Panel under the Silicone Plug.
3. The speaker will automatically detect the cable and switch to AUX mode.
4. Insert the other end of the lead into the device you are playing from.
2. Briefly press the **Volume Up/Next Track** button (6)  to increase the volume level.*
3. Briefly press the **Volume Down/Previous Track** button (1)  to lower the volume level.






 
NB The supplied lead may not be compatible with the external audio device being used and an alternative lead may be necessary.

Playing Music from a Micro SD/TF Card

1. Press and hold the **ON/OFF** button (5)  for two seconds to power up the speaker.
2. Insert a Micro SD/TF card (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **Micro SD Player** (7) on the Rear Connection Panel under the Silicone Plug.
3. The tracks on the card will begin to play automatically.
4. Press the **Play/Pause** button (2)  to stop playing music, press the button again to start playing music.
5. Briefly press the **Volume Up/Next Track** button (6)  to increase the volume level.*
6. Briefly press the **Volume Down/Previous Track** button (1)  to lower the volume level.
7. Press and hold the **Volume Up/Next Track** button (6)  for one second to skip to the next music track.
8. Press and hold the **Volume Down/Previous Track** button (1)  for one second to skip back to the previous music track.

NB the Micro SD player supports cards up to 32GB capacity max.



Playing Music from a USB Memory Stick

1. Press and hold the **ON/OFF** button (5)  for two seconds to power up the speaker.
 2. Insert a USB Memory Stick (pre-loaded with audio tracks – Mp3, WAV, files etc.) into the **USB Memory Stick Player** (10) on the Rear Connection Panel under the Silicone Plug.
 3. The tracks on the memory stick will begin to play automatically.
 4. Press the **Play/Pause** button (2)  to stop playing music, press the button again to start playing music.
 5. Briefly press the **Volume Up/Next Track** button (6)  to increase the volume level.*
 6. Briefly press the **Volume Down/Previous Track** button (1)  to lower the volume level.
 7. Press and hold the **Volume Up/Next Track** button (6)  for one second to skip to the next music track.
 8. Press and hold the **Volume Down/Previous Track** button (1)  for one second to skip back to the previous music track.
- NB** the USB Memory Stick Player supports sticks up to 32GB capacity max.

*Two high pitched beeps will be heard warning when the maximum volume setting has been reached.


TWS Wireless Connection

Two Boom Beat Pro Boombox Speakers can be linked together using Wireless to create two stereo speakers, this is known as TWS pairing as follows:

1. Press and hold the **ON/OFF** button (5)  for two seconds on one speaker only to power it up.
2. The **Charging/Wireless Indicator** (8) will quickly flash Blue showing the speaker has powered up and is ready to pair.
3. Enable the wireless mode on your Phone, Tablet or other wireless compatible device and allow it to pair with the first speaker.
4. Power up the second speaker.
5. Press the **ON/OFF** button (5)  on both speakers briefly twice to allow the two speakers to link together in TWS mode.
6. After the connection is successful, one of the speakers becomes the left channel and the main speaker. The other speaker is the right channel.

Please note that to obtain TWS mode, two Boom Beat Pro Boombox Wireless Speakers will be required.


Disconnecting TWS Mode

Press and hold the **Play/Pause** button (2)  for five seconds to cancel the TWS mode.


Resetting the Speaker

Press and hold the **Play/Pause** button (2)  for five seconds to clear the Wireless connection and reset the speaker.

Light Effects

Briefly press the **Light Effects** button (4)  to change the light effects mode.

EQ Effects

Briefly press the **EQ Effects** button (3)  to change the audio EQ setting.

NB press this button for two seconds to manually select the input i.e. Wireless, Micro SD Player, USB Player or Aux Input.

Care and Use of Your Speaker


- Always disconnect the Speaker from the USB charging supply before cleaning.
- Clean outside of the Speaker with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Speaker in water or any other liquids.

Recycling Information


Disposal of the Packaging

- Dispose of paper and cardboard in appropriate paper recycling facilities.
- Dispose of recyclable plastics in appropriate plastic recycling facilities.
- Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

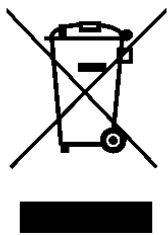

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

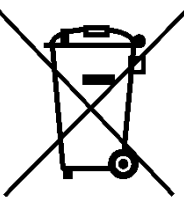

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.

Technical Specification

Model Number	AVS1622
Wireless Name	AVS1622
Charging Voltage	DC 5V
Charging Current	≤1A
Speaker Impedance	4Ω
Output power	40W
Frequency Response	70Hz – 20KHz
Unpacked Weight	2.2Kg Approx.
Dimensions	373mm (l) 146mm (w) x 176mm (h) Approx.
Built in Battery type	Lithium Ion, 3600 mAh
Charging Time	3-4 hours
Playing Time	5 hours (70% Volume), 2-3 hours (100% Volume)
IP Rating	IPX5 – Protected from low pressure water jets from any angle
Charging Interface	C-Type Port
Wireless Version	5.1
Wireless Frequency Range	2402 - 2480MHz
Wireless Transmission power	≤-3.325dBm
This product conforms to Radio Equipment Directive 2014/53/EU (RED)	



Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

**UK
CA**

CE

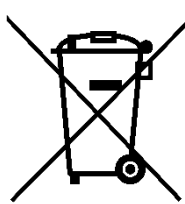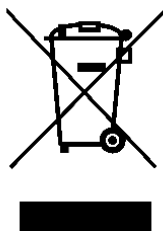



DAEWOO[®]

ELECTRICALS

WARRANTY

Thank you for purchasing your Daewoo Audio product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo audio product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com