



DAEWOO[®]
ELECTRICALS



**AIR BUDS
TRUE WIRELESS EARBUDS**

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using your Airbuds.
- Before using your Airbuds, visually check that the unit is intact and has not suffered any transit damage.
- Only charge the earbud base unit from a suitable USB outlet any other power source may cause permanent damage to the Airbuds.
- The earbuds must be fully charged before use.
- Do not operate these Airbuds after a malfunction or after being dropped or damaged in any way.
- Never allow children to play with the Airbuds. Small parts may be a choking hazard.
- Do not allow the USB charging cable to hang over sharp edges or come in contact with hot surfaces.
- These Airbuds are intended for household use only and should not be used for industrial purposes.
- Do not use these Airbuds for anything other than the intended use.
- Do not immerse the Airbuds or the base unit in water or any other liquids.
- Do not expose the Airbuds or base unit to moisture, rain or humidity, they are not waterproof.

-
- Before cleaning, ensure the Airbuds are not connected to the USB supply.
 - Never clean the Airbuds with solvents or harsh or abrasive cleaners.
 - Do not attempt to dismantle the Airbuds or the base unit, they do not contain any user serviceable parts.
 - Whilst not in use, store the Airbuds and base unit in a cool dry place free from extreme temperatures, humidity or dust.

Explanation of Symbols


The following warning symbols or words are used in this instruction manual:

**UK
CA**


Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

CE

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

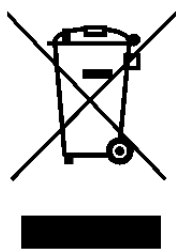

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.

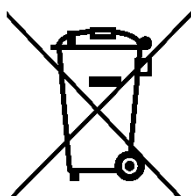

This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.




This symbol indicates that this product conforms to the Radio Equipment Directive (RED).



Warning: To prevent possible hearing damage, do not listen at high volume levels for long periods of time.

Description of Parts

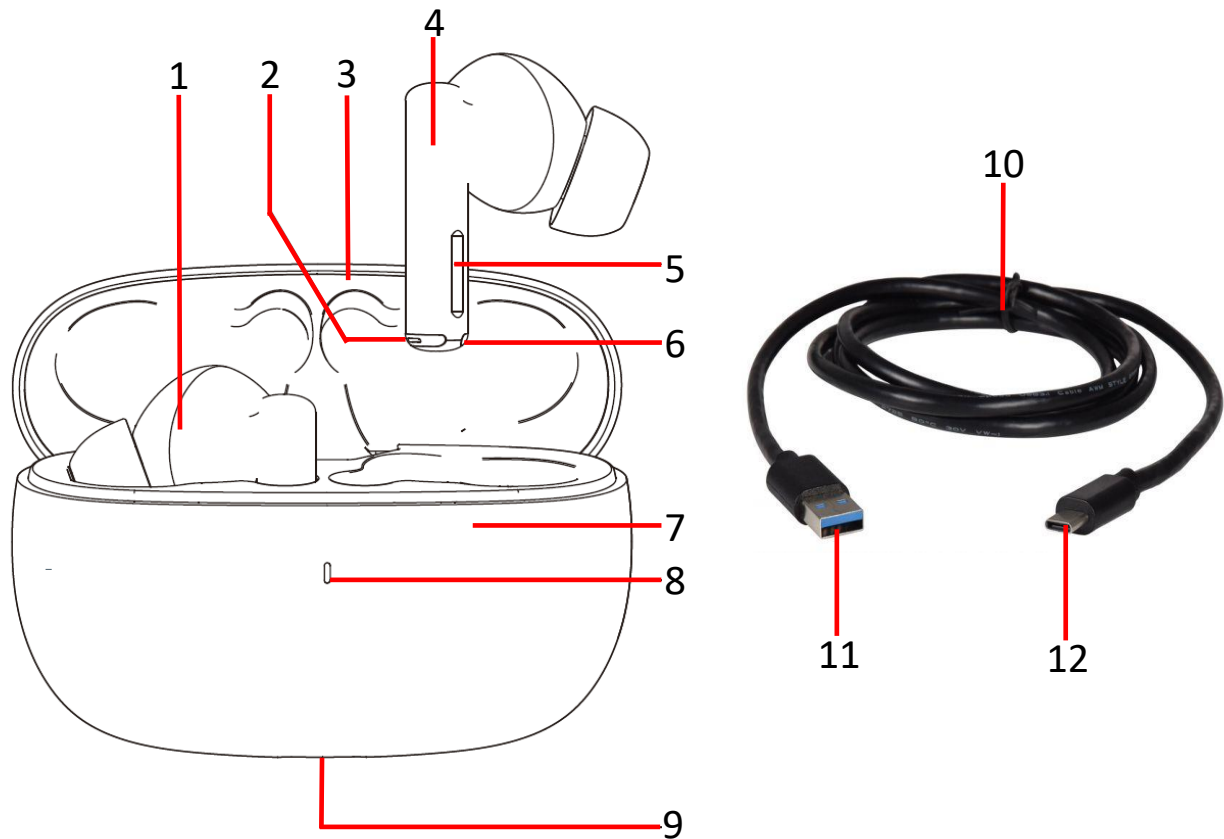

1. Left Airbud
2. Microphone
3. Charging Case Lid
4. Right Airbud
5. Function Button(s)
6. Airbud Charging Contact
7. Charging Case
8. Charging Case LED
9. USB Charging Port
10. USB Cable
11. USB A Type Plug
12. USB C Type Plug

About Your Airbuds

Your Airbuds automatically pair together in stereo and in turn pair with your Wireless device. They are supplied with a Charging Case which is used to store the Airbuds and will also charge the Airbuds whilst on the move.

Charging the Charging Case (7) and Airbuds (1 & 4)

1. Lift the **Charging Case Lid (3)** and place the **Airbuds (1 & 4)** into the **Charging Case (7)** as shown right.
NB the Airbuds will automatically shut down once they are inserted into the **Charging Case (7)**.



2. Insert the **C Type USB Plug (12)** of the **USB Cable (10)** into the **USB Charging Port (9)** in the base of the **Charging Case (7)**.



3. Insert the **USB A Type Plug (11)** into a suitable USB outlet port such as a laptop or USB wall charger.
4. The **Charging Case LED (8)** will flash orange to show that the **Charging Case (7)** and **Airbuds (1 & 4)** are charging.
5. Once fully charged, the **Charging Case LED (8)** will illuminate constantly orange and the **USB Cable (10)** can then be removed.



6. After removing the **USB Cable (10)** the **Charging Case LED (8)** should go out to show the **Charging Case (7)** and the **Airbuds (1 & 4)** are fully charged.

7. If the **Charging Case LED (8)** lights green when the **USB Cable (10)** is removed the **Airbuds (1 & 4)** are not fully charged. Replace the **USB Cable (10)** to charge the Airbuds further until the **Charging Case LED (8)** goes out when the **USB Cable (10)** is removed.



8. A double 'low-high' tone during use indicates that the **Airbuds (1 & 4)** batteries are going flat and need to be recharged. After which the **Airbuds (1 & 4)** will power off.

Pairing and Using Your Airbuds (1 & 4)

1. Ensure the Airbuds are fully charged as described above.
2. Remove the Airbuds from the **Charging Case (7)** and the **Airbuds (1 & 4)** will automatically power up, alternatively touch either **Function Button (5)** for three seconds to power them up.
3. Enable the wireless mode on your Phone, Tablet or other wireless compatible device you are using and set it to search.
4. Select '**AVS1626**' from the search results found by your device which will now pair automatically with both **Airbuds (1 & 4)**.
5. The **Airbuds (1 & 4)** will give a 'low-high' tone pairing sound to confirm they have paired with your device.
6. Enable the music player on your wireless connected device.
7. The **Airbuds (1 & 4)** will automatically power off after being placed into the **Charging Case (7)**. To manually power off, touch the **Function Buttons (5)** for five seconds.

Using the Airbud Function Button(s) (5)

1. To start the music playing, tap either **Function Button (5)** once.
2. To stop the music playing, tap either **Function Button (5)** once.
3. To skip to the next track, tap the right **Function Button (5)** twice.
4. To skip to the previous track, tap the left **Function Button (5)** twice.
5. To increase the volume level, tap the right **Function Button (5)** three times.
6. To decrease the volume level, tap the left **Function Button (5)** three times.
7. To redial the last phone number, tap either **Function Button (5)** four times.

Unpairing Your Device

1. On your device, unpair with 'AVS1626'
2. Replacing both the **Airbuds (1 & 4)** into the **Charging Case (7)** will also enable them to unpair with your wireless device*.

***NB** The Airbuds will give priority to the last connected wireless device.

Automatic Connection and Reconnection

if the Airbuds move out of range of the wireless range they will automatically disconnect. The Airbuds will automatically reconnect when they move within 5 metres of the wireless range.

Automatic Shutdown whilst Charging

The Airbuds will automatically shut down once they are placed into the **Charging Case (7)** for recharging.

Smartsleep

The Airbuds will automatically shut down five minutes after they have been disconnected (unpaired) from the wireless device

Handling Telephone Calls

Answering a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Briefly touch either **Function Button** (5) to answer the call.
3. At the end of the telephone call, briefly touch the either **Function Button** (5) to end the call and return to the music.

NB The callers voice will be heard through the Airbuds and your voice will be picked up by the built in Microphones (2).

Rejecting a Call

1. A call coming in will mute (cut) the music you are listening to.
2. Touch the either **Function Button** (5) twice to reject the call.
3. The Airbuds will then return to the music being played.

Redialling the last number

To redial the last phone number, tap either **Function Button** (5) four times.

Care and Maintenance of Your Airbuds

1. Always disconnect the Charging Case from the USB charging supply before cleaning.
2. Clean the Airbuds and Charging Case with a clean damp cloth. Never clean with harsh or abrasive cleaners.
3. Do not submerge the Airbuds or the Charging Case in water or any other liquids.

Recycling Information


Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper recycling facilities.


Dispose of recyclable plastics in appropriate plastic recycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

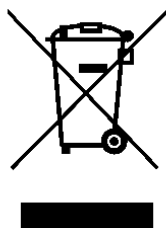

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

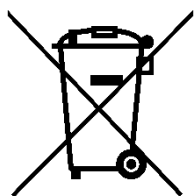

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk, so that they can be disposed of in an environmentally friendly manner.

Technical Specification

Model Number	AVS1626
Pairing Name	AVS1626
Base Unit Charge Voltage	DC 5.0V
Weight	40g
Base Unit Dimensions	65mm (l) 28mm (w) x 43mm (h) Approx.
Charging Interface	Type C
Playing Time	Up to 5 hours (70% Volume) 2-3 hours full volume)
Charging Time	1-2 hours
Wireless Version	5.3
Wireless Transmission Range	Up to 10 metres
Transmission Frequency	2.4Ghz Class 2
This product conforms to Radio Equipment Directive 2014/53/EU	



Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.


- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

**UK
CA**

C E

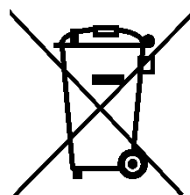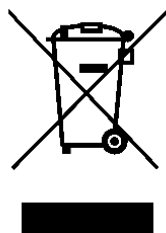

Notes

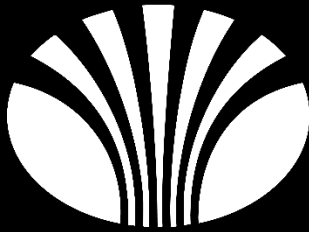

DAEWOO[®]
ELECTRICALS

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

***Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.**

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com