



9" WHITE DESK FAN

USER MANUAL



*Subject to registering your extended guarantee online, please refer to the Instruction Manual for further guidance.

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this 9 Inch Desk Fan.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** use this product with a programmer, timer, separate remote-control system or any other device.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children
- Children of less than 3 years should be kept away unless continuously supervised.
- **DO NOT** immerse the appliance or its cord in water or any

other liquids.

- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on solid, level, surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified-after-sales service in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliances other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than intended use.
- **DO NOT** push objects (including fingers) into the fan grill or any openings as this could risk injury or damage to the appliance.
- Unplug after each use. Grasp the plug not the cord.

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

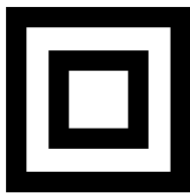

This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.



 
This symbol provides useful additional information on the use of this product.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

Description of Parts

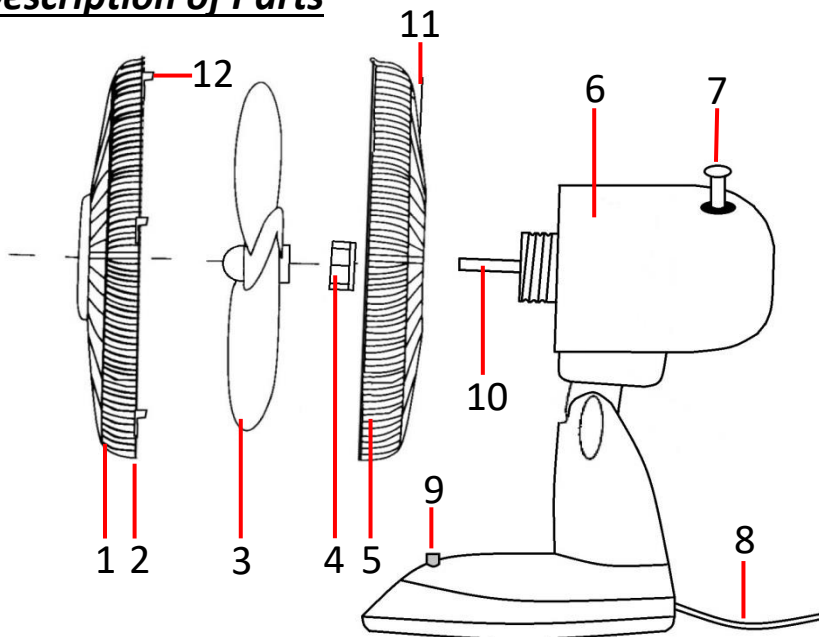


- 1 Front Guard
- 2 Guard Nut and Screw
- 3 Fan Blade
- 4 Rear Guard Fixing Nut
- 5 Rear Guard
- 6 Motor Housing
- 7 Oscillating Control
- 8 Power cord
- 9 Speed Control Switches
- 10 Motor Spindle
- 11 Carry Handle
- 12 Guard Fastening Clips

Before first use of Your Desk Fan

Remove all packing materials and discard responsibly.
Ensure all parts are present - see Description of Parts above.
Check that there is no damage to the mains cable or product.


Assembling Your Desk Fan

 
1. Remove the **Rear Guard Fixing Nut** (4) by unscrewing Anticlockwise.
2. Note the **Rear Guard** (5) locating pins on the motor housing.

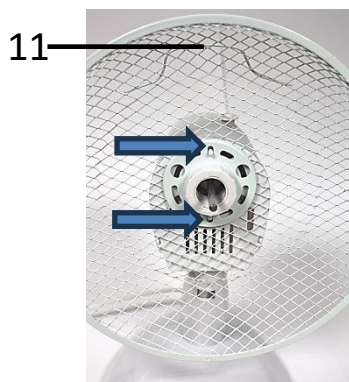

3. Place the **Rear Guard** (5) over the two pins on the motor housing (arrowed left) and attached it using the **Rear Guard Fixing Nut** (4) by screwing it on clockwise. Ensure the **Rear Guard** (5) is fitted with the **Carry Handle** (11) at the top.

 
 
4. Remove the protective sleeving from the **Motor Spindle** (10), push the **Fan Blade** (3) onto the **Motor Spindle** (10) in the direction of the arrow shown.

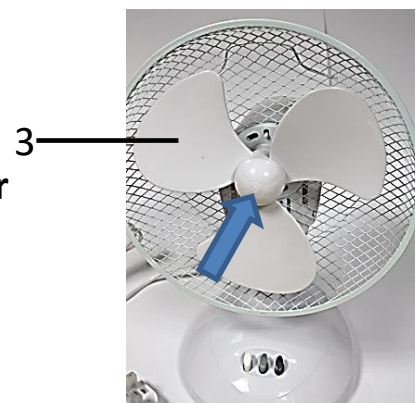

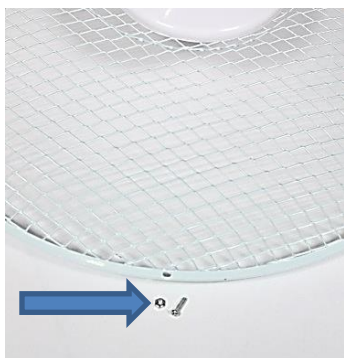


5. Remove the small **Guard Nut and Screw (2)** from the **Front Guard (1)**.

  6. Move the **Guard Fastening Clips (12)** at the edge of the **Front Guard (1)** outwards.

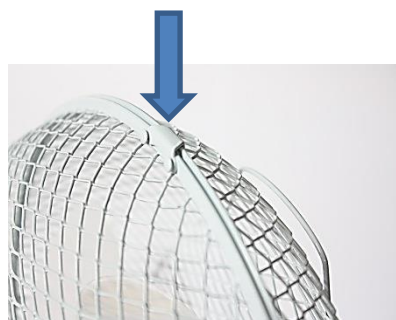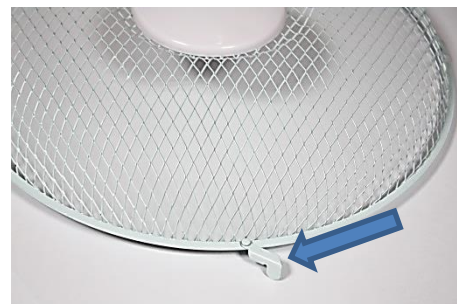

7. Hang the **Front Guard (1)** by its hook over the top of the **Rear Guard (5)**.

 8. Bring the **Front Guard (1)** down to meet the **Rear Guard (5)** and push the **Guard Fastening Clips (12)** inwards until the **Front Guard (1)** is fastened to the **Rear Guard (5)**.

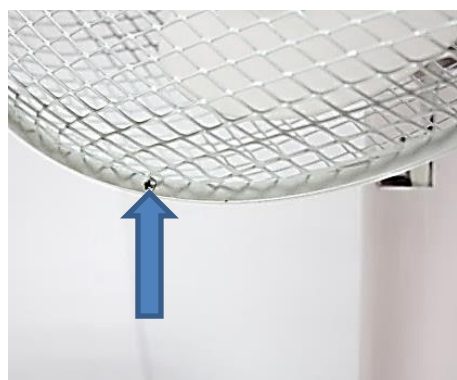

9. Finally fit the **Guard Nut and Screw (2)** through the holes in the bottom edge of the guards and tighten with a suitable pozidrive screwdriver (not supplied).

i The **Guard Nut and Screw (2)** must be fitted so that the guard cannot be removed accidentally.

Operating Your Desk Fan

Place the fan in the desired position ensuring that it is stable. If desired, the fan guard can be tilted up and down to alter the direction of the airflow. **NB** do not adjust the fan whilst connected to the mains and/or switched on. Press the **'0' button** on the base to ensure the fan is **off**. Insert the mains plug into the nearest socket. Press the **'1' button** for the low speed. Press the **'2' button** for the high speed. **NB** Press the **'0' button** to switch the fan off. To enable your fan to oscillate from side to side Press the **oscillation control (7)**. Pull the control up to stop the fan oscillating.

Care and Use of your Fan

Ensure that the fan is switched off and it is not connected to the mains supply before cleaning.

Wipe the fan body clean with a clean, soft damp cloth.

Do not immerse the fan or its cord in water or any other liquid.



Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification

Model No.	COL1586
Voltage	220-240V~ 50/60Hz
Rated Power	25W
Protection Class	Class II

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

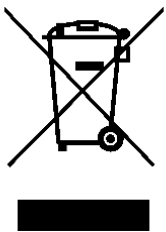

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.





DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty*please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com