


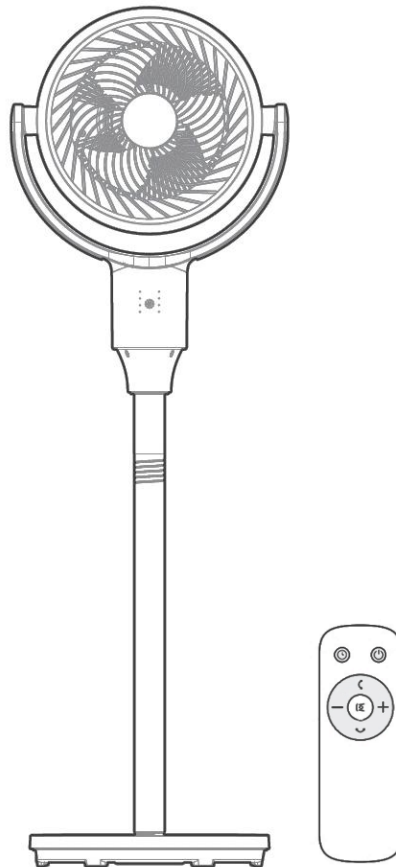

Pedestal Circulation Fan

COL1652
User Manual









1. Check that the product is intact and undamaged and all parts are present.
2. No tools are required; however, some assembly of your fan is required.
3. The Remote Control requires 2x 1.5V AAA batteries (not supplied).


Safety Advice

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and with supervision.
- Close supervision is required when using this appliance near children.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children of less than 3 years should be kept away unless continuously supervised.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- Always use this appliance on solid, level, surface.
- **DO NOT** use this appliance outdoors.
- Repairs to electrical appliances should be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified-after-sales service in order to avoid a hazard.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than intended use.
- **DO NOT** push objects (including fingers) into the fan grill or any openings as this could risk injury or damage to the appliance.
- Always unplug from the mains supply after each use when not in use. Grasp the plug not the cord.
- **DO NOT** leave this appliance unattended when in use.

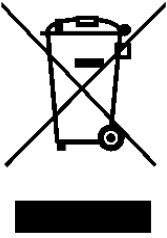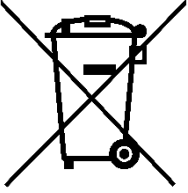The following warning symbols or words are used in this instruction manual:

	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.</p>
	<p>This symbol indicates that the supply uses an alternating current mains supply.</p>
	<p>This symbol indicates that the product is class II double insulated and therefore does not requires an earth connection.</p>

- Motor Unit
- Pole
- Base
- Remote Control
- User Manual (This Booklet)

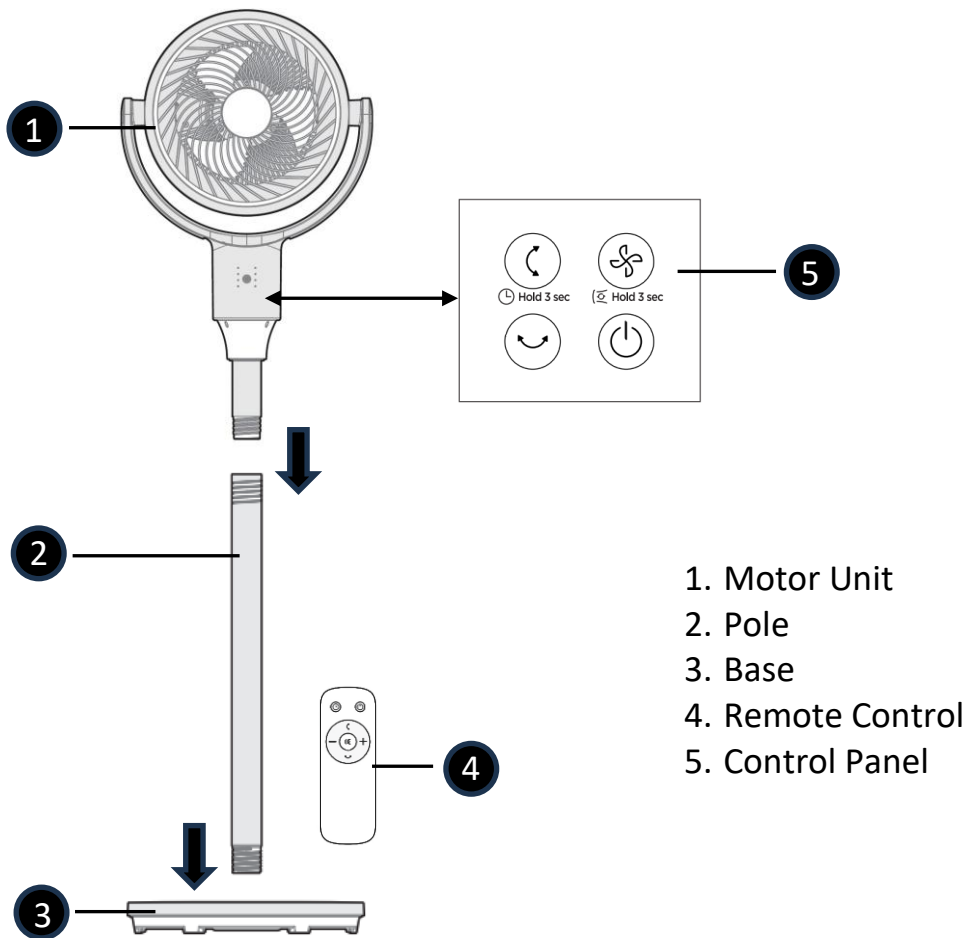

- 1. Motor Unit
- 2. Pole
- 3. Base
- 4. Remote Control
- 5. Control Panel


Assembly Instructions

Step 1

Position the Base (3) on the floor in a suitable position.


Step 2

Screw the Pole (2) into the base (3) until it is securely tightened, being careful not to overtighten.

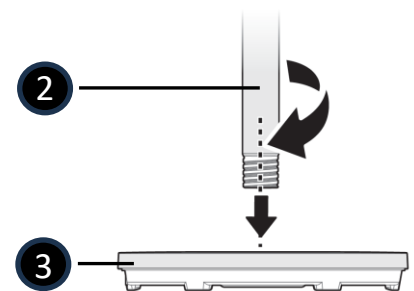

Step 3


Screw the Motor Unit (1) onto the top of Pole (2) until it is securely tightened, being careful not to overtighten.

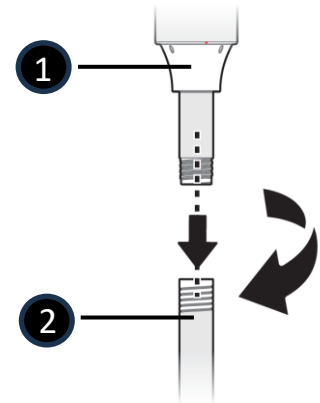

Operating Instructions


1. Insert the mains plug into the nearest socket, the fan will beep to confirm it is connected to the mains.

2. Touch the Power Button (a) on the Control Panel (5) to power up the fan.

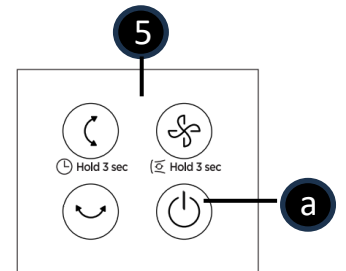


3. Briefly touch the Speed Button (b) on the Control Panel (5) to select from Low, Medium or Fast fan speeds.


NB Touching the Speed Button (b) for longer may accidentally enter automatic mode.

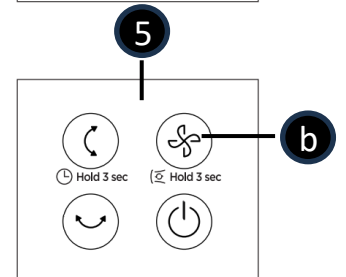


4. The appropriate LED will illuminate above the Control Panel (5) to confirm the fan speed selected:

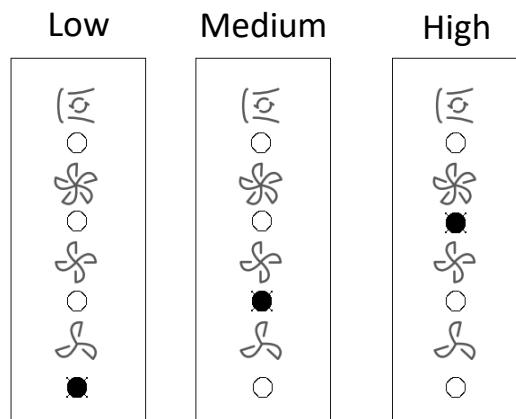

1. Touch the left-right Oscillate Button (c) to enable the fan to oscillate from side to side. Touch the button again to cancel left-right oscillation.

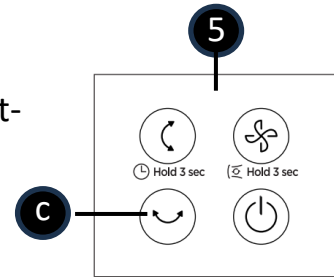


2. Touch the up-down Oscillate Button (d) to enable the fan to oscillate up and down. Touch the button again to cancel up-down oscillation.

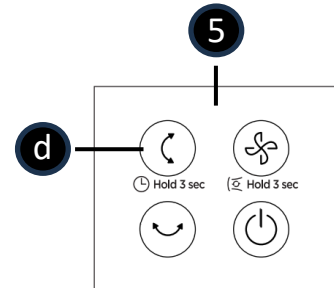


NB Touching the up-down Oscillate Button (d) for longer may accidentally enter timer mode.


3. Touch the Fan Speed Button (b) for 3 seconds to enter automatic oscillate mode. In this mode, the fan will oscillate up and down and side to side automatically. Touch the Fan Speed Button (b) for 3 seconds to cancel automatic mode.

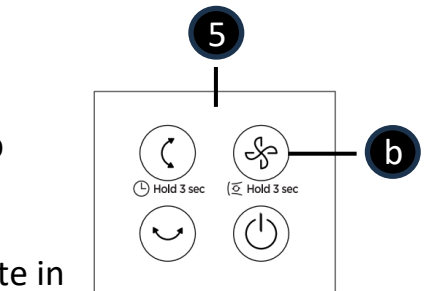


NB the Automatic LED above the Control Panel (5) will illuminate in automatic mode:

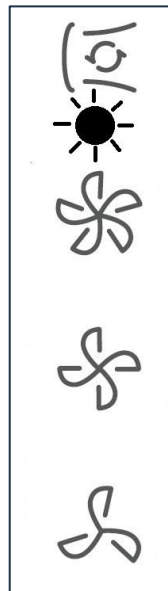

1. Touch the up-down Oscillate Button (d) for 3 seconds to enter timer mode.
2. Each touch of the up-down Oscillate Button (d) will advance the time in 1 hour increments up to a maximum of 6 hours. Once the timer has been set, the fan will switch off automatically once the set time has elapsed.

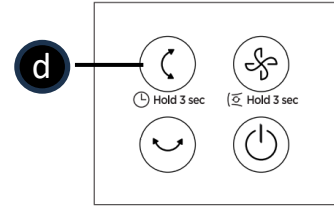


NB the LEDs above the Control Panel (5) will illuminate to show the hours set:

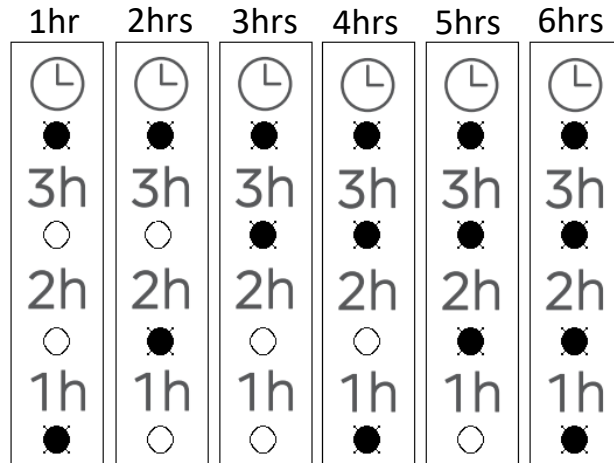


The Remote Control

First Insert the Batteries (not supplied) into the Remote Control.

Slide the battery compartment cover in the direction of the arrow and insert 2x AAA 1.5V batteries observing the polarity marks inside the compartment. Slide the cover back on in the opposite direction once the batteries are fitted:

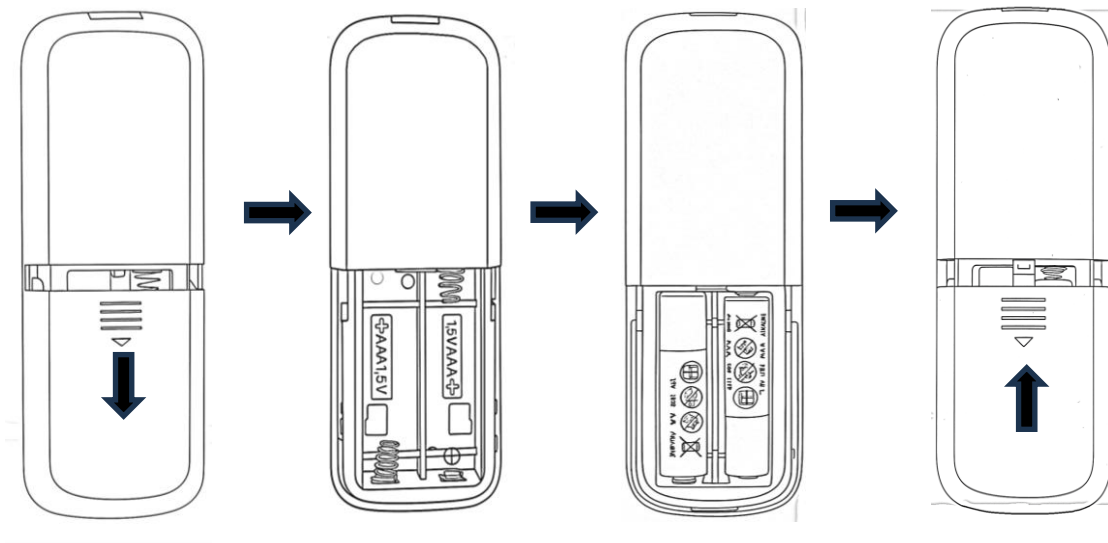

No.	Button	Function Description
1		On/off
2		Timer function on/off
3		Turn the up-down Oscillator mode on/off
4		Increase or decrease the fan speed whilst the fan is running
5		Automatic oscillation mode
6		Switch the left-right oscillation mode on/off

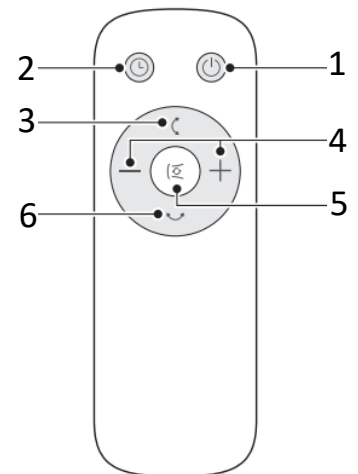

The remote control duplicates all the controls on the fan and will operate up to 5 metres away from the fan.

Battery Safety

- **CAUTION:** There is a danger of explosion if the batteries are incorrectly fitted.
- Ensure that the batteries are installed with the correct polarity.
- It is recommended that batteries are removed if the remote is not to be used for a long period of time or if the remote is to be disposed of.
- Replace only with the same or equivalent battery type.
- Store batteries in a cool dry place.
- Do not expose the batteries to sunshine, fire, heat or similar, never dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Do not short-circuit batteries.
- Do not mix old and new batteries.
- Exhausted batteries are to be removed from the product and disposed of in an environmentally friendly manner.

WARNING!

- Do not ingest the battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep away from children.
- If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

- Ensure that the fan is not connected to the mains supply before cleaning.
- We recommend cleaning the outer body with a soft dry cloth. Do not use abrasive materials as these will damage the finish.
- Do not immerse the fan or its cord in water or any other liquid.

Technical Specification

Model No.	COL1652
Voltage	220-240V~ 50/60Hz
Rated Power	35W
Protection Class	Class II

Troubleshooting


Symptom	Possible Solution
Fan not working	Check Mains Plug is in the socket and that the socket is switched on (if applicable)
	Check that the Power button has been touched.
Fan not oscillating left-right	Touch the left-right Oscillate Button.
Fan not oscillating up-down	Touch the Up-Down Oscillate Button.

Recycling

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

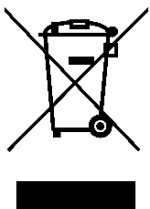

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie, enter your postcode to find out your nearest recycling site.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Mains Plug

This appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a mains plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If the plug is to be removed – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

Description	Symbol	Value	Unit
Maximum fan flow rate	F	11,53	m ³ /min
Fan power input	P	28,80	W
Service value	Sv	0,40	(m ³ /min)/W
Standby power consumption	P _{SB}	0,26	W
Off power consumption	P _{OFF}	–	W
Fan sound power level	L _{WA}	54,49	dB(A)
Maximum air velocity	C	4,94	meters/sec
Seasonal electricity consumption	Q	9,51	kWh/a



Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or materials, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China