 




Mini Bladeless Fan

COL1706
User Manual

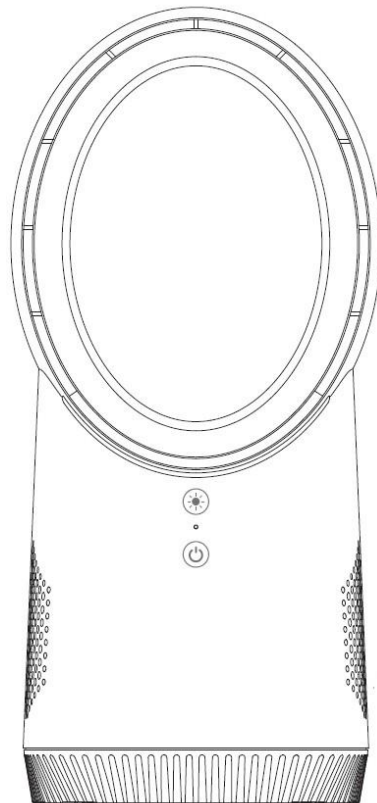




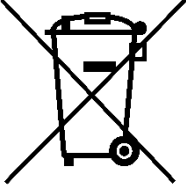 
Page	
2	Contents
3	Getting Started
3	Safety Advice
4	Description of Symbols
5	What's in the Box
6	Description of Parts
7	Operating Instructions
	Charging the Internal Battery
	Using the Bladeless Fan
	The Ambient Light
8	Maximum Run Times
8	Care and Cleaning
8	Technical Specification
8	Troubleshooting
9	Recycling
10	Customer Support
11	Safety Marks
12	Warranty

1. Check that the product is intact and undamaged and all parts are present.
2. No tools are required to assemble your fan, though some assembly is required.



Safety Advice

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- This is a class II product and therefore does not require an earth connection.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and with supervision.
- Close supervision is required when using this appliance near children.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Children of less than 3 years should be kept away unless continuously supervised.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- Always use this appliance on solid, level, surface.
- **DO NOT** use this appliance outdoors.
- Repairs to electrical appliances should be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified-after-sales service in order to avoid a hazard.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than intended use.
- **DO NOT** push objects (including fingers) into the fan grill or any openings as this could risk injury or damage to the appliance.
- Always unplug from the mains supply after each use when not in use. Grasp the plug not the cord.
- **DO NOT** leave this appliance unattended when in use.
- **DO NOT** dismantle the fan for cleaning.


The following warning symbols or words are used in this instruction manual:


	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.</p>

  - Mini Bladeless Fan
- USB Charging Cable
- Instruction Manual (this booklet)

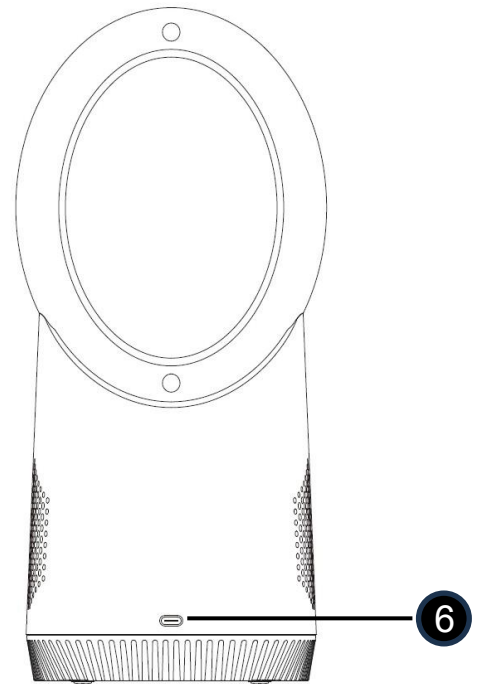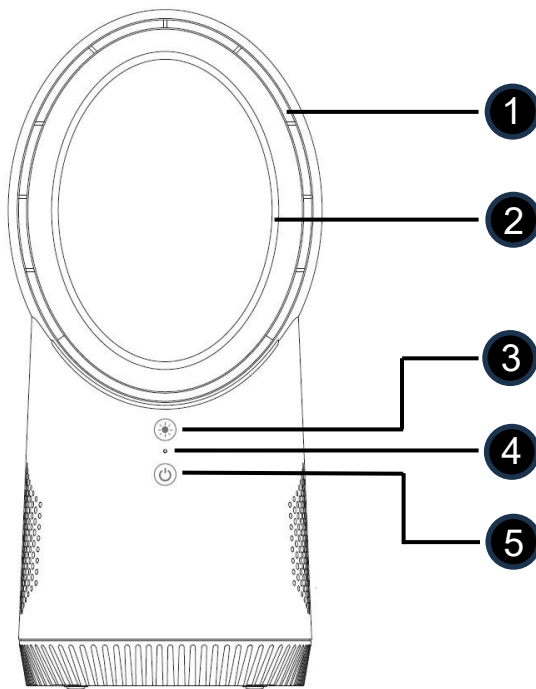

  1. Air Outlet
2. Ambient Light
3. Ambient Light Button
4. Indicator Light
5. On/Off Button
6. USB C-Type Socket
7. USB Charging Cable

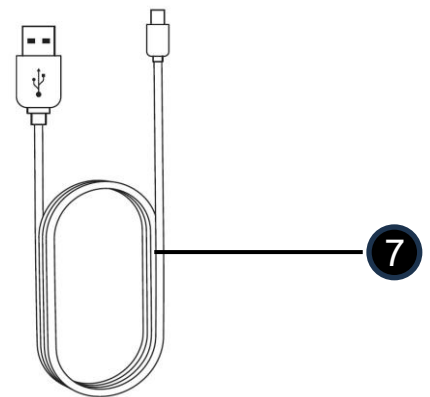

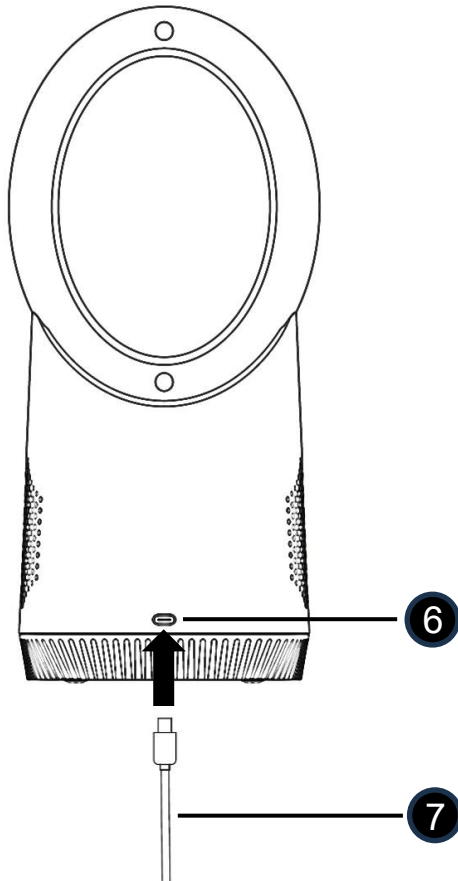


Step 1 – Charging the Internal Battery

1. Insert the USB C-Type plug on the USB Charging Cable (7) into the USB C-Type Socket (6) on the rear of the fan.
2. Plug the large USB plug on the USB Cable (7) into a suitable fast charge (2A) USB outlet.
3. The Indicator Light (4) will flash green to show the internal battery is charging.
4. Once the battery is fully charged (after approximately 5 hours), the Indicator Light (4) will extinguish showing that the internal battery is fully charged and the USB Charging Cable (7) can be removed. **NB** if the Indicator Light (4) flashes red during use the battery will require recharging.

Step 2 – Using the Bladeless Fan

 1. Press the On/Off Button (5) for the first time and the Indicator Light (4) will light up white and the fan speed will be Low.
2. Press the On/Off Button (5) a second time, the Indicator Light (4) will light up blue and the fan speed will be Medium.
3. Press the On/Off Button (5) a third time, the Indicator Light (4) will light up green and the fan speed will be High.
4. Press the On/Off Button (5) a fourth time to switch the fan off.

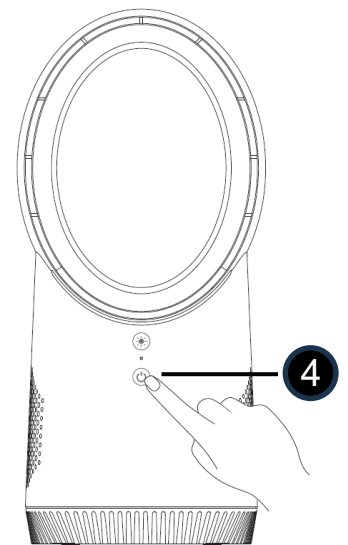

Step 3 – The Ambient Light

1. Press the Ambient Light Button (3) to operate the Ambient Light (2). Press the button repeatedly to select from white, blue, green, red, purple or gradual colour change.
2. Press the Ambient Light Button (3) after the gradual colour change effect to switch the light off.

NB the unit will emit a beep sound each time a button is pressed.

Fan Speed Setting	Run Time (Hours)
1	5.5
2	3.5
3	2.5

Care and Cleaning

- Ensure that the fan is not connected to the mains supply before cleaning.
- We recommend cleaning the outer body with a soft dry cloth. Do not use abrasive materials as these will damage the finish.
- Do not immerse the fan or its cord in water or any other liquid.

Technical Specification

Model No.	COL1706
Voltage	5V DC
Rated Power	6W
Interface Connection	USB C - Type

Troubleshooting

Symptom	Possible Solution
Fan not working	Check the USB Cable is inserted in the USB C-Type Socket on the rear of the fan and the cable is plugged into a USB supply.
	Check that On/Off Button has been pressed.
Ambient Light not working	Check that Ambient Light Button has been pressed.

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie, enter your postcode to find out your nearest recycling site.

Disposal of Batteries



Waste batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.



Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or materials, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China