 


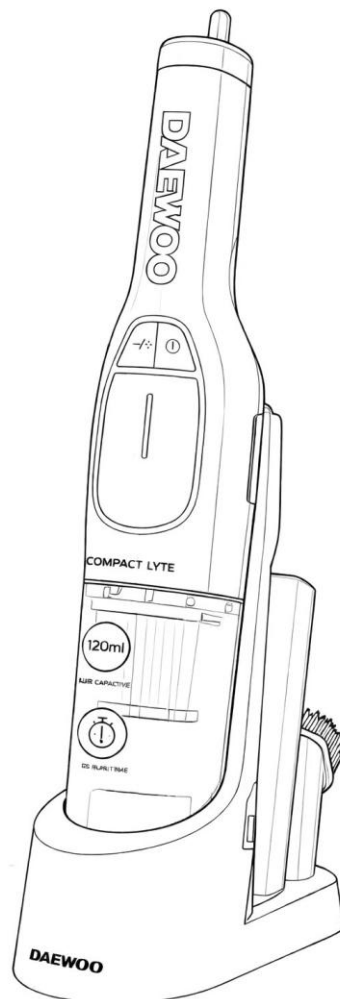

Compact Lyte 7.4V Handheld Vacuum

FLR00158
User Manual



Page No.	
2	Contents
3	Getting Started
3 - 4	Safety Advice
5	Description of Symbols
6	What's in the Box
7	Description of Parts and Accessories
8	Charging the Battery
9	Using the Vacuum Cleaner
10	Emptying the Vacuum Cleaner
10	Cleaning the Hepa Filter
11	Care and Cleaning
11	Recommended Filter Cleaning Intervals
11	Technical Specification
12	Troubleshooting
13	Customer Support
14	FSC & Safety Marks
15	Recycling
16	Warranty

- Check that the product is intact and undamaged and all parts are present.
- No tools are needed to assemble your Vacuum Cleaner.
- Remove all packing materials and discard responsibly.





 
Safety Advice

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- Do not immerse the appliance or its cable in water or any other liquids.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the power supply.
- The Vacuum can be used outdoors but the power supply must remain indoors.
- It is imperative to unplug the power supply after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- Do not operate this appliance with a damaged power supply or cable, after a malfunction or after being dropped or damaged in any way.





- Regular, periodic checks should be carried out on the cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- Do not allow the power cable to hang over sharp edges or come in contact with hot surfaces.
- Do not run the cable under carpets, rugs, etc.
- The Vacuum Cleaner is not to be used if it has been dropped, if there are visible signs of damage.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the power supply, not the cable.
- Do not pull or carry the Vacuum Cleaner by the cable.
- Never use the appliance without the filter in place.
- Do not use the Vacuum without the Dust Compartment attached.
- Use only on vehicle interior surfaces.
- Do not tilt the Vacuum towards the main body when vacuuming liquids.
- Do not vacuum any large or broken objects such as glass.
- Do not vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.
- Do not vacuum reactive liquids (solvents, corrosives, detergents).
- Do not vacuum flammable or explosive substances such as alcohol, thinners etc.

The following warning symbols or words are used in this instruction manual:

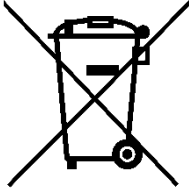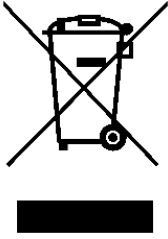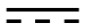
	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
 <p>Li-ion</p>	<p>This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk or www.weeireland.ie so that they can be disposed of in an environmentally friendly manner.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol identifies voltage and the current rating for direct current.</p>
<p>WARNING!</p>	<p>This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.</p>

What's in the Box

- Vacuum Cleaner
- Hepa Filter
- Upholstery Brush
- Crevice Tool
- Storage Base
- Battery Charger

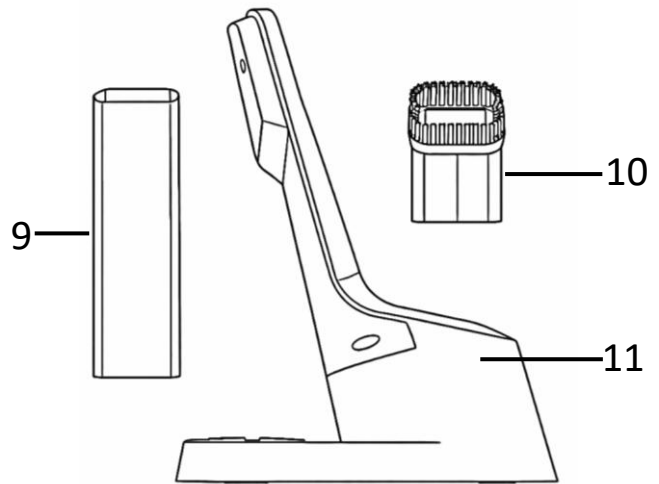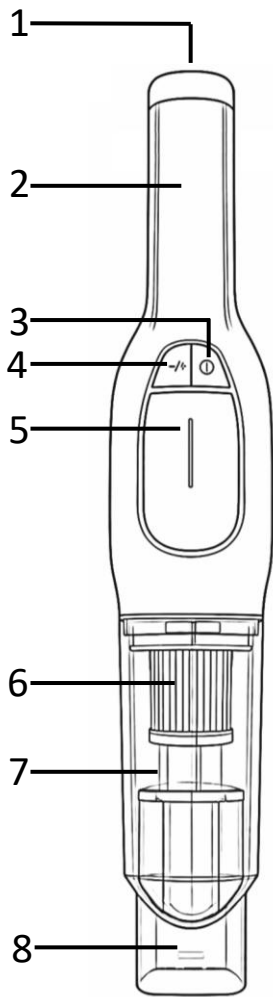


 
- 1. Charging Port (End of Handle)
- 2. Handle
- 3. On/Off Button
- 4. High/Low Button
- 5. Battery/Charging LED
- 6. Hepa Filter
- 7. Dust Compartment
- 8. Air Intake
- 9. Crevice Tool
- 10. Brush Tool
- 11. Base Unit
- 12. Battery Charger
- 13. Small Plug

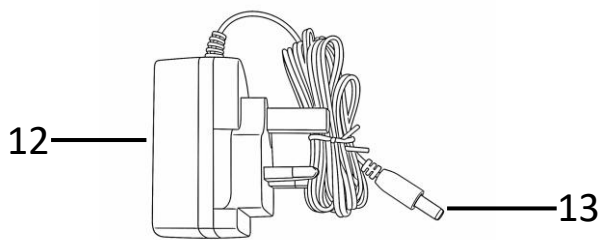

Before use, ensure that the internal battery is fully charged as follows:

Step 1

Insert the **Small Plug** (13) of the **Battery Charger** (12) into the **Charging Port** (1) at the top of the vacuum cleaner **Handle** (2).

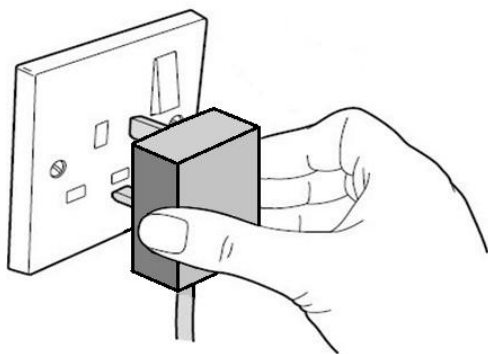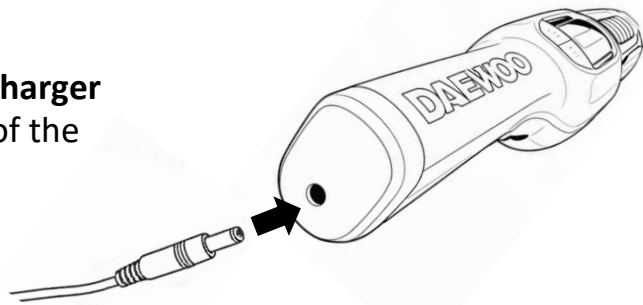

Step 2

Plug the **Battery Charger** (12) into the nearest mains socket.

Step 3

The **Battery/Charging LED** (5) will flash to show the internal battery is charging.

Step 4

Once the battery is fully charged (after approximately 5 hours), the **Battery/Charging LED** (5) will all light continuously showing that the internal battery is fully charged and the **Battery Charger** (12) can be removed.


NB If the **Battery/Charging LED** (5) Indicator flashes during use, the internal battery will need recharging.

Step 1

Grasp the vacuum cleaner firmly by the **Handle (2)** and press the **On/off Button (3)** to power up the cleaner.

Step 2

Press the **High/Low button (4)** to select between the high and low suction levels.

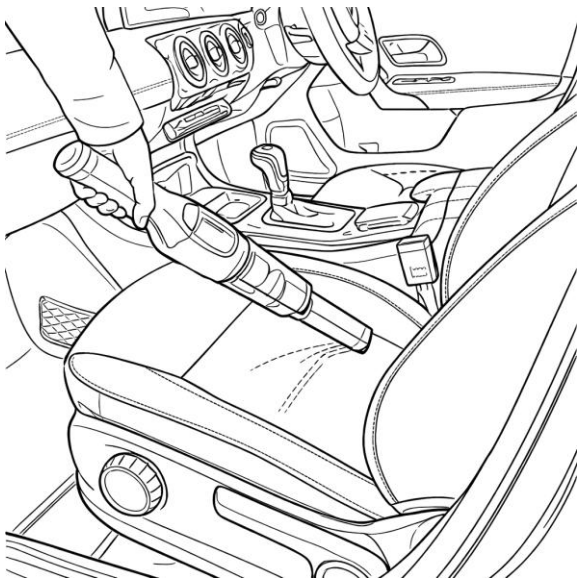


Step 3


Attach the **Crevice Tool (9)** to the **Air Intake (8)** for those hard to get at places.

Step 4

Attach the **Brush Tool (10)** for use on upholstery, car seats and stairs, etc.

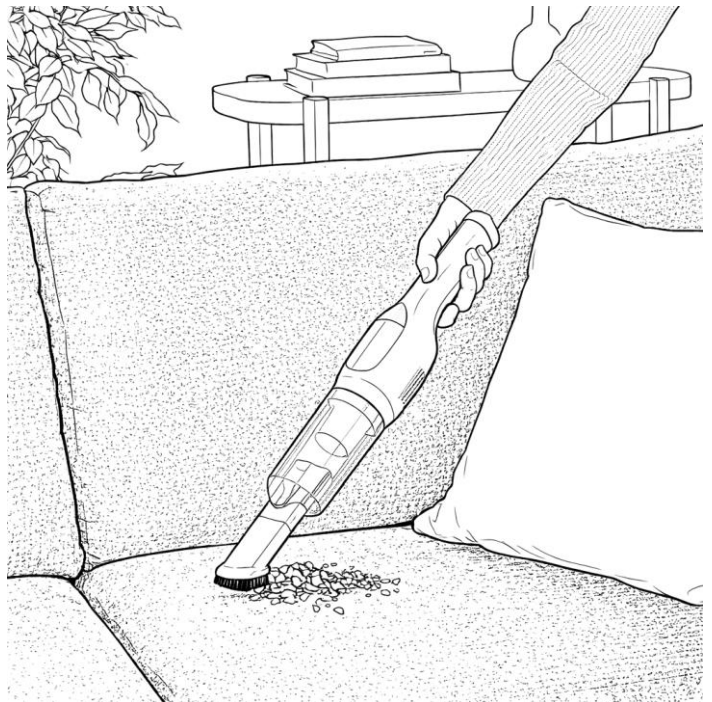


WARNING Always disconnect the cleaner from the **Battery Charger** (12) before emptying.

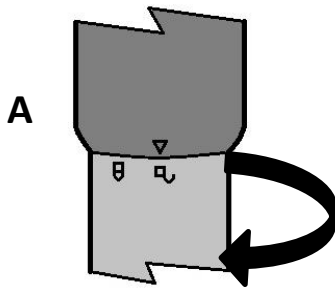

Step 1

Remove the **Dust Compartment** (7) by holding the **Handle** (2) and twisting the **Dust Compartment** (7) to the left into the unlocked position as in **A** left.

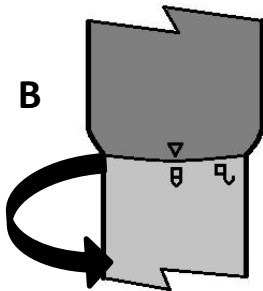

Step 2

Empty the **Dust Compartment** (7) contents into a dust bin as shown right:



Step 3

Replace the **Dust Compartment** (7) by holding the **Handle** (2) and twisting the **Dust Compartment** (7) to the right into the locked position as in **B** left.

WARNING do not continue to use your vacuum cleaner once the **Dust Compartment** (7) is full otherwise permanent damage may occur to the appliance.

Cleaning the Hepa Filter

Step 1

Remove the **Dust Compartment** (7) as described above.



Step 2

Twist the **Hepa Filter** (6) in an anticlockwise direction to remove. Wash the **Hepa Filter** (6) in warm running water until clean. Allow the filter to thoroughly dry for 24 hours before reuse.




Step 3

Replace the filter by twisting onto the vacuum in a clockwise direction.

- Always disconnect the cleaner from the **Battery Charger (12)** before cleaning.
- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the **Dust Compartment (7)** as soon as it is full.*
- Clean the Filter regularly – see table below.
- Allow the Hepa filter to thoroughly dry out for 24 hours before reassembly and reuse.

***WARNING** do not continue to use your vacuum cleaner once the **Dust Compartment (7)** is full otherwise permanent damage may occur to the appliance.

Recommended Filter Cleaning Intervals

Filter Type	Recommended cleaning period
Hepa Filter 	<ul style="list-style-type: none"> • Shake out debris when you empty the dust container. • Rinse under warm water once a month. • Allow to dry thoroughly for 24 hours before reuse.

WARNING Ensure the filter is cleaned periodically according to the table above, failure to clean the filter regularly will severely impair the performance and permanent damage may occur to the appliance and may also invalidate your warranty.

NB DO NOT under any circumstances use the vacuum cleaner without the filters fitted as damage to the appliance will occur.

Technical Specification

Model Number	FLR00158
Mains Charger Rating	Input: AC 100-240V ~ 50/60Hz 0.5A Output: 9V 500mA DC
Vacuum Rating	7.4V DC 80W
Battery	2200mAh Li-Ion (2x 3.7V Batteries)
Capacity	120ml
Unpacked Weight (approx.)	490g
Dimensions (approx.)	67mm (d) x 67mm (w) x 406mm (h)


Problem	Possible Cause	Solution
No Power	Battery Flat.	Place vacuum on charging station until all three indicator lights are lit.
Low suction or poor pick-up.	Dust Compartment is full. Filters are clogged.	Empty the Dust Compartment. Check and clean the filter.
Low Operating Time	The airflow is restricted	Empty the Dust Compartment. Check and clean the filters.

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

UK
CA

CE

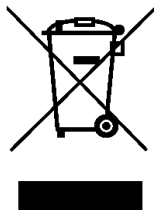

Li-ion




Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

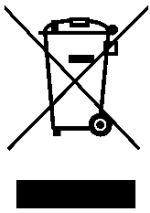

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

Disposal of Batteries



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk or www.weeeireland.ie so that they can be disposed of in an environmentally friendly manner.

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China