



*Please refer to the warranty section for terms of your extended guarantee



TORNADO COMPACT BAGGED VACUUM CLEANER

Contents

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
5	Before First Use of Your Vacuum Cleaner
6	Explanation of Symbols
7	Description of Parts – Vacuum Cleaner
7	Description of Parts – Accessories
8	Assembling Your Vacuum Cleaner
8	Attaching the Flexible Hose
8	Attaching the Telescopic Tube and Floor Tool
9	Using Your Vacuum Cleaner
9	Using the Crevice and Upholstery Multi Tool
10	Emptying the Dust Bag
11	Replacing the Dust Bag
12	Cleaning the Internal Filter
12	Cleaning the Rear Air Outlet Filter
13	Care and Maintenance of Your Vacuum
13	Recommended Filter Cleaning Intervals
13	Replacement Dust Bags
13	Technical Specification
14	Plug Wiring Information
14	Troubleshooting Guide
14	Recycling Information
15	Customer Support
Back Page	Warranty Information

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

Whilst using electrical appliances, basic safety precautions should always be followed.

- Read and familiarise yourself with all operating instructions before using this Vacuum Cleaner.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.

- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by suitable qualified personnel in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the Vacuum Cleaner by the electrical cord, use the handle provided.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.

- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- **DO NOT** use this vacuum without the Dust Bag fitted.
- **DO NOT** use this vacuum without the Filters fitted.

Before First Use of Your Vacuum Cleaner

Remove all packaging materials and discard responsibly.

Check that all parts and accessories are present – see ***Description of Parts*** below.

Explanation of Symbols


The following warning symbols or words are used in this instruction manual:

**UK
CA**

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

CE

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

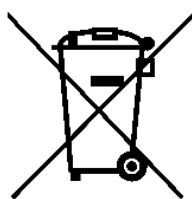

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.




This symbol indicates that the supply uses an alternating current mains supply.



This symbol identifies voltage and the current rating for direct current.



This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

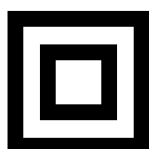

This symbol indicates that the appliance is electrically double insulated and therefore does not require an earth connection.

Description of Parts – Vacuum Cleaner




1. Air Intake
2. Dust Bag Full Indicator
3. On/Off Switch (Foot Operated)
4. Wheel(s)
5. Rear Air Outlet & Filter
6. Tool Rest
7. Mains Cable & Plug
8. Cable Retract button (Foot Operated)
9. Dust Compartment Cover
10. Dust Compartment Release Catch
11. Floor Tool
12. Crevice & Upholstery Multi Tool
13. Flexible hose
14. Hose connector
15. Air control valve
16. Tool connector
17. Telescopic Tube
18. Dust Bag
19. Sealing Clip
20. Dust Bag Holder

Description of Parts – Accessories



Assembling Your Vacuum Cleaner

CAUTION Ensure that the vacuum cleaner is not connected to the mains supply before using the attachments.

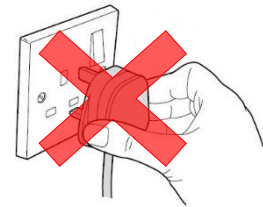

Attaching the Flexible Hose (13) to the Vacuum

Attach the **Flexible Hose (13)** to the vacuum cleaner by pushing the **Hose Connector (14)** into the **Air Intake (1)** until it clicks home, arrowed below:

Right: Attaching the flexible hose to the vacuum



i To remove the hose, press the catches on either side (arrowed below) of the **Hose Connector (14)** and pull the hose out of the **Air Intake (1)**:




Left: Removing the flexible hose from the vacuum.


Attaching the Telescopic Tube (17) and Floor Tool (11)

1. Push the **Telescopic Tube (17)** onto the **Tool Connector (16)** as shown below left:


1

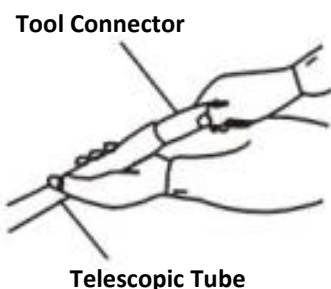

2

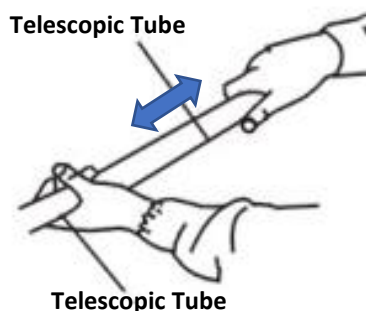

3

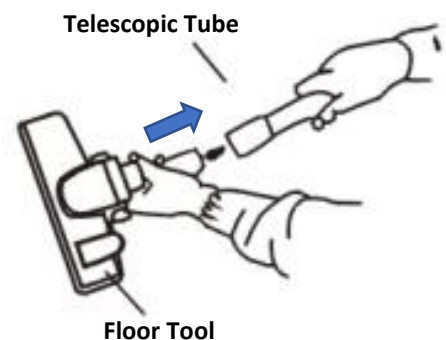


2. Extend the **Telescopic Tube (17)** to the desired length by pushing the catch down and extending.
3. Attach the **Floor Tool (11)** to the other end as shown above.
4. The **Tool connector (16)**, **Telescopic Tube (17)** and **Floor Tool (11)** shown attached to the vacuum:

4



Using Your Vacuum Cleaner

1. Fully reel the **Mains Cable and Plug (7)** out of the vacuum cleaner, being careful not to pull the cable out beyond the red mark but after the yellow mark. **DO NOT** use the vacuum without pulling the cable all the way out.
2. Insert the mains plug into the nearest socket.
3. Press the **On/Off Switch (3)** to power up the vacuum.

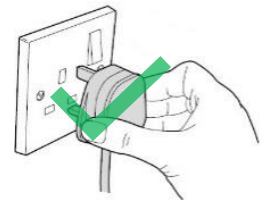

i Adjust the lever on the **Floor Tool (11)** according to the type of floor being cleaned. Push the lever down for use on hard floors (i.e., non carpeted, laminated, tiled, etc.), pull the lever up for vacuum cleaning carpets:




Left: Adjust the lever on the Floor Tool for carpeted or hard floors:

Up for Carpets
Down for hard floors

Using the Crevice & Upholstery Multi Tool (12)

Attach the **Crevice & Upholstery Multi Tool (12)** onto the **Telescopic Tube (17)** to clean carpet edges, upholstered furniture and hard to get at areas:

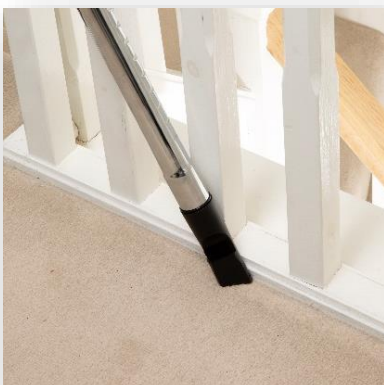

Left: Attached the Crevice & Upholstery multi tool to clean carpet edges.

Right: Fold the brush down to clean hard to get at areas and upholstery.



i If the **Telescopic Tube (17)** is not required, the **Crevice & Upholstery multi tool (12)** or the **Floor tool (11)** can be attached directly to the **Tool connector (16)** on the end of the flexible hose, this useful whilst cleaning soft furnishings, stairs, etc. as below:



Left: Attached the Crevice & Upholstery Multi Tool to the Hose. Use the brush to clean upholstery.




Right: Attach the Floor tool to the Hose to clean the stairs.

i The vacuum power can be varied using the **Air Control Valve (15)** on **Tool Connector (16)**.

Emptying the Dust Bag

⚠ WARNING! Always disconnect the cleaner from the mains power supply before emptying the dust bag or cleaning the filters.

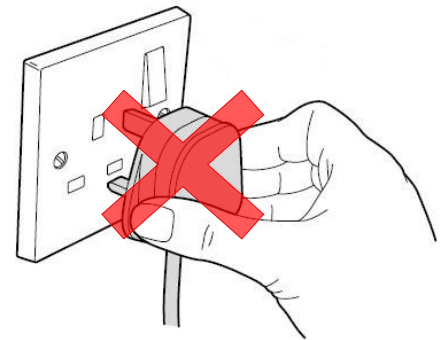


1



1. Once the **Dust Bag Full Indicator (2 - above)** turns red, the **Dust Bag (18)** will require emptying.

2. To remove the bag, first lift the **Dust Compartment Release Catch (10)**.
3. Lift the **Dust Compartment Cover (9)** to reveal the **Dust Bag (18)** and **Dust Bag Holder (20)**. Press the dust bag holder clip down as shown arrowed:
4. Lift out the **Dust Bag Holder (20)** and **Dust Bag (18)** as shown below:

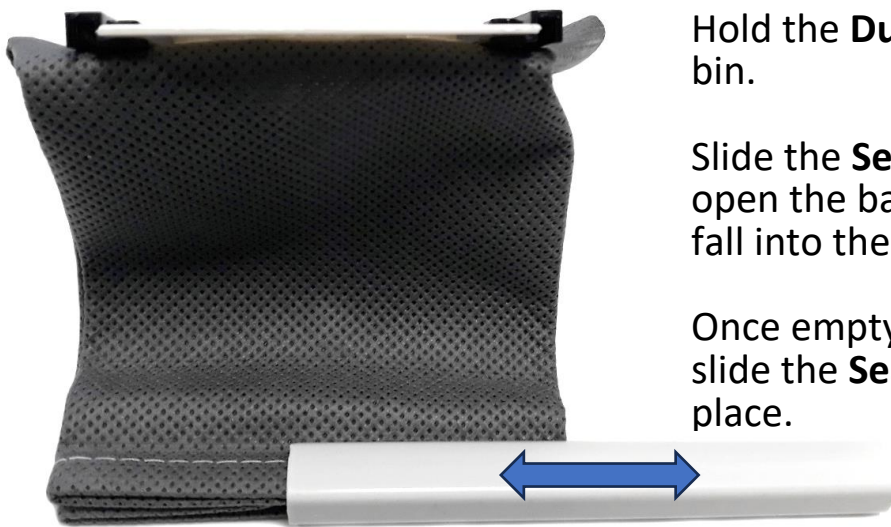


Hold the **Dust Bag (18)** over a dust bin.

Slide the **Sealing Clip (19)** off the bag, open the bag and allow the dirt to fall into the bin.

Once empty, fold the bag closed and slide the **Sealing Clip (19)** back in place.

Replacing the Dust Bag

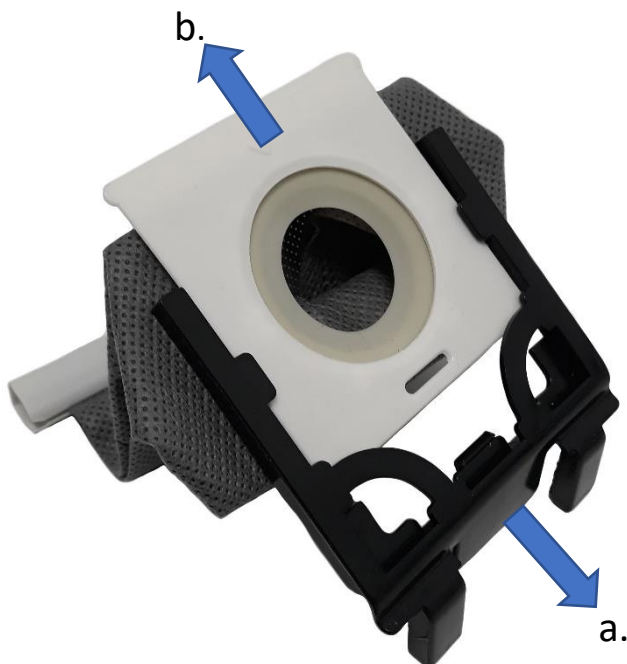

Pull the bag retaining clip outwards as shown left (a.).

At the same time, slide the front of the **Dust Bag (18)** upwards (b.) out of the **Dust Bag Holder (20)**. Responsibly dispose of the used dust bag.


Slide the front of the new **Dust Bag (18)** into the **Dust Bag Holder (20)** ensuring the retaining clip locks into place.

NOTE ensure that the **Sealing Clip (19)** from the end of the bag and the **Dust Bag Holder (20)** are retained.

⚠ WARNING! DO NOT continue to use your vacuum cleaner once the **Dust Bag Full Indicator** (2) turns red as permanent damage may occur to the appliance.


Cleaning the Internal Filter

Whilst emptying the dust bag, slide out the dust compartment filter as shown in a., b. & c. below. Wash the filter in warm running water until clean. Allow the filter to dry thoroughly for 24 hours before replacing and reuse:

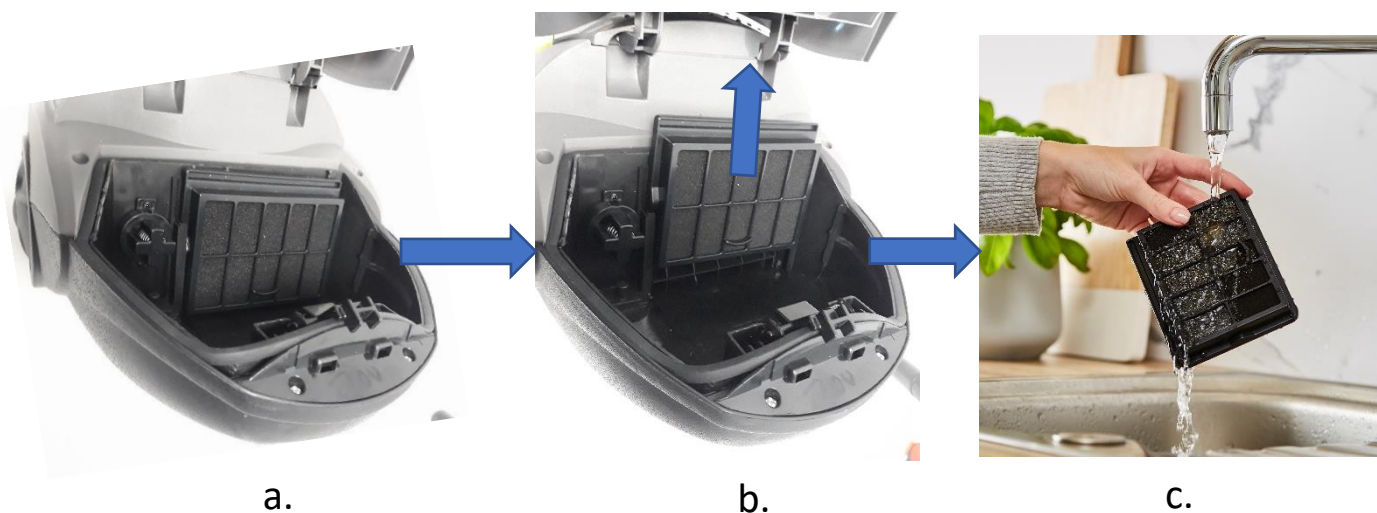

Cleaning the Rear Outlet Filter

Push the latch down on the **Rear Air Outlet Filter & Cover** (5) and remove the filter as shown in d, e, & f below. Wash the filter clean in warm running water, allow it to dry thoroughly for 24 hours before replacing and reuse:

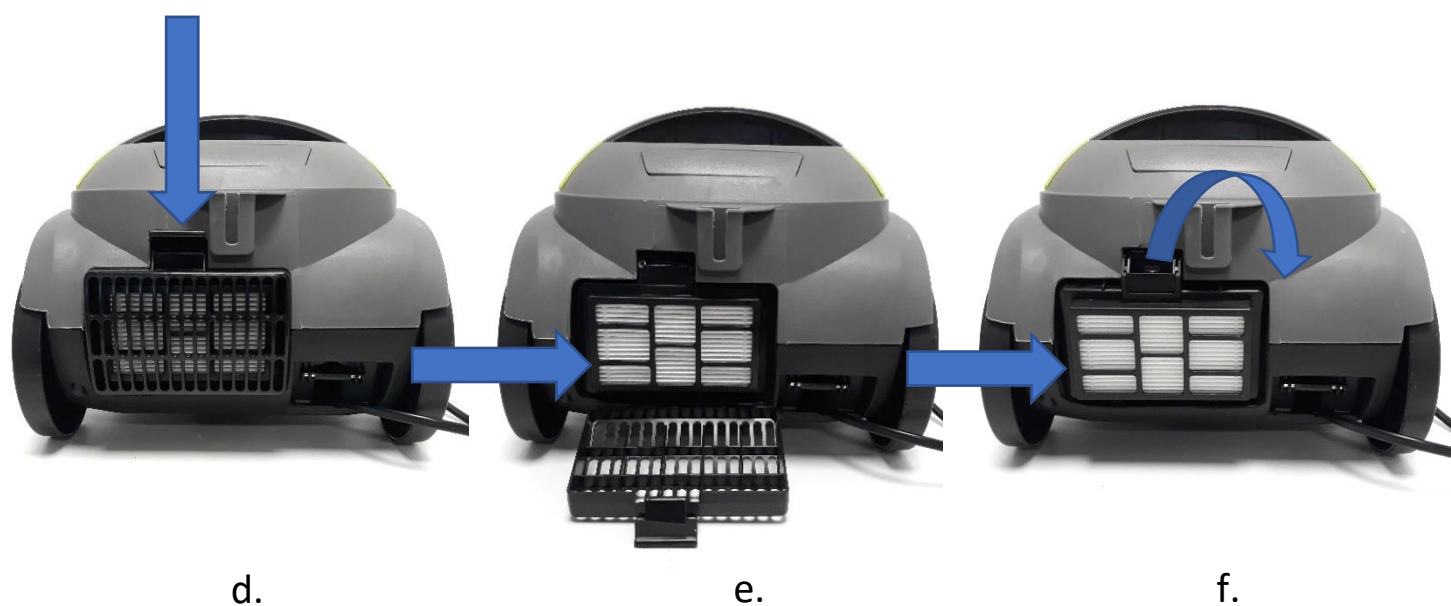


Care and Maintenance of Your Vacuum Cleaner

⚠ WARNING! Always disconnect the cleaner from the mains power supply before cleaning.

- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the dust bag as soon as the dust bag full indicator (2) turns red.*
- Wash the dust compartment and rear air outlet filters regularly – see table below.
- Allow all the filters to thoroughly dry out for 24 hours before reassembly and use.

⚠ *WARNING! **DO NOT** continue to use your vacuum cleaner once the **dust bag full indicator** (8) turns red as permanent damage may occur to the appliance.

Recommended Cleaning Intervals

Filter Type	Recommended cleaning period
Dust Compartment Filter 	<ul style="list-style-type: none"> • Shake out debris once a month • Rinse under warm water once every 3-6 months • Allow to dry thoroughly for 24 hours before reuse.
Rear Outlet Filter 	<ul style="list-style-type: none"> • Shake out debris once a month • Rinse under warm water once every 3-6 months • Allow to dry thoroughly for 24 hours before reuse.

⚠ WARNING! Ensure the filters are cleaned periodically according to the table above, failure to clean the filters regularly will severely impair the performance and permanent damage may occur to the appliance and may invalidate your warranty.

Replacement Dust Bags are available by contacting Daewoo Customer Services on **0161 831 7879** and selecting option 3 or email help@daewooelectricals.com.

Technical Specification

Model Number	FLR00159
Supply Voltage	AC 220-240V ~ 50/60Hz
Rated Power	700W
Protection Class	II
Unpacked Weight (approx.)	2.6 Kgs
Dust Compartment Capacity	2.0L

Non-Wireable Mains Plug

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Troubleshooting Guide

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Solution</i>
Unit fails to turn on.	The unit may not be properly plugged in. The fuse may have tripped.	Ensure the plug is fully inserted into the socket and the socket is switched on. Check the fuse on the mains board, if it has tripped, reset it.
Low suction or poor pick-up.	Dust Bag is full. Filters are clogged. Blockage in the hose.	Replace Dust Bag. Check and clean the filters. Check the hose and clear if necessary.
The vacuum is making a "hissing" sound.	The airflow is restricted	Replace Dust Bag. Check and clean the filters. Check the hose and clear any blockages if necessary.

Recycling Information


Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

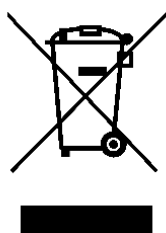

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk enter your postcode to find out your nearest recycling site.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (9.00am-5.00pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.





DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo Vacuum.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo vacuum product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com