



*Please refer to the warranty section for terms of your extended guarantee



HURRICANE CLEARVAC

RECHARGEABLE WINDOW VACUUM CLEANER

Contents

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
5	Explanation of Symbols
6	About Your Window Vacuum
6	Before First use of Your Window Vacuum
6	Description of Parts – Window Vacuum
7	Description of Parts – Window Spray
7	Assembling Your Window Vacuum
8	Assembling Your Window Spray
9	Charging the internal Battery
9	Using Your Window Spray
10	Using Your Window Vacuum
11	After Every Use
12	Care and Use of Your Window Vacuum
12	Technical Specification
12	Recycling Information
13	Customer Support
Back Page	Warranty Information

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Window Vacuum.**
- Before using your Window Vacuum, visually check that the unit is intact and has not suffered any transit damage.
- Always use this appliance on a solid, level, non-flammable surface.
- Ensure that there is clearance of at least 100mm (4 Inches) minimum around the vacuum for sufficient ventilation.
- Ensure that any ventilation openings are not covered with items, such as newspapers, table-cloths, curtains, etc.
- No naked flame sources, such as lighted candles, should be placed on the vacuum.
- **DO NOT** position the vacuum close to sources of heat such as radiators, heaters, other electronic equipment, etc.
- **DO NOT** immerse the vacuum or its charging cable in water or any other liquids.
- **DO NOT** leave the vacuum unattended during use.
- **DO NOT** leave the vacuum unattended whilst connected to the Charger.
- Close supervision is required when using this Window Vacuum near children.

- Never leave this vacuum within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- It is imperative to unplug the Charger after the vacuum has been used, before it is cleaned and whilst being repaired.
- Unplug after each use.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place the user at serious risk.
- **DO NOT** operate this appliance after a malfunction or after being dropped or damaged in any way.
- **DO NOT** allow the charging cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the charging cable under carpets, rugs, etc.
- This product is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this product other than those supplied or recommended by supplier.
- **DO NOT** use this product for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the product and/or electric shock may occur.
- Only use this Window Vacuum with the charger supplied.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:



 
Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.




Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This symbol provides useful additional information on the use of this product.

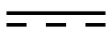

 This symbol identifies voltage and the current rating for direct current.

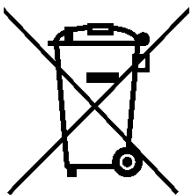


This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.



 This symbol shows that this product is for indoor use only and must not be used outdoors.

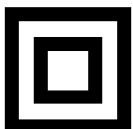

This symbol is to indicate that the product is double insulated and does not require an earth connection.

About Your Window Vacuum

Your Daewoo Window Vacuum is designed to clean windows, glass and mirrors quickly and efficiently.

Before the First Use of Your Window Vacuum

Remove all packing materials and discard responsibly.
Ensure all parts are present see - *Description of Parts* below.

 
Description of Parts – Window Vacuum



1. Squeegee
2. Squeegee Release Button
3. On/Off Button
4. Handle
5. Dirty Water Plug

6. Dirty Water Tank
7. Charging Port (Behind Cover)
8. Power/Charge Indicator
9. Dirty Water Tank Max Mark


Description of Parts – Cleaning Spray

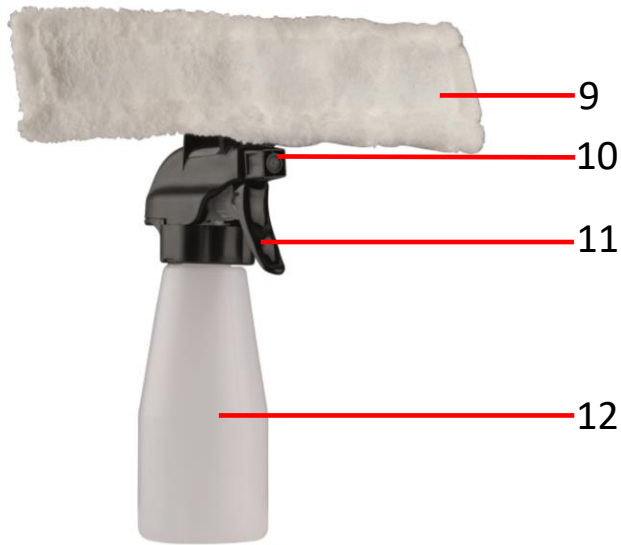

- 9. Microfibre Cloth
- 10. Spray Nozzle
- 11. Spray Trigger
- 12. Water Bottle
- 13. Mains Charger
- 14. Power Plug



 Assembling Your Window Vacuum

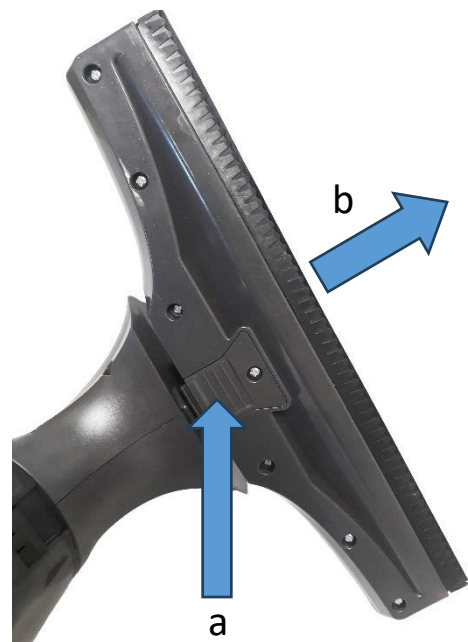

1. Push the **Squeegee (1)** onto the window vacuum in the direction of the arrow shown above to attach it to the window vacuum.

2. To remove the **Squeegee (1)**:
 a) Press the **Squeegee Release Button (2)** arrowed above.
 b) Pull the Squeegee away from the window vacuum.

Assembling Your Window Spray

1. Attaching the Spray Mechanism



Insert the spray nozzle into the body of the spray mechanism, push the retaining ring over the spray nozzle to hold it into place.

2. Attaching the Microfibre Cloth



Left: Attach the **Microfibre Cloth** (9) onto the Cleaning Spray by hooking one end of the body into the larger elastic holder and then stretching the smaller elastic holder over the other end. Finally secure the **Microfibre Cloth** (9) to the Window Spray using the Velcro straps.

 
3. Right: Screw the **Water Bottle** (12) onto the Window Spray as shown.



Charging the internal Battery

Before using your Window Vacuum, please ensure that the internal rechargeable battery is fully charged as follows:

1. Insert the **Power Plug (14)** of the **Mains Charger (13)** into the **Charging Port (7)** - under the rubber cover) to charge the internal battery as shown right:

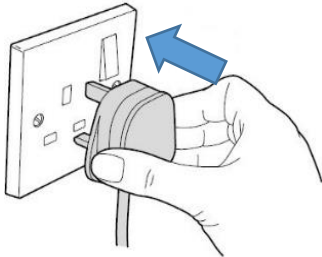

2. Insert the **Mains Charger (13)** into the nearest mains socket and switch the socket on (if applicable).

3. The **Power/Charge Indicator (8)** will flash blue to show the internal battery is charging. Once the battery is fully charged (after approximately 3 hours), the **Power/Charge Indicator (8)** will light blue continuously showing that the internal battery is fully charged and the **Power Plug (14)** can be removed and the Window Vacuum used.

- i** Only use the charger supplied with your window vacuum, using any other kind of charger may permanently damage your product.
- i** The Window vacuum will not operate whilst the **Mains Charger (13)** is connected.

Using Your Window Spray



1. **Left:** Remove the **Water Bottle (12)** from the Window Spray and fill the bottle with water*.

- i** In hard water areas it is strongly recommended that distilled/purified water is used to avoid calcium build up which may damage the Window Vacuum.

2. **Right:** Pull the **Spray Trigger (11)** to spray water onto the surface to be cleaned.
3. Wipe the surface clean using the **Microfibre cloth (9)**.



NOTE You may need to press the trigger several times on first use of the Window Spray to purge the air out of the unit.

Using Your Window Vacuum

1. **Right:** Press and hold the **On/Off Button (3)** to power up the Window Vacuum, the **Power/Charge Indicator (8)** will illuminate.

i Briefly press the **On/Off Button (3)** to switch the vacuum off.



2. **Left:** Vacuum the water using slow, straight, downwards strokes. Ensure the squeegee has good contact with the surface by keeping the vacuum as parallel to the window as possible.

- i** If the **Power/Charger Indicator** (8) flashes during use, the Window Vacuum will require recharging.
- i** The cleaner should not be stored for more than two months without being recharged.

WARNING! Do not operate the cleaner if the water level in the **Dirty Water Tank** (6) exceeds the **Dirty Water Tank MAX Mark** (9). Drain any waste water using the **Dirty Water Plug** (5).

After Every Use



- a. Remove the **Water Bottle** (12) from the Window Spray and empty.



- c. Carefully remove the **Dirty Water Plug** (5) and ensure the **Dirty Water Tank** (6) is empty.

 


- b. Remove the **Squeegee** (1) and wash it under running water (max. 40°C) to remove dirt & debris. Wipe the squeegee dry.

Care and Use of Your Window Vacuum

- Always disconnect the Window Vacuum from the Charger before cleaning.
- Clean the outside of the Window Vacuum with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the Window Vacuum or its Charger and cable in water or any other liquids.
- Store the Window Vacuum in a cool dry place away from direct sunlight.

Care and Use of your Microfibre Cloth (9)

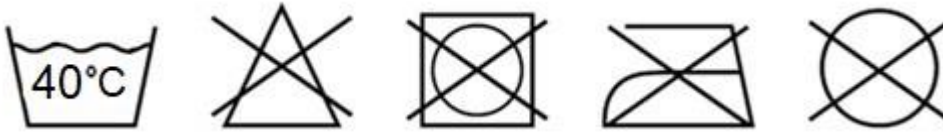

- Wash at a maximum temperature of 40°C
- Do not bleach.
- Do not tumble dry.
- Do not iron.
- Do not dry clean.

Technical Specification


Model Number	FLR00194
Battery Charger Input	100-240V 50/60Hz 0.2A (max.)
Battery Charger Output	DC --- 5V, 0.8A, 4.0W
Battery	3.7V DC Li-ion, 2000mAh, 7.4Wh
Vacuum Rating	3.7V DC, 20W
Run Time	30 minutes approx.
Charge Time	3 hours (approx.)
Unpacked Weight	0.76 Kgs (approx.)
Dirty Water Tank Capacity	150ml
Window Spray Bottle Capacity	300ml
Squeegee Width	27cm
IP Rating	IPX4

Recycling Information


Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

 Disposal of the Product

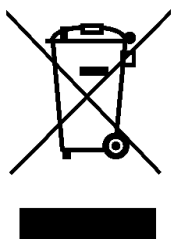

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site



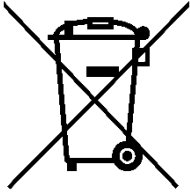 


This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

   - Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

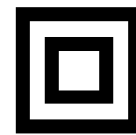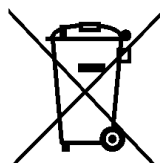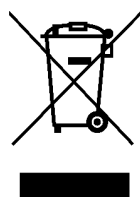



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](mailto:Contact Us (daewooelectricals.com))

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com