



*Please refer to the warranty section for terms of your extended guarantee



User Manual

HURRICANE SPOTMASTER

CORDLESS CARPET & UPHOLSTERY CLEANER

Contents

Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts & Accessories
8	Before First Use of Your Vacuum Cleaner
8	Charging the Internal Battery
8	Important – About Your Spot Master
8	Preparing the Carpet/Upholstery for Cleaning
9	Using Your Spot Master
11	Hints and Tips for Using Your Spot Master
12	Emptying the Dirty Water Tank
12	Care and Maintenance of Your Spot Master
12	Cleaning the Filter
13	Cleaning the Nozzle
14	Technical Specification
14	Troubleshooting Guide
14	Recycling Information
15	Customer Support
Back Page	Warranty Information

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference.

Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Cleaner.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected

to the mains supply.

- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by qualified personnel to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the appliance by the electrical cord, use the handle provided.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.

-
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
 - Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
 - Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
 - **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
 - **DO NOT** vacuum reactive liquids (solvents, corrosives, detergents)
 - **DO NOT** vacuum flammable or explosive substances such as alcohol, thinners etc.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:



 
Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.

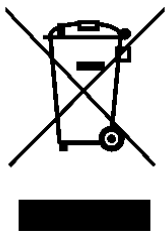

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

Description of Parts and Accessories



1. Water Spray
2. Battery/Charging LED
3. On/Off Button
4. Spray Button
5. Handle
6. Nozzle
7. Scrubbing Brush
8. Nozzle Removal Grab
9. Water Tank Release Catch
- 10a. Clean Water Tank
- 10b. Dirty Water Tank
11. Charging Port (End of Handle)
12. USB Charging Cable
13. C-Type Plug
14. USB Charger



Before First Use of Your Spot Master

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

Charging the Internal Battery

Before use, please ensure that the internal rechargeable battery is fully charged as follows:


1. Insert the **C-Type Plug (13)** of the **USB Charging Cable (12)** into the **Charging Port (11)** in the end of the **Handle (5)**.
2. Plug the larger plug of the **USB Charging Cable (12)** into the **USB Charger (14)**.
3. Insert the USB Charger (14) into the nearest mains socket.
4. The **Battery/Charging LED (2)** will flash red to show the internal battery is charging.
5. Once the battery is fully charged (after approximately 5 hours), the **Battery/Charging LED (2)** will light continuously white showing that the internal battery is fully charged and the **USB Charging Cable (12)** can be removed.

NB If the **Battery/Charging LED (2)** Indicator flashes red during use the internal battery will need recharging.

Important – About Your Spot Master

- This cleaner is designed to clean small areas of household fabric surfaces, such as patches of carpet and upholstery.
- Do not use the cleaner on other materials.
- Add cleaning solution to the water tank following the cleaning solution manufacturer's guidelines.
- Only use the cleaner with tap water or purified/distilled water.
- Ensure the water does not enter electrical parts.
- **Do Not** use washing up liquid or similar as this will create excess foaming which may permanently damage the appliance.
- **Never use the Spot Master in the vertical position as the dirty water will flow back into the air outlet.**

Preparing the Carpet/Upholstery for Cleaning

 **WARNING!** **DO NOT** use this cleaner as a dry vacuum cleaner as this will damage the appliance.

- Before cleaning, dampen a white cloth and rub the cloth gently over a small test area on the carpet or upholstery to be cleaned and check for any colour bleeding. If the cloth remains clean, it should be safe to continue.
- Before using the Spot Master use a conventional dry vacuum cleaner over the area to be cleaned to remove any loose dirt, etc.

 
Using Your Spot Master



Push the **Water Tank Release Catch (9)** down as shown left and remove the tank.

Pull the **Rubber Plug (b.)** off the rear of the tank filler and fill the **Clean Water Tank (10a)** with warm water (max. 40°C) and a cleaning solution* mix. Ensure that the level is not above the 'FULL' mark on the side of the tank as shown right:

i In hard water areas it is strongly recommended that distilled/purified water is used to avoid calcium build up which may damage the Spot Master.

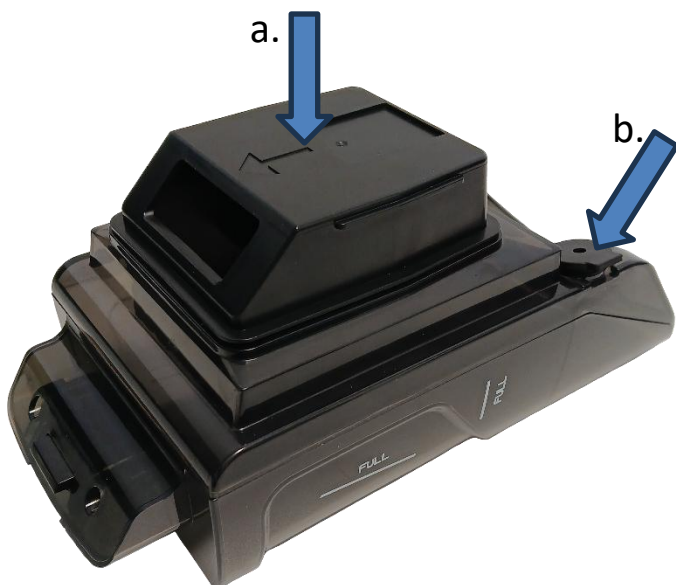

Before refitting the tank to the Spot Master, Ensure that the **Water Tank Cover (a.)** and the **Rubber Plug (b.)** are securely in place.

*Add the cleaning solution to the water tank following the cleaning solution manufacturer's guidelines.



Once the tank is full, hook the bottom of the tank onto the base of the cleaner and push the top of the tank in until it clicks in place as shown left.

1. Hold the cleaner over the area to be cleaned.
2. Press the **Spray Button** (4) to activate the **Water Spray** (1). The spray pump will be heard running and the solution will be sprayed over the spot to be cleaned, use the **Scrubbing Brush** (7) to work in the solution on stubborn stains.
3. Once the area is sufficiently saturated and the solution worked in, press the **Spray Button** (4) again to stop spraying.



4. Place the **Nozzle** (1) evenly and firmly against the carpet or upholstery as shown above.
5. Press the **On/Off Button** (3) to operate the vacuum, the **Battery/Charging LED** (2) Indicator will illuminate white.

6. Pull the unit back by the **Handle** (5) and move the unit slowly towards you over the sprayed-on area, keep the **Nozzle** (1) pressed against the material to vacuum the dirty water which will be collected in the **Dirty Water Tank** (10b).
7. Repeat the above steps 1-6 if necessary if the spot requires further cleaning.

Below: Use the Spot Master to clean Upholstery, Hard Floors and Stairs:



Hints & Tips for Using Your Spot Master

Spraying

Do not spray water continually in the same place, as the water will quickly be absorbed after spraying. If the water penetrates too deeply and is not sufficiently re-absorbed, mildew could start to form.

Stubborn Marks

If the mark is heavily soiled, use a concentrated carpet cleaning solution readily available from most DIY stores and online sites prior to using the Spot Master.

Follow the Carpet Cleaning Solution manufacturers guidelines before using the solution on your carpet.

Emptying the Dirty Water Tank (10b)

WARNING do not continue to use your Spot Master once the **Dirty Water Tank (10b)** has reached the 'FULL' mark otherwise permanent damage may occur to the appliance.



Once the dirty water level reaches the 'FULL' mark, remove the water tank as described above, pull the **Water Tank Cover (a.)** off the **Dirty Water Tank (10b)**. Empty the contents as shown left:

Once empty, rinse the tank out under warm running water until clean.

Replace the **Water Tank Cover (a.)** on the **Dirty Water Tank (10b)** and refit the tank to the Spot Master.

Care and Maintenance of Your Spot Master

- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the **Dirty Water Tank (10b)** as soon as it is full.*
- Do not store the Spot Master with water in either tank.
- Wash the Filter regularly.
- Allow the filter to thoroughly dry out for 24 hours before reassembly and reuse.

Cleaning the Filter

1. Remove the water tank as described above.
2. Pull up the filter in the recess behind the water tank as below:
3. Wash the filter in warm water until clean, allow the filter to dry for 24 hours before refitting it back into the Spot Master:



NB Do not under any circumstances use the Spot Master without the filter fitted as permanent damage may occur to the appliance.

Cleaning the Nozzle

1. Hold the **Nozzle Removal Grab** (8) either side of the **Nozzle** (1) as shown right:



2. Pull to remove the **Nozzle** (1).

3. Wash the **Nozzle** (1) in warm Running Water – allow the Nozzle to dry for 24 hours before use.



Technical Specification

Model Number	FLR00196
Charger Input Rating	220-240V AC, 50-60Hz, 0.5A
Charger Output Rating	5.0V DC, 2.0A, 10W
Vacuum Rating	10.8V 90W
Vacuum IP Rating	IPX4
Battery	2500mAh Li-Ion (3x 3.7V Batteries)
Tank Capacity Clean/Dirty	200ml/250ml
Running Time	≥18 Minutes
Charging Time	3.5Hours Approx.
Vacuum	≥5Kpa
Noise Level	≤78dBA
Unpacked Weight (approx.)	1.7g
Dimensions (approx.)	400mm (d) x 110mm (w) x 185mm (h)

Troubleshooting Guide

Problem	Possible Cause	Solution
No Power	Battery Flat.	Recharge the internal Battery.
Low suction or poor pick-up.	Filter is clogged.	Check and clean the filter.
Low Operating Time	Full Water Tank Clogged Filter	Empty the Dirty Water Tank. Check and clean the filter.

Recycling Information

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.


Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

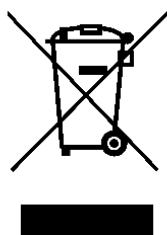

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.


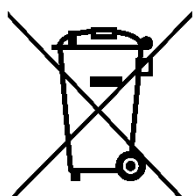 


This symbol means batteries and rechargeable batteries may not be disposed of with household waste!
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

  - Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

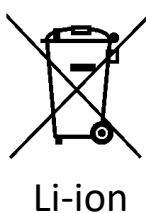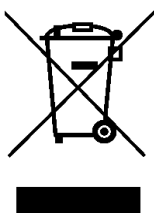



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo Steam Mop.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty*please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](mailto:Contact Us (daewooelectricals.com))

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com