



\*Please refer to the warranty section for terms of your extended guarantee



# CYCLONE FREEDOM CAR VAC

Cordless Handheld Car Detailing Vacuum

## Contents

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts & Accessories
8	Before First Use of Your Vacuum Cleaner
8	Charging the Internal Battery
8	Powering up Your Vacuum
9	Attaching the Accessories – Vacuuming
9	Attaching the Accessories – Blow Function
10	Attaching the Accessories – Inflating and Compressing
11	Care and Maintenance of Your Vacuum
11	Emptying the Dust Compartment
12	Cleaning the HEPA Filter
13	Technical Specification
13	Troubleshooting Guide
13	Recycling Information
14	Customer Support
Back Page	Warranty Information

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference.

Ensure the user manual is included when passing the product on to any third parties.

### **IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE**

**When using electrical appliances, basic safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Cleaner.**
- Before using your cleaner, visually check that the unit is intact and has not suffered any transit damage.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst

being repaired.

- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the USB cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the USB cable is damaged, it should only be replaced by qualified personnel to avoid a hazard
- **DO NOT** allow the USB cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the USB supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the appliance by the electrical cord, use the handle provided.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.

- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- **DO NOT** vacuum reactive liquids (solvents, corrosives, detergents)
- **DO NOT** vacuum flammable or explosive substances such as alcohol, thinners etc.

## Explanation of Symbols


The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

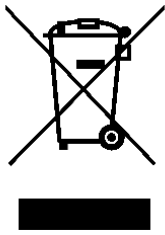

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeireland.ie](http://www.weeeireland.ie) enter your postcode to find out your nearest recycling site.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.




This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.


**⚠ WARNING!** This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.

## Description of Parts & Accessories

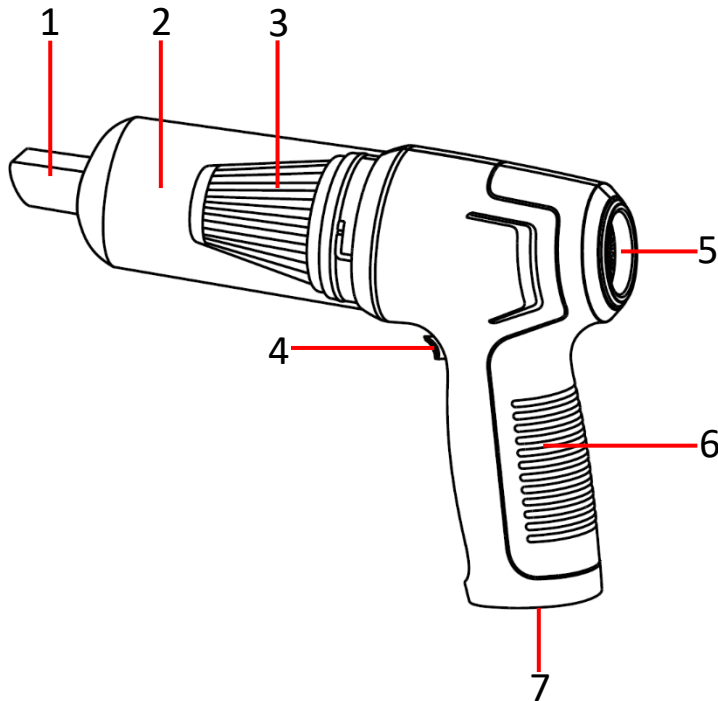


1. Air Intake
2. Dust Compartment
3. HEPA Filter
4. On/Speed Button
5. Air Outlet
6. Handle
7. Charging Port (Base of Handle)
8. Long Reach Nozzle
9. Long Reach Nozzle Brush
10. Crevice Tool
11. Brush Tool
12. Upholstery Tool
13. Inflate Nozzles
14. Compress Nozzle
15. USB Charging Cable
16. C-Type Plug


### Blowing Attachments

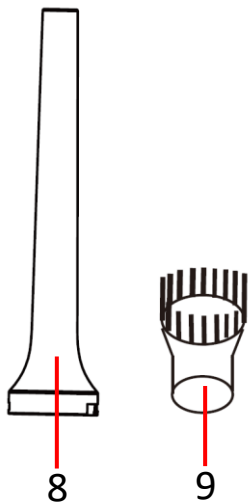


### Vacuuming Attachments

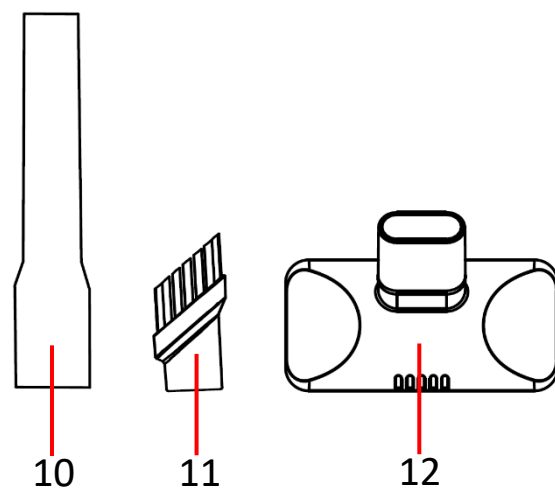


### Inflate Nozzles

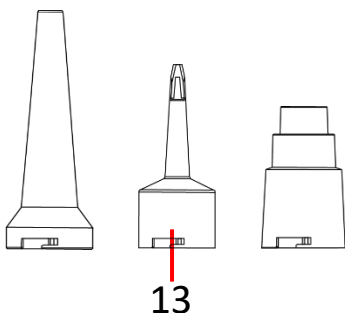

### Compress Nozzle

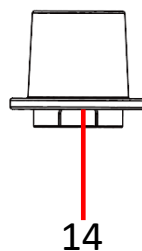

### USB-A to USB-C Cable

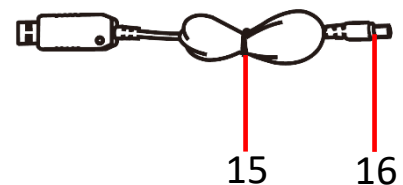

### **Before First Use of Your Car Detailing Kit**


Please read these operating instructions thoroughly and keep them in a safe place for future reference.

Remove all packing materials and discard responsibly.

### **Charging the Internal Battery**


*Before use, please ensure that the internal rechargeable battery is fully charged as follows:*

1. Insert the **C-Type Plug (16)** of the **USB Charging Cable (15)** into the **Charging Port (7)** in the base of the **Handle (6)**.
2. Plug the larger plug of the **USB Charging Cable (15)** into a suitable USB supply capable of supplying a minimum current of 1.5 amp such as a PC, Laptop or dedicated USB supply.
3. The **Charging Port (7)** will illuminate red to show the internal battery is charging.
4. Once the battery is fully charged (in approximately 3-5 hours), the **Charging Port (7)** will light green showing that the internal battery is fully charged and the **USB Charging Cable (15)** can be removed.



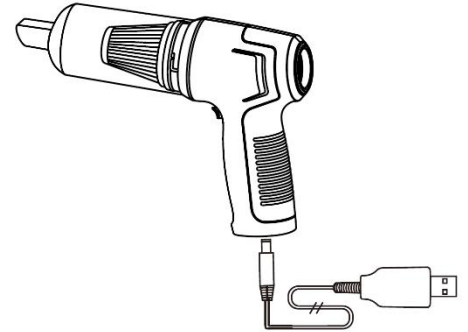


### **Powering Up the Vacuum**

1. Press and hold the **On/Speed Button (4)** for three seconds to start the vacuum in low power mode. The **On/Speed Button (4)** will illuminate green.

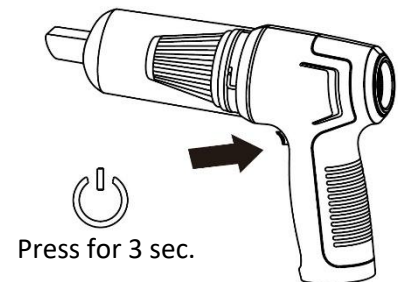

2. Press the **On/Speed Button (4)** briefly to change to the high power mode, the **On/Speed Button (4)** will illuminate red.

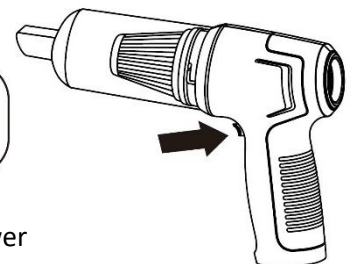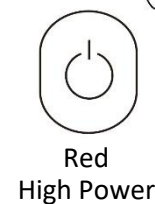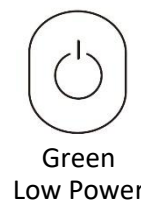


3. Press the **On/Speed Button (4)** briefly again to switch the vacuum off.

## Attaching the Accessories - Vacuuming


### 1. Crevice Tool (10)

Push the **Crevice Tool (10)** onto the **Air Intake (1)** to clean hard to get at areas such as narrow gaps, edges, etc.

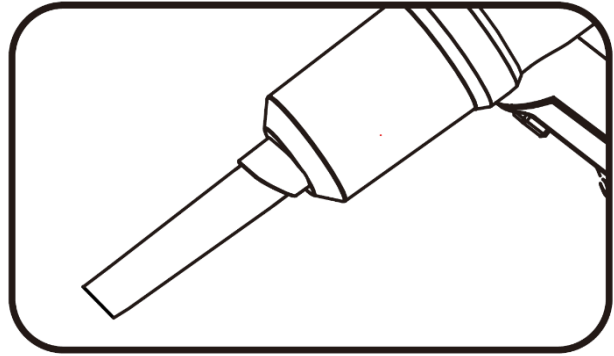


### 2. Brush Tool (11)

If desired, attach the **Brush Tool (11)** either onto the end of the **Crevice Tool (10)** or directly onto the vacuum.

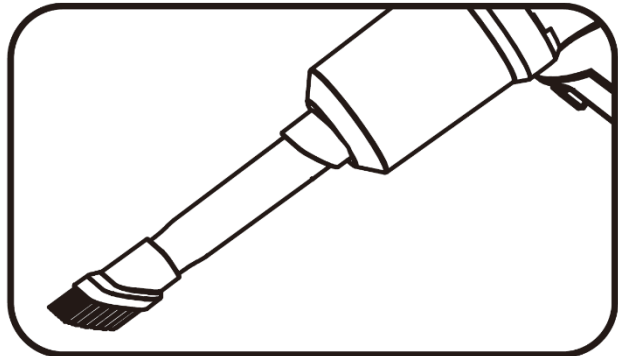

### 3. Upholstery Tool (12)

Attach the **Upholstery Tool (12)** directly to the vacuum to clean seats and other larger flat areas.

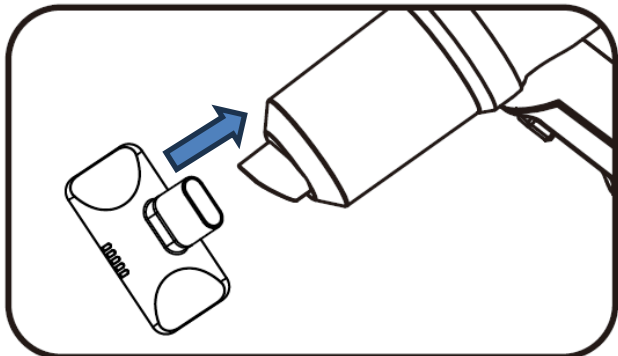


## Attaching the Accessories – Blow Function

### 1. Long Reach Nozzle (8)


Attach the **Long Reach Nozzle (8)** by twisting it onto the back of the vacuum as shown:

*Note: In this case, the Dust Compartment (2) and HEPA Filter (3) have been removed for ease of use and the best performance. See page 11 on how to remove the Dust Compartment and Filter.*

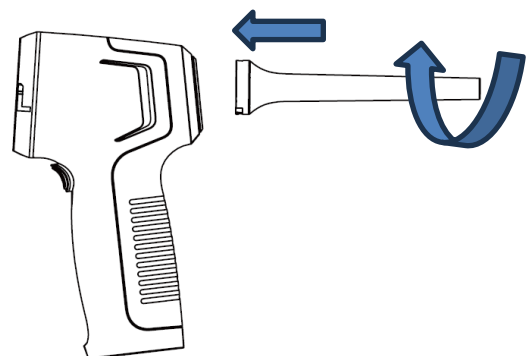

## 2. Long Reach Nozzle Brush (9)


If desired attach the **Long Reach Nozzle Brush (9)** on the end of the nozzle as shown:

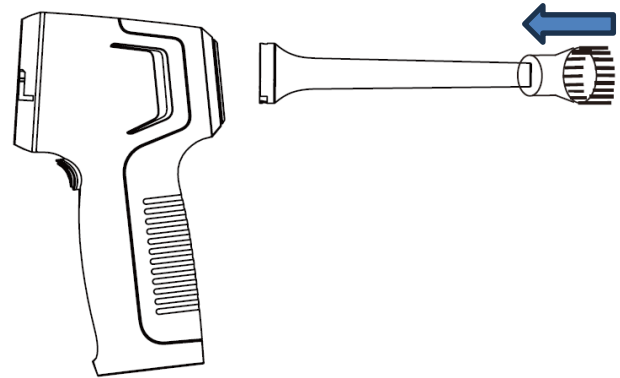

Use the above attachments to blow, brush and clean dust and dirt from Dashboards, Steering Wheels, and other fine cleaning areas.

## Attaching the Accessories – Inflating and Compressing


### Inflate Nozzles (13)

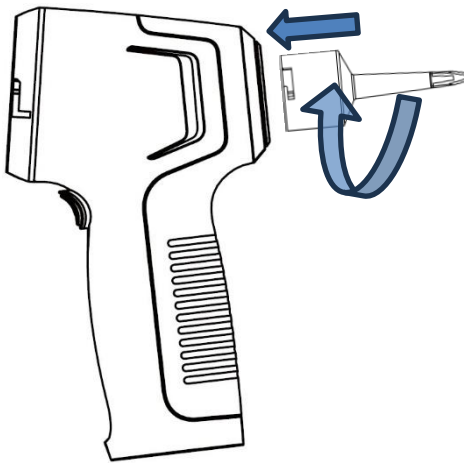

Attach one of the **Inflate Nozzles (13)** appropriate for the item to be inflated. Insert it into the back of the vacuum and by rotating until it locks in place as shown left:

Use these nozzles to inflate Armbands, Airbeds, Beachballs, Balloons, etc.

### Compression Nozzle (14)

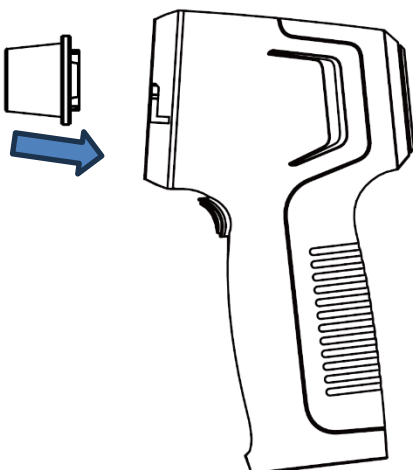


Push the **Compression Nozzle (14)** onto the Dust Compartment side of the vacuum as shown left. Use this nozzle to remove air from household storage bags and similar.

**Note:** To use the Inflation and Compression Nozzles, the Dust Compartment (2) and HEPA Filter (3) have been removed for ease of use and the best performance. See page 11 on how to remove the Dust Compartment and Filter.

### **Care and Maintenance of Your Vacuum**

- Clean outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner in water or any other liquids.
- Empty the **Dust Compartment (2)** as soon as it is full.
- Wash the Filter regularly.
- Allow the Filter to thoroughly dry out for 24 hours before reassembly and reuse.


### **Removing and Emptying the Dust Compartment (2)**

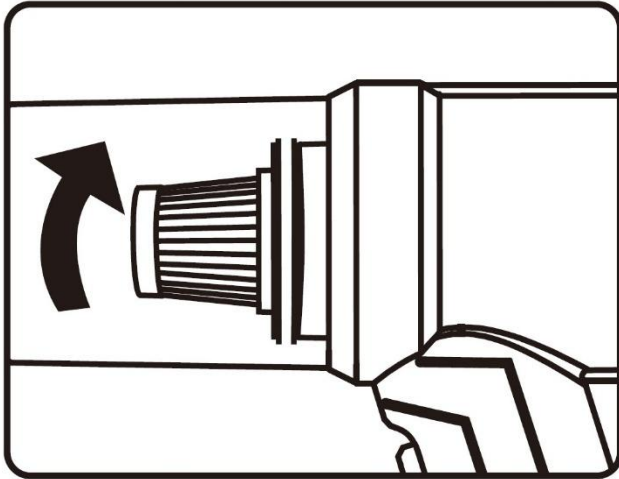

Twist off the **Dust Compartment (2)** in the direction of the arrow shown and remove it from the vacuum.




Remove the **HEPA filter (3)** from the **Dust Compartment (2)**


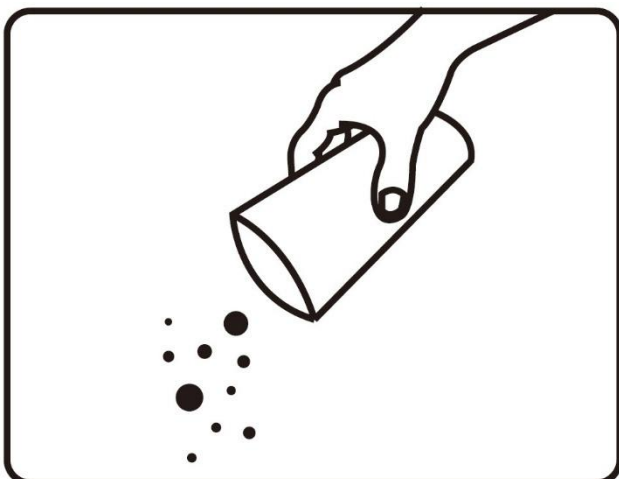


Empty the **Dust Compartment (2)**

### Cleaning the HEPA Filter (3)

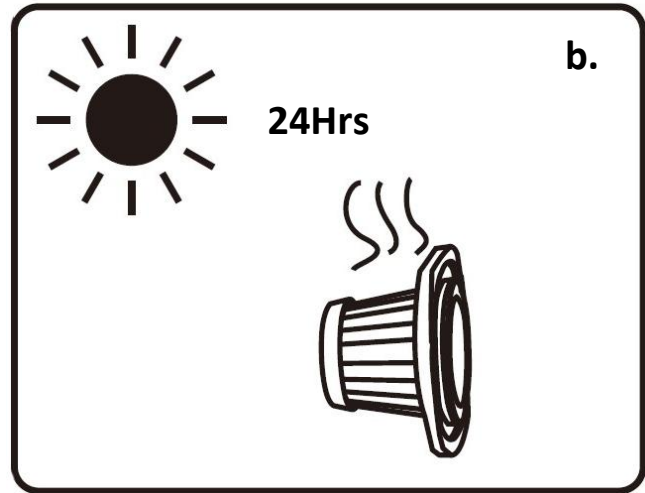

- a. Wash the **HEPA Filter (3)** in warm running water until clean.
- b. Dry the filter for a minimum of 24 hours before refitting it to the **Dust Compartment (2)**. Wipe the **Dust Compartment (2)** clean with a damp cloth and reassemble as shown below:

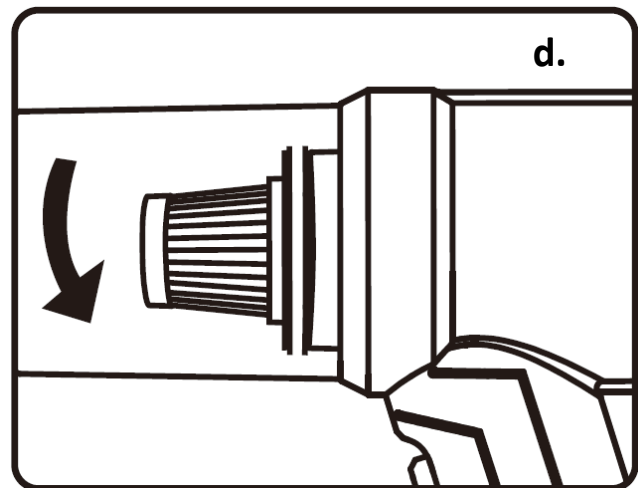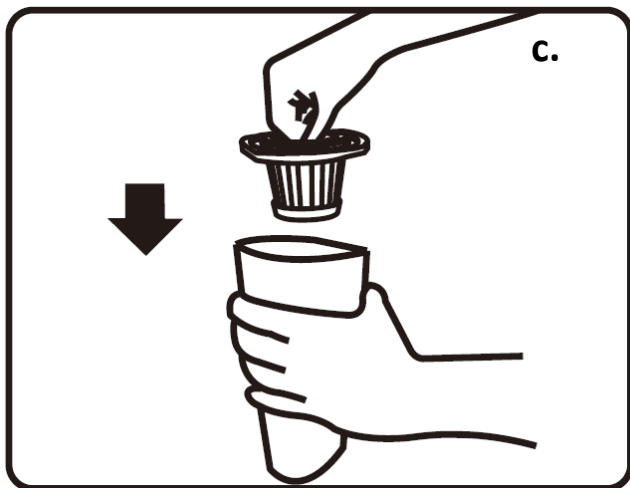

- c. Replace the **HEPA Filter (3)** in the **Dust Compartment (2)**
- d. Reattach the **Dust Compartment (2)** to the vacuum by twisting it back on in the direction of the arrow shown.

**WARNING:** Do not under any circumstances use the vacuum without the filter fitted as permanent damage may occur to the appliance.

## **Technical Specification**

Model Number	FLR00224
Charge Input Rating	5.0V DC 1.5A
Vacuum Rating	7.4V 120W
Battery	2500mAh Li-Ion (2x 3.7V Batteries)
Tank Capacity Clean/Dirty	170ml
Running Time	10 – 20 Minutes
Charging Time	3 – 5Hours
Charging Port Type	C – Type
Vacuum Level	9Kpa (low) 15Kpa (high)
Noise Level	≤78dBA
Unpacked Weight (approx.)	400g
Dimensions (approx.)	18.7cm (d) x 6.6cm (w) x 23.3cm (h)

## **Troubleshooting Guide**

Problem	Possible Cause	Solution
No Power	Battery Flat.	Recharge the internal Battery.
Low suction or poor pick-up.	HEPA Filter is clogged.	Check and clean the filter.
Battery Not Charging	Wrong Charger being used	Charge using a suitable USB supply only.
	Faulty USB Cable	Replace the USB Cable with new.

## **Recycling Information**


### **Disposal of the Packaging**

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.


Dispose of non-recyclable plastics in the appropriate plastics collection service.

### **Disposal of the Product**

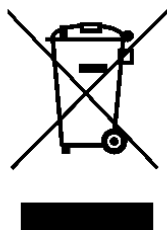

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeireland.ie](http://www.weeeireland.ie) enter your postcode to find out your nearest recycling site.

## Disposal of Batteries

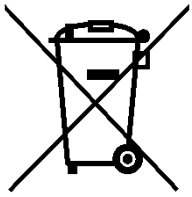



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!  
As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.

### ***Customer Support***

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: [help@daewooelectricals.com](mailto:help@daewooelectricals.com).

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

**UK  
CA**

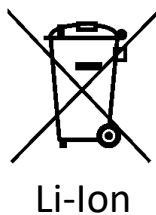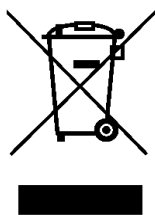

Li-Ion



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo product.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at:*

**<https://help.daewooelectricals.com>**

**or**

**[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)**

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.  
Produced and imported under licence by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)