


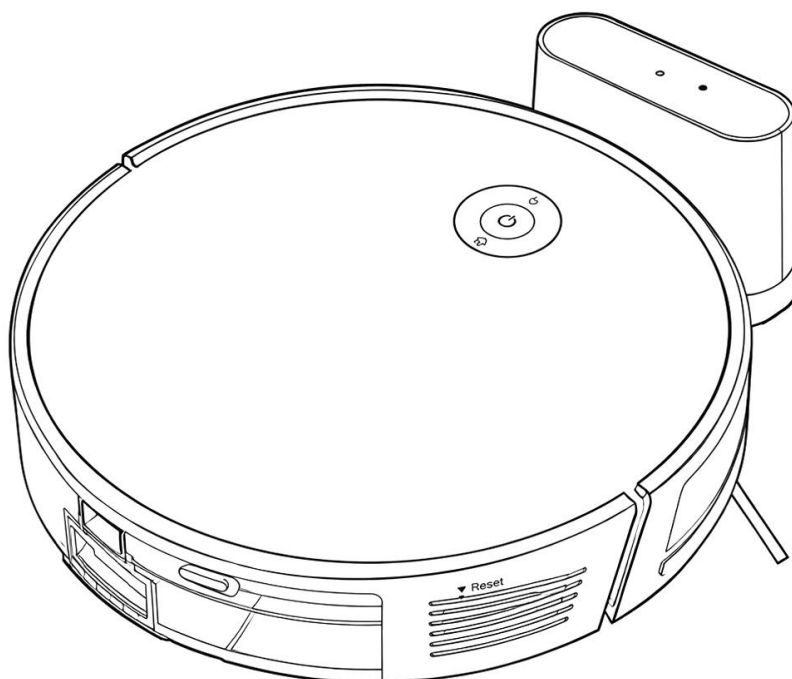

Cyclone Freedom Robotic Vacuum Cleaner

FLR00277



Page No.

2	Contents
3	Getting Started
3-4	Safety Advice
5	Description of Symbols
6	What's in the Box
7	Description of Parts
8	Description of Controls, etc.
9	Description of Remote Control
10	Before Using the Robot Vacuum
11	Remove the Protective Packaging
11-12	Charging the Battery
12-17	Using the Robot Vacuum – Remote Control
18-27	Using the Robot Vacuum – Smart App
28-30	Using the Robot Vacuum – Mopping
31	Emptying the Dust Compartment
32-37	Care and Cleaning
38-39	The Remote Control
40	Specification
41	Troubleshooting
42	Recycling
43-44	Removing the Battery from the Robot Vacuum
45	Customer Support
46	Safety Markings
47	Statement of Compliance
48	Warranty Information


- Check that the product is intact and undamaged and all parts are present.
- Dispose of packaging materials responsibly.
- No tools are required, but some assembly of your Vacuum is required.

Safety Advice

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to


- ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the Charger by the electrical cord.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- Never use the appliance without the filter in place.
- **DO NOT** use the Vacuum without the Dust Compartment fitted.
- **DO NOT** vacuum any large or broken objects such as glass.
- **DO NOT** vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.

The following symbols or words are used in this instruction manual:



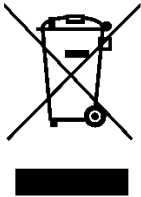
	Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements
	Products labelled with this symbol conform to applicable provisions of the European Economic Area.
	This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.
	You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.
	This symbol indicates that this product conforms to the Radio Equipment Directive 2014/53/EU (RED).
	This symbol indicates that the battery charger uses an alternating current mains supply.
	This symbol indicates that the vacuum cleaner uses Direct Current mains supply.

What's in the Box


- Robot Vacuum
- Charging Dock
- Charger
- Side Brushes
- Cleaning Brush
- Mop Bracket Assembly
- Remote Control
- User Manual (This Booklet)

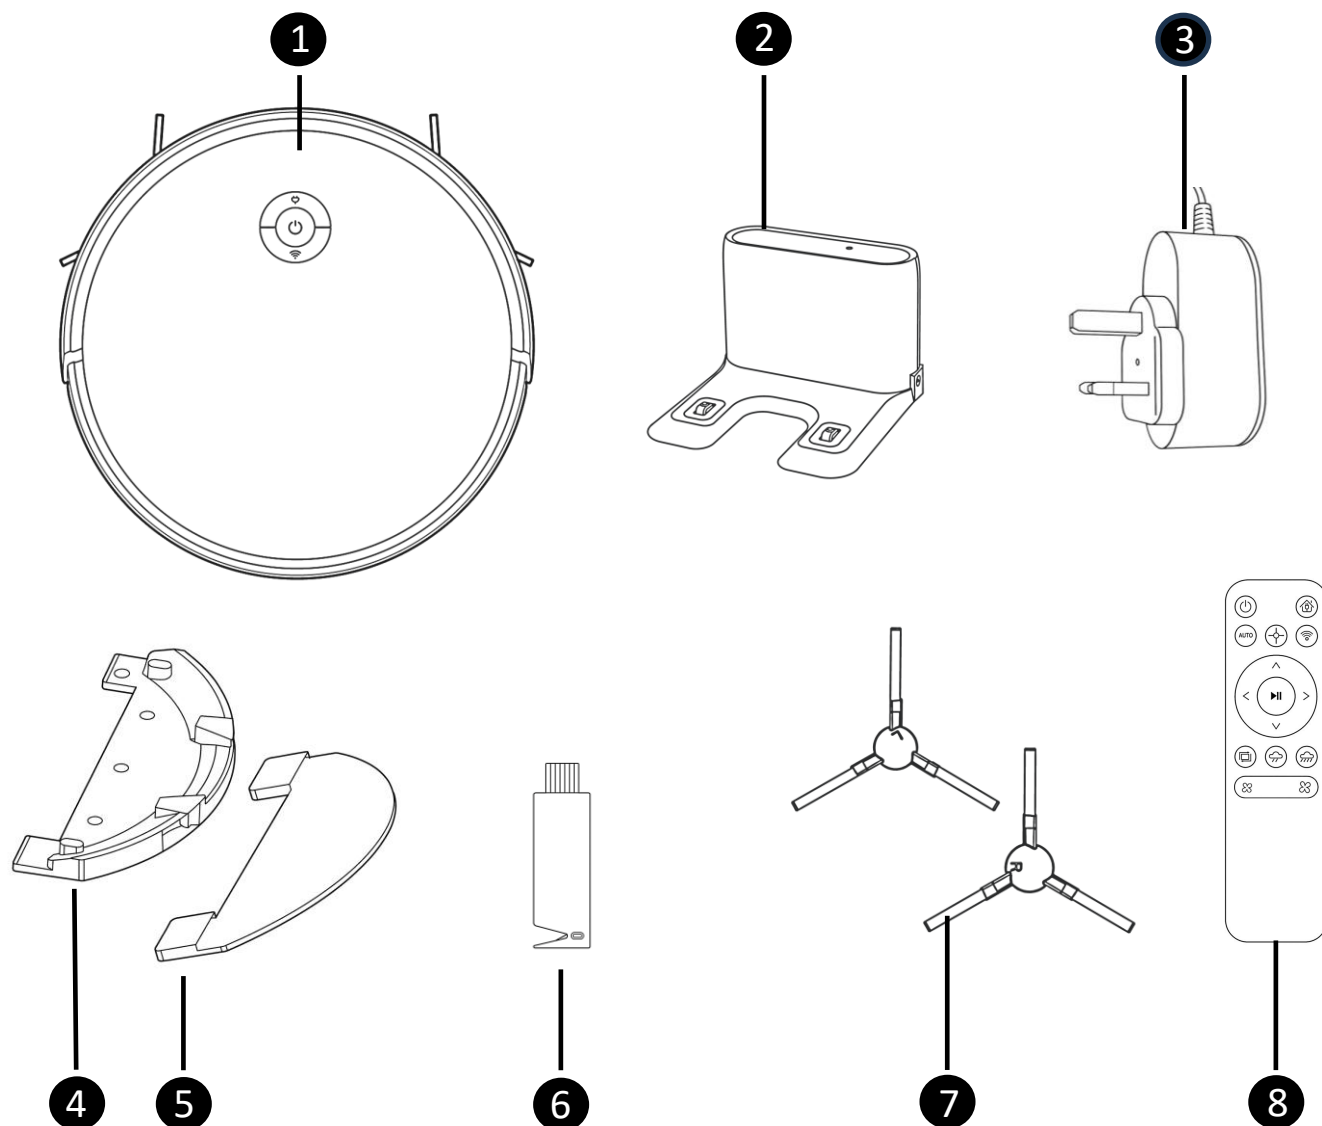


1. Robot Vacuum
2. Charging Dock
3. Charger
4. Mop Bracket
5. Mop Pad
6. Cleaning Brush
7. Side Brushes (x2)
8. Remote Control



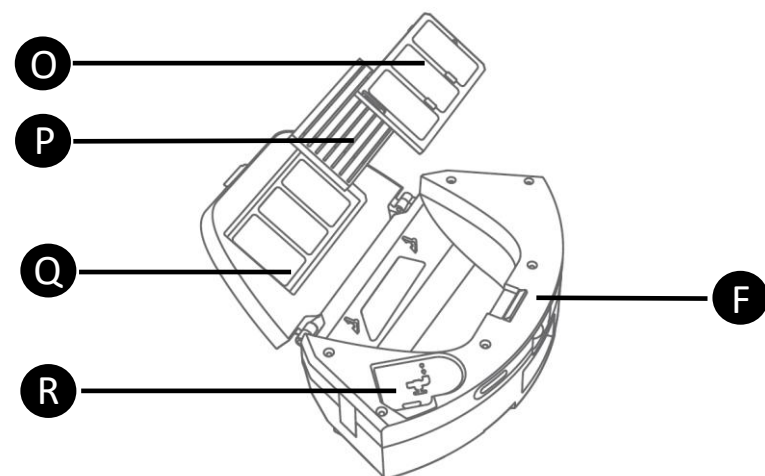
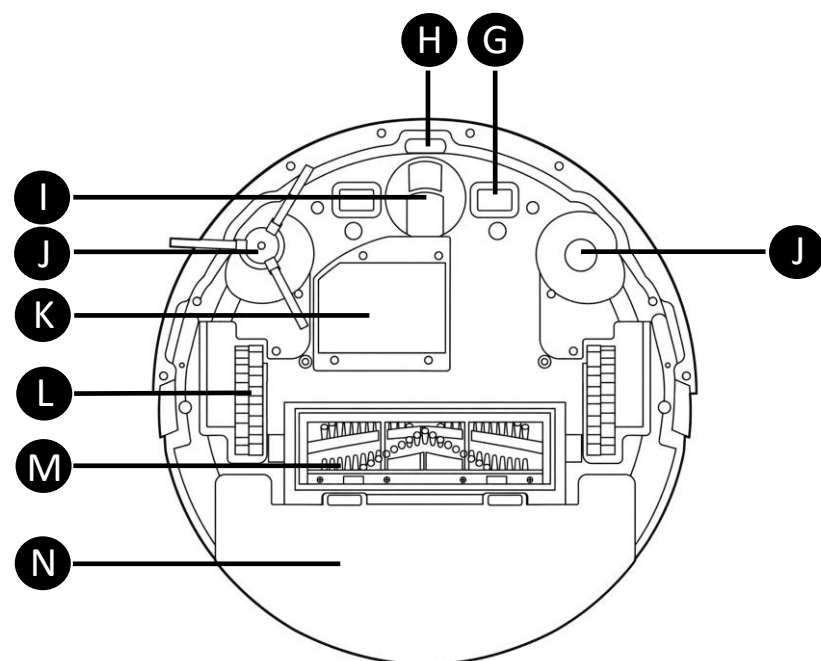
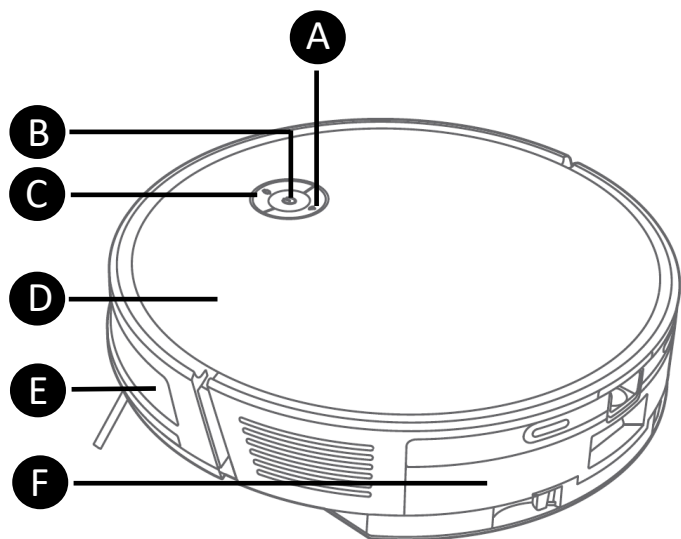



- A. Wi-Fi Button
- B. Power On/Off Button
- C. Charge Button
- D. Cover
- E. Omnidirectional Lens
- F. Dust Compartment/Water Tank
- G. Charging Contacts
- H. Anti Falling Sensor(s)
- I. Universal Wheel
- J. Side Brush Spindles
- K. Battery
- L. Driving Wheels (x2)
- M. Floor Brush
- N. Mop (If fitted)
- O. Filter Holder
- P. HEPA Filter
- Q. Dust Compartment Lid
- R. Water Fill Port
- S. Dock Power Indicator
- T. Charging Port

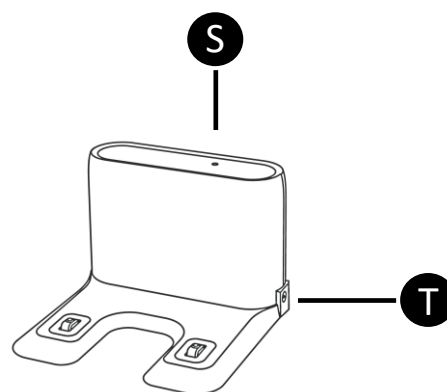

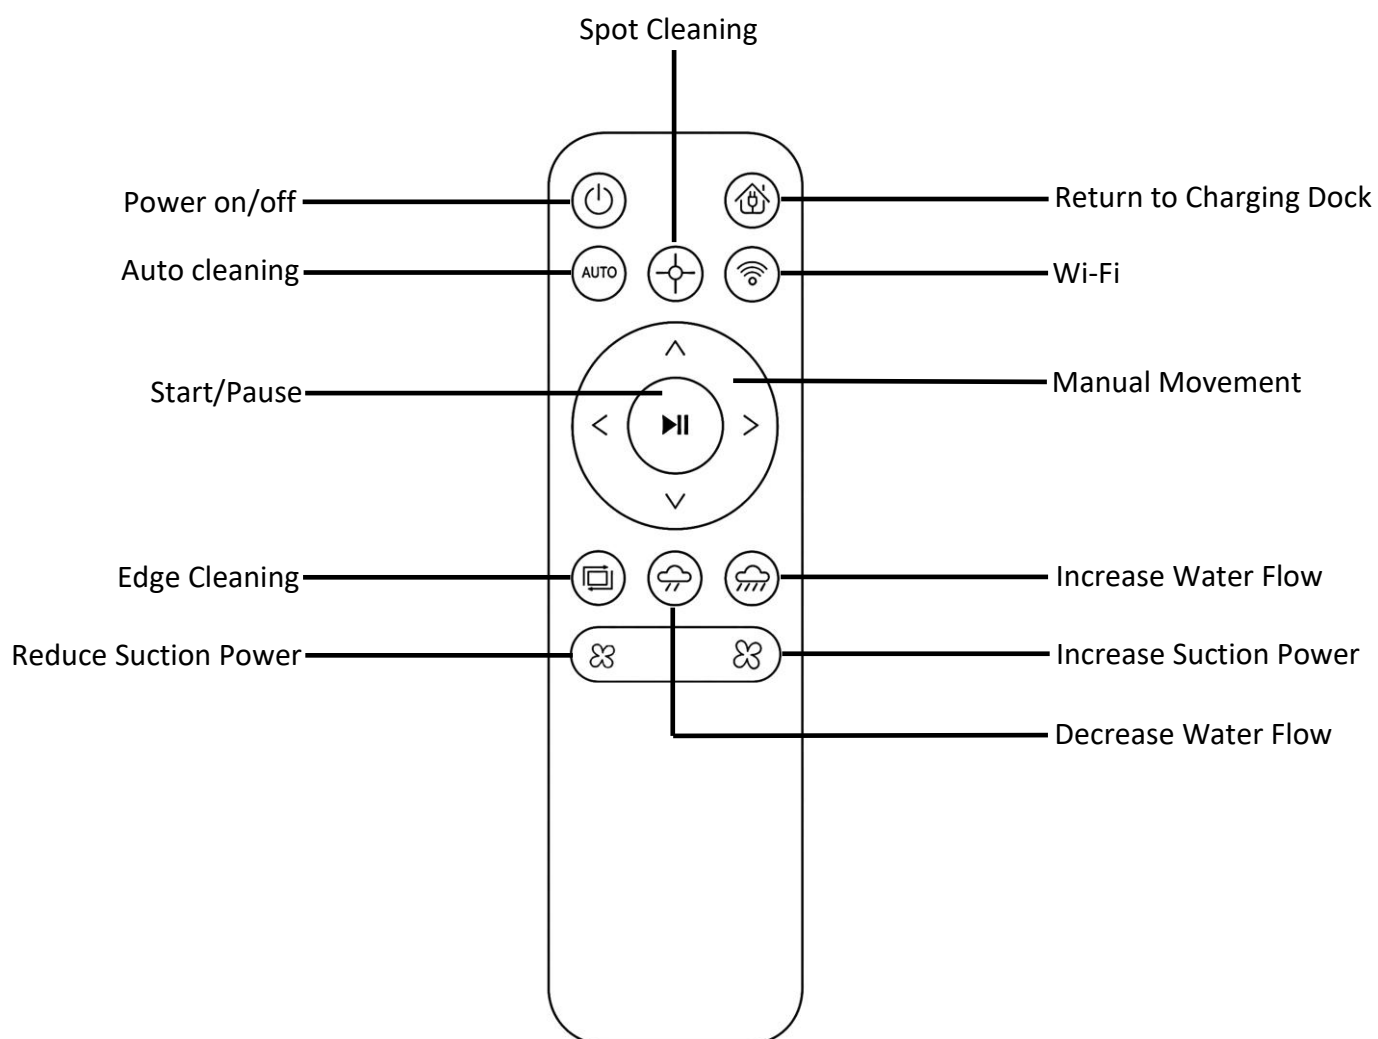

1. Before using the robot vacuum cleaner, remove wires and other objects lying on the floor such as the area around TVs, Game Consoles, etc. to avoid the vacuum being entangled and trapped.
2. Remove unstable, fragile, valuable or potentially dangerous items so that they are not entangled, jammed, dragged, or knocked over by the vacuum; otherwise, damage may result.
3. Do not use the vacuum in wet areas to avoid permanent damage to the vacuum cleaner.
4. Do not use the vacuum where it can fall i.e. top of the stairs.

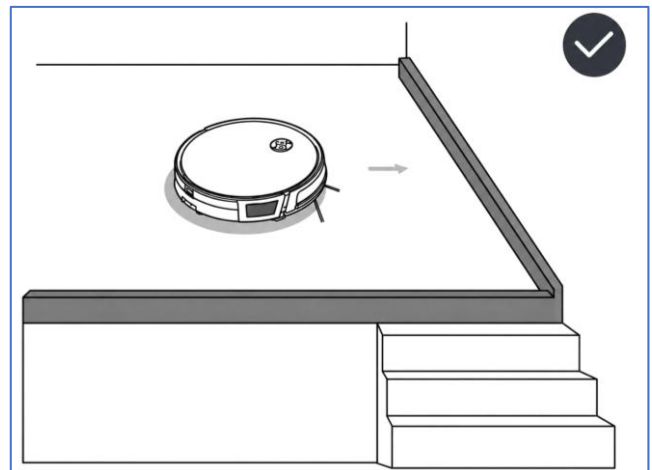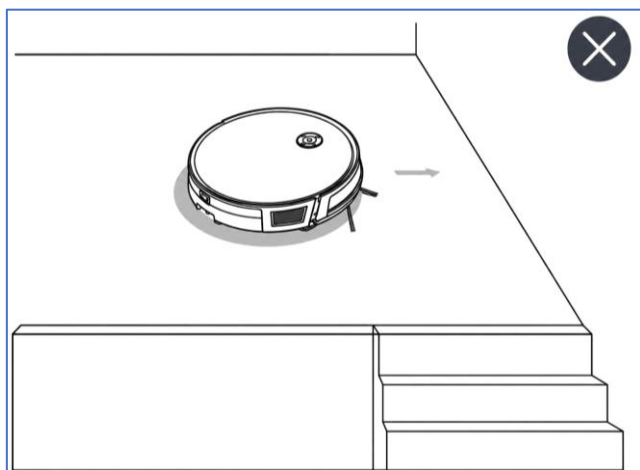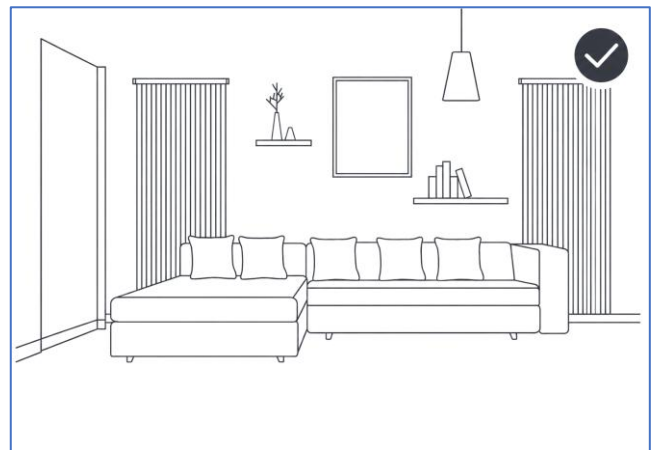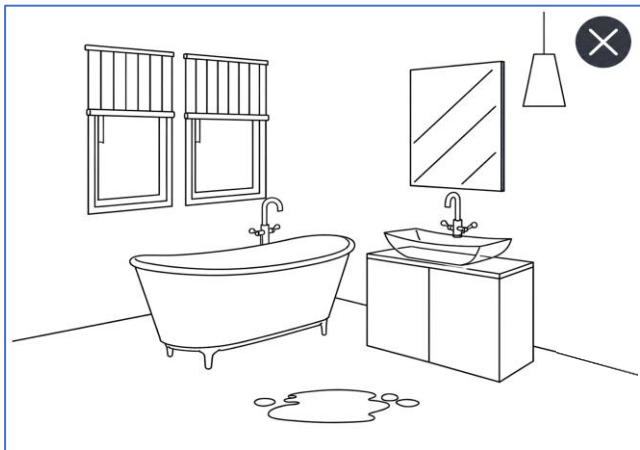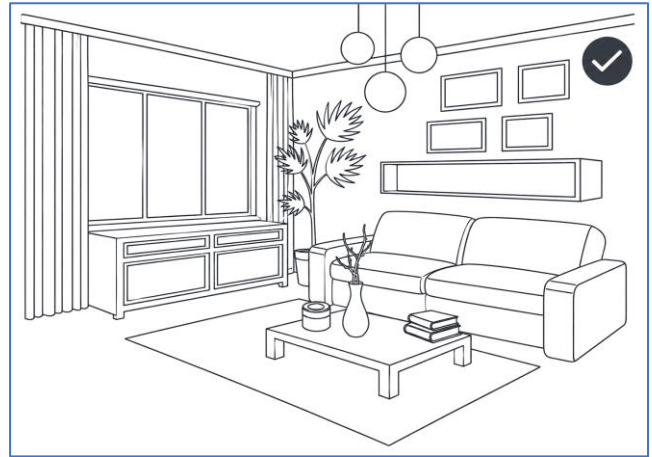


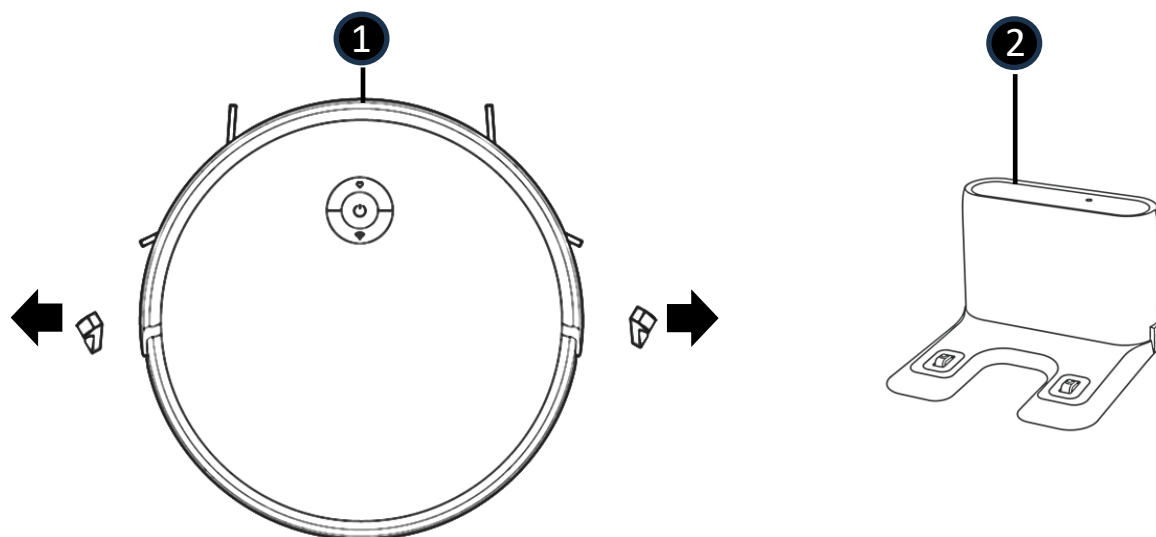


Before use, remove the packaging strips from the **Robot Vacuum** (1) and the protective film from the **Charging Dock** (2).

Charging the Battery

Step 1

Place the **Charging Dock** (2) on flat ground against the wall. Do not place any articles 0.5m to the left or right of the charging station or 1.5m in front. Insert the small plug into the **Charging Port** (T). Insert the **Charger** (3) into the nearest mains socket. The **Power Indicator** (S) will illuminate. **NB** the **Charging Dock** (2) must be powered continuously during use.

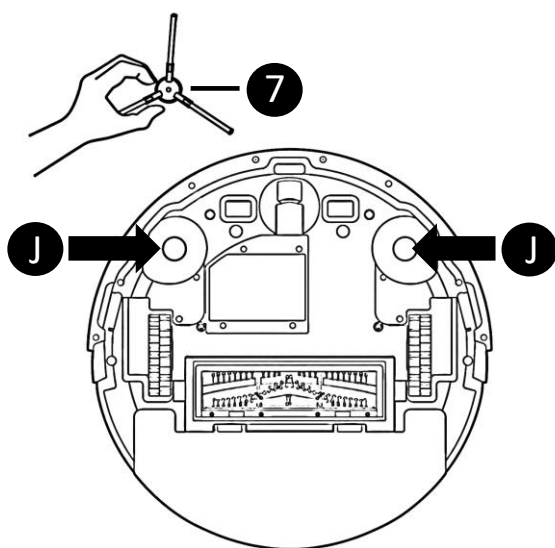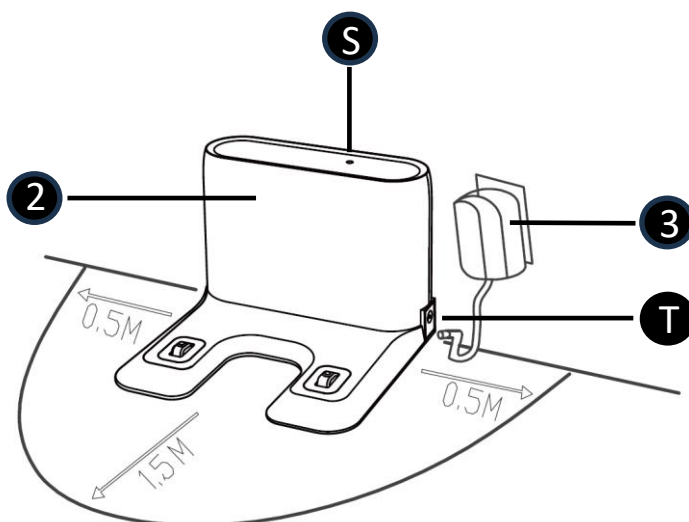

Step 2

Push the two **Side Brushes** (7) onto the two **Side Brush Spindles** (J - arrowed) on the underside of the Robot Vacuum.

Step 3

Place the **Robot Vacuum** (1) onto the **Charging Dock** (2) as shown.


The **Power Button** (B) will illuminate and the **Charge Button** (C) will slowly flash multicolours to show the vacuum is charging. Once the indicator stops flashing to a solid blue, the battery is fully charged and the vacuum is ready to use.

NB Do not use the **Charging Dock** (2) in direct sunlight or near mirrors which could cause reflections.

It is recommended to fully charge the vacuum before each use to maximise the life of the unit.

The charging time is approximately five hours.

IMPORTANT Only use the Charger supplied with the product, using any other charger may result in permanent damage to the cleaner and could invalidate your warranty.

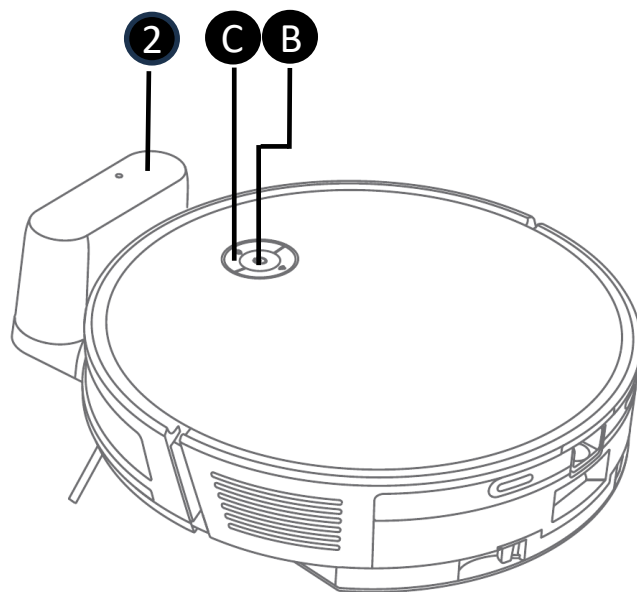

Using the Robot Vacuum – Remote Control


NB Do Not attach the **Mop Bracket** (4) and **Mop Pad** (5) at this stage.

Auto Cleaning

In Auto Cleaning the vacuum will clean the floor in a zig zag pattern avoiding household objects as it cleans.

Step 1



Briefly press the **Power On/Off Button** (B) or the **Power On/Off** on the **Remote Control** (8) to power up the vacuum.

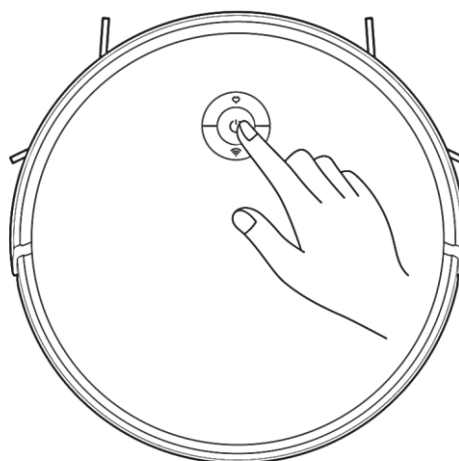

NB If the unit is in the off state or not on the **Charging Dock** (2) (i.e. no indicators lit) press the **Power Button** (B) for 2-3 seconds first to power up the vacuum.

Step 2

Press the **Auto** Button on the **Remote Control** (8).
The Robot Vacuum will now clean the floor in a Zig Zag pattern as shown below:

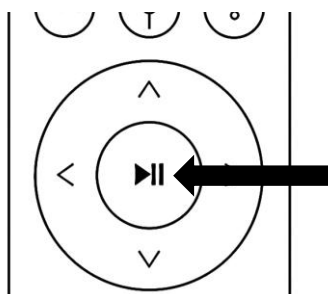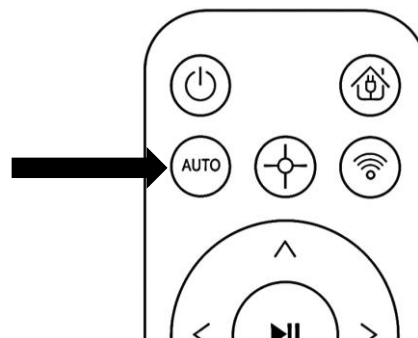


Step 3

If desired, press the **Start/Pause** Button on the **Remote Control** (8) to start and pause vacuuming.

Step 4

Once the cleaning is finished, briefly press the **Power On/Off Button** (B) or the **Power On/Off** on the **Remote Control** (8) to power the vacuum down.

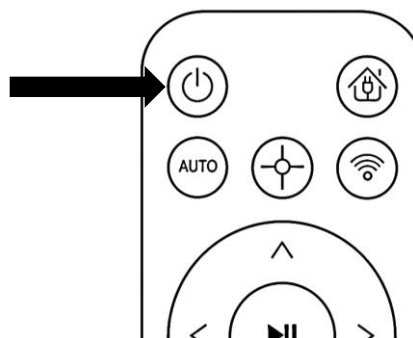


Spot Cleaning


In Spot Cleaning mode the vacuum will clean the floor in a spiral pattern avoiding household objects as it cleans.

Step 1

Briefly press the **Power On/Off Button (B)** or the **Power On/Off** on the **Remote Control (8)** to power up the vacuum.

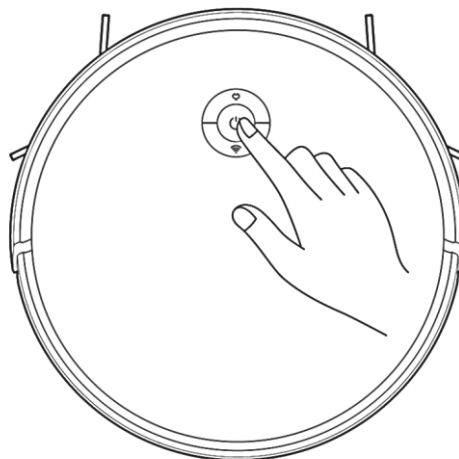

NB If the unit is in the off state or not on the **Charging Dock (2)** (i.e. no indicators lit) press the **Power Button (B)** for 2-3 seconds first to power up the vacuum.

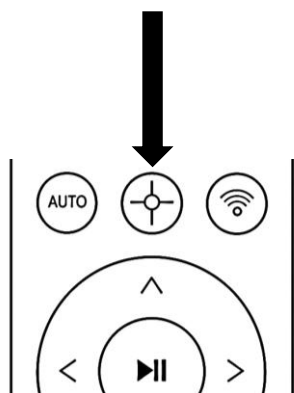


Step 2

Press the **Spot Cleaning Button** on the **Remote Control (8)**.

The Robot Vacuum will now clean the floor in a Spiral pattern working from the centre outwards as shown below:



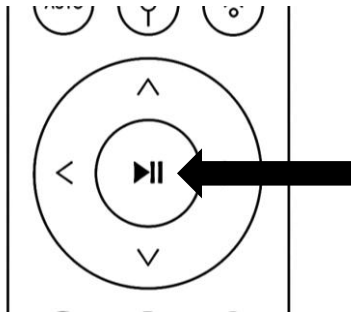


Step 3

If desired, press the **Start/Pause** Button on the **Remote Control (8)** to start and pause vacuuming.

Step 4

Once the cleaning is finished, briefly press the **Power On/Off Button (B)** or the **Power On/Off** on the **Remote Control (8)** to power the vacuum down.

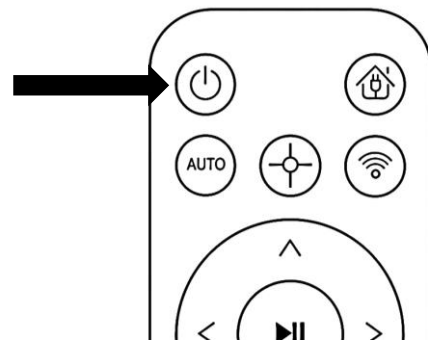


Edge Cleaning


In Edge Cleaning mode the vacuum will clean the floor around the edges against the skirting boards, cupboards, etc.

Step 1

Briefly press the **Power On/Off Button (B)** or the **Power On/Off** on the **Remote Control (8)** to power up the vacuum.

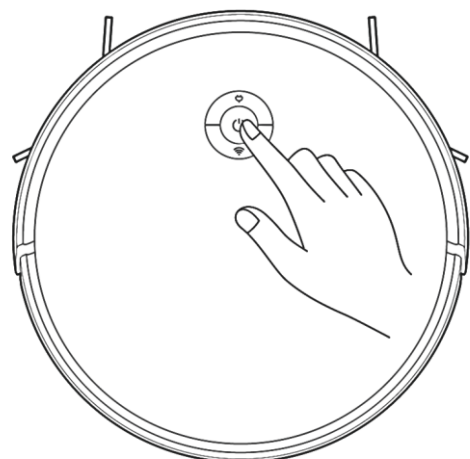


NB If the unit is in the off state or not on the **Charging Dock (2)** (i.e. no indicators lit) press the **Power Button (B)** for 2-3 seconds first to power up the vacuum.

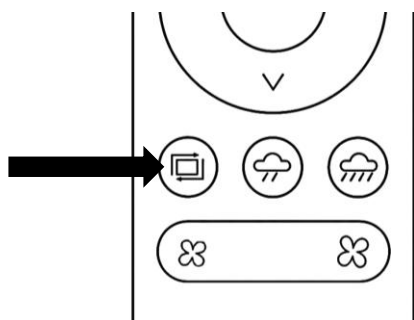

Step 2


Press the **Edge Cleaning** Button on the **Remote Control** (8).

The Robot Vacuum will now clean the floor around the edges of the room in a pattern shown below:

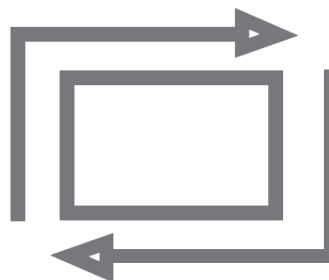


Step 3

If desired, press the **Start/Pause** Button on the **Remote Control** (8) to start and pause vacuuming.

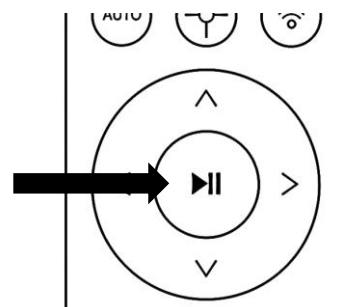

Step 4


Once the cleaning is finished, briefly press the **Power On/Off Button** (B) or the **Power On/Off** on the **Remote Control** (8) to power the vacuum down.

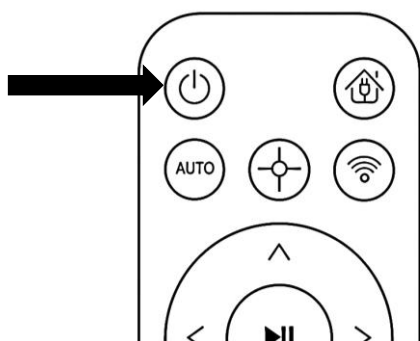

Adjusting the vacuum suction level

To lower the vacuum suction, press the 'Reduce Suction Power' button on the **Remote Control** (8).

To increase the vacuum suction, press the 'Increase Suction Power' button on the **Remote Control** (8).

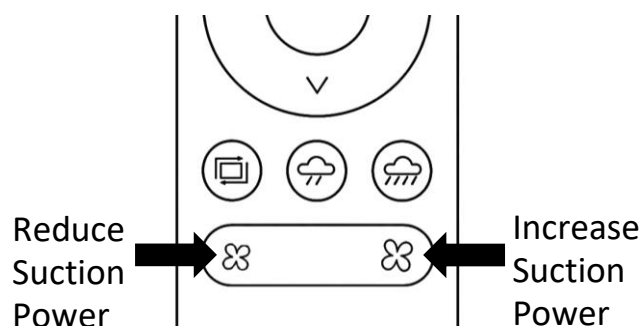

Initial Set Up

First, install the Smart Life app on your phone by scanning the QR code right.

Alternatively, the App can be installed by searching for the “Smart Life” App in the APP store or Google Play store.

Ensure your Wi-Fi router is switched on and your phone is connected to your home Wi-Fi network. Enable Bluetooth mode on your phone also as this is used during the installation.


Ensure the Wi-Fi frequency is 2.4Ghz before connecting.



Downloading the App

Select the country from the drop down menu.

Tap ‘Download’ to download the App.

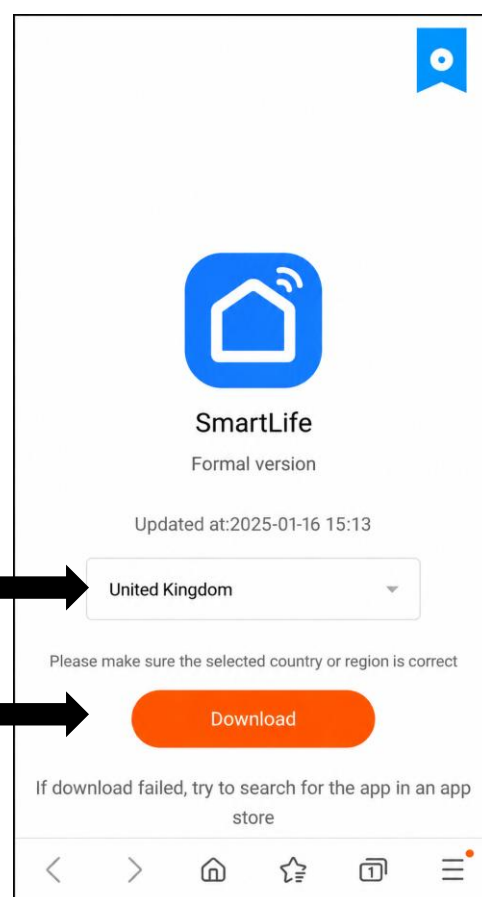


Creating an Account

Step 1

Select 'Sign Up'. Using your mobile phone number or email to register an account. Make up a suitable password for the account.

Step 2

You will be sent a verification code via your email or phone text depending on which you logged on with. Enter the verification code to enter the App.

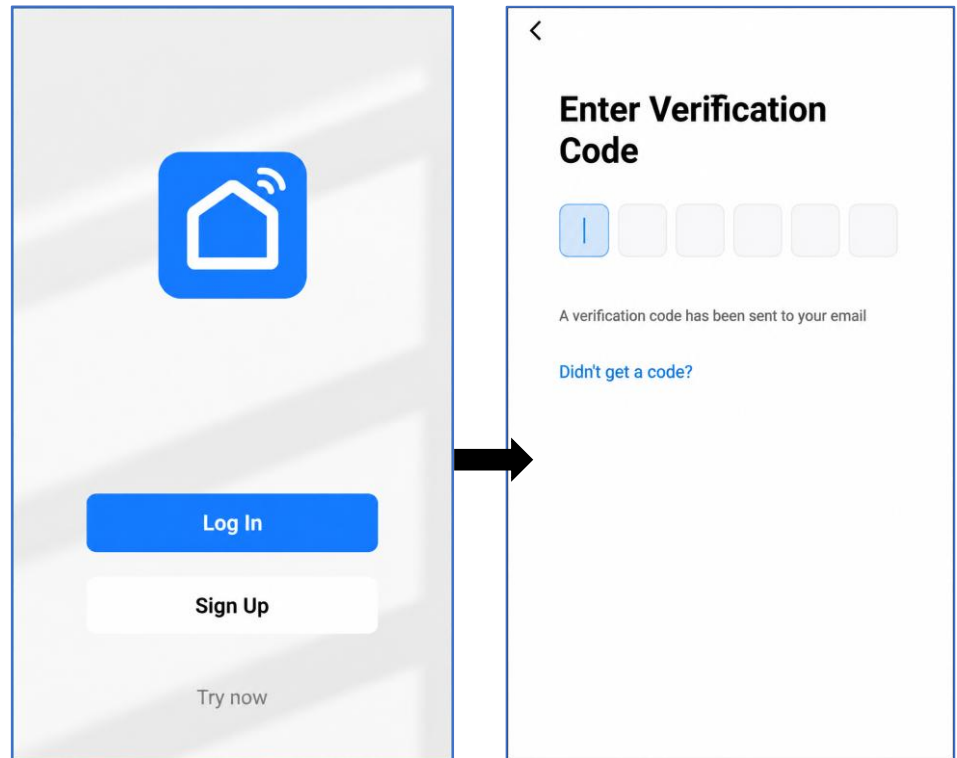


Step 3

Press and hold **Wi-Fi Button (A)** on the main unit or the **Wi-Fi button** on the Remote Control until the Wi-Fi button on the main unit flashes slowly.

Step 4

Touch the APP '+' key and select 'Add Device'.

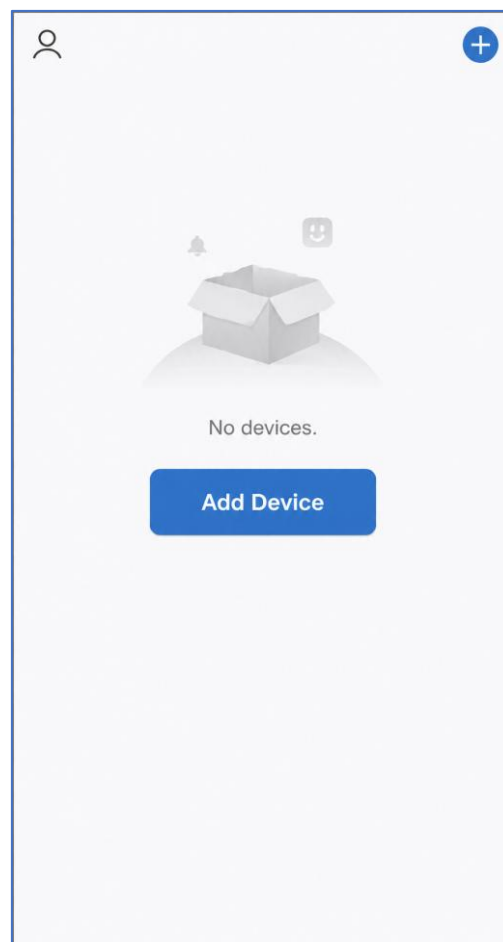


Step 5

The phone will now scan for nearby Wi-Fi devices.


Step 6

Tap to select the "DAEWOO SMARTNAV" found in the scan.

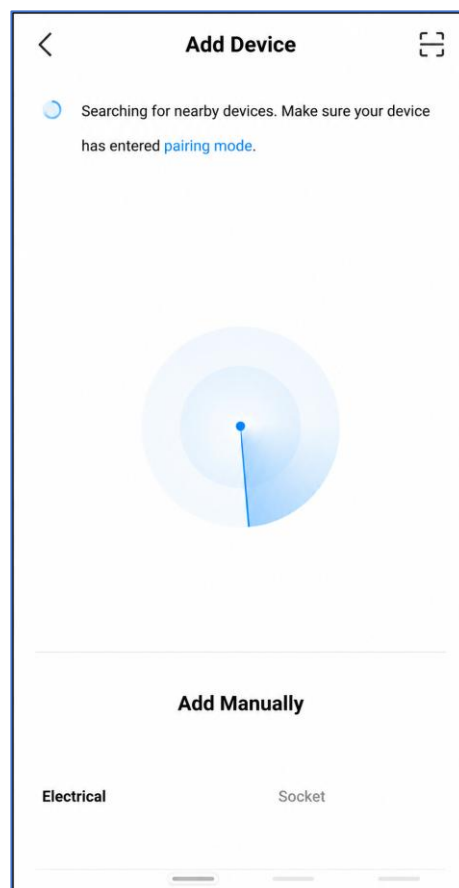

Step 7

Tap 'Done' to continue with the installation.

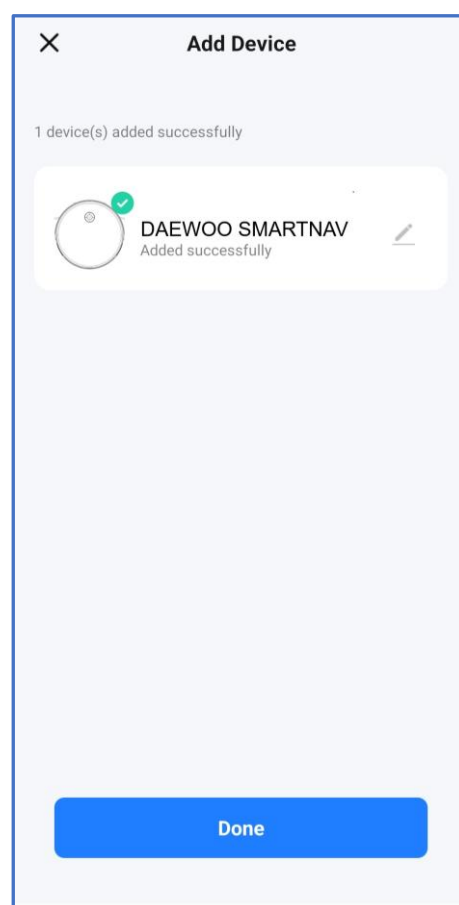


Step 8

You will be asked to input the Wi-Fi network and password once more then touch 'Next'.

Step 9


Touch 'Done' to complete the automatic installation.

Alternatively select 'Add Manually' choose robotic vacuum cleaner (Wi-Fi) in small home appliances and follow the instructions on the phone screen.

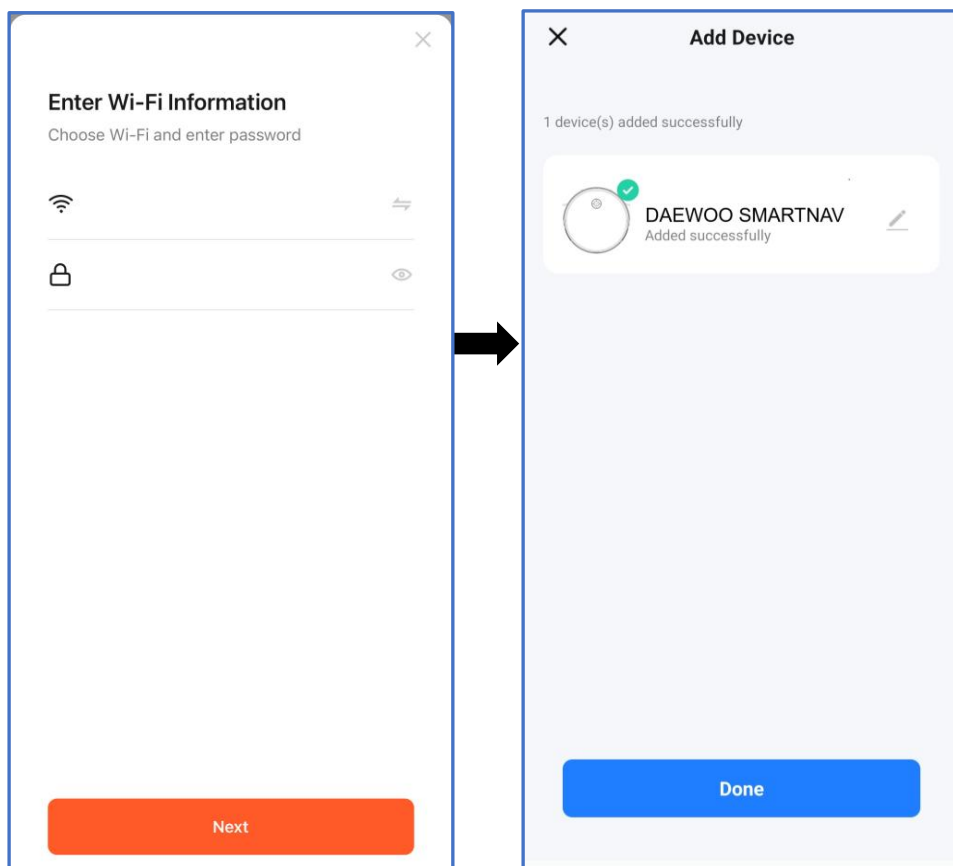

Step 10


Right: The main page of the software. Tap where the arrow is to enter the Smart App.

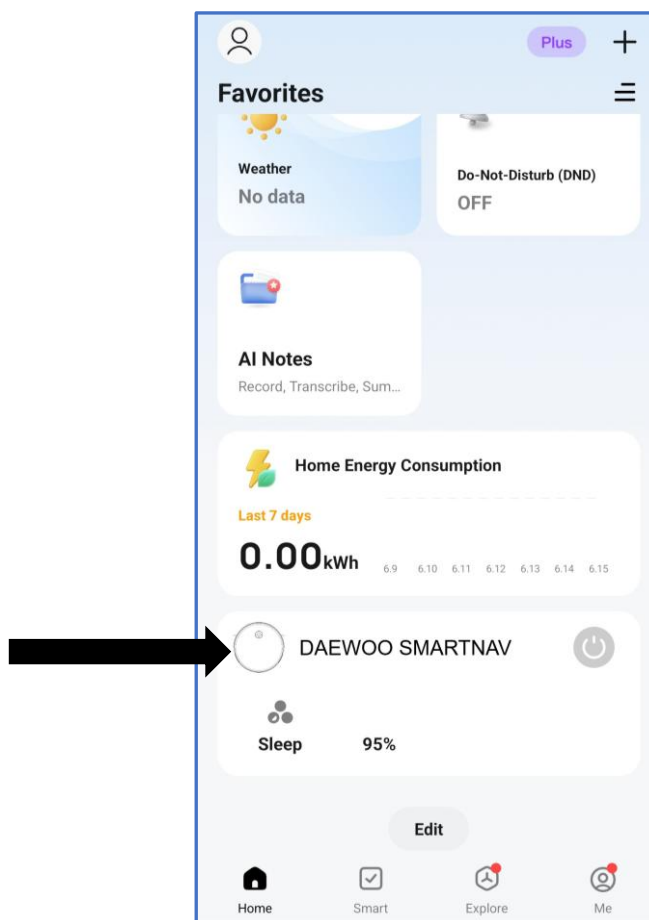

Using the Robot Vacuum – Smart App

Step 11


Follow the below steps to explain each function:

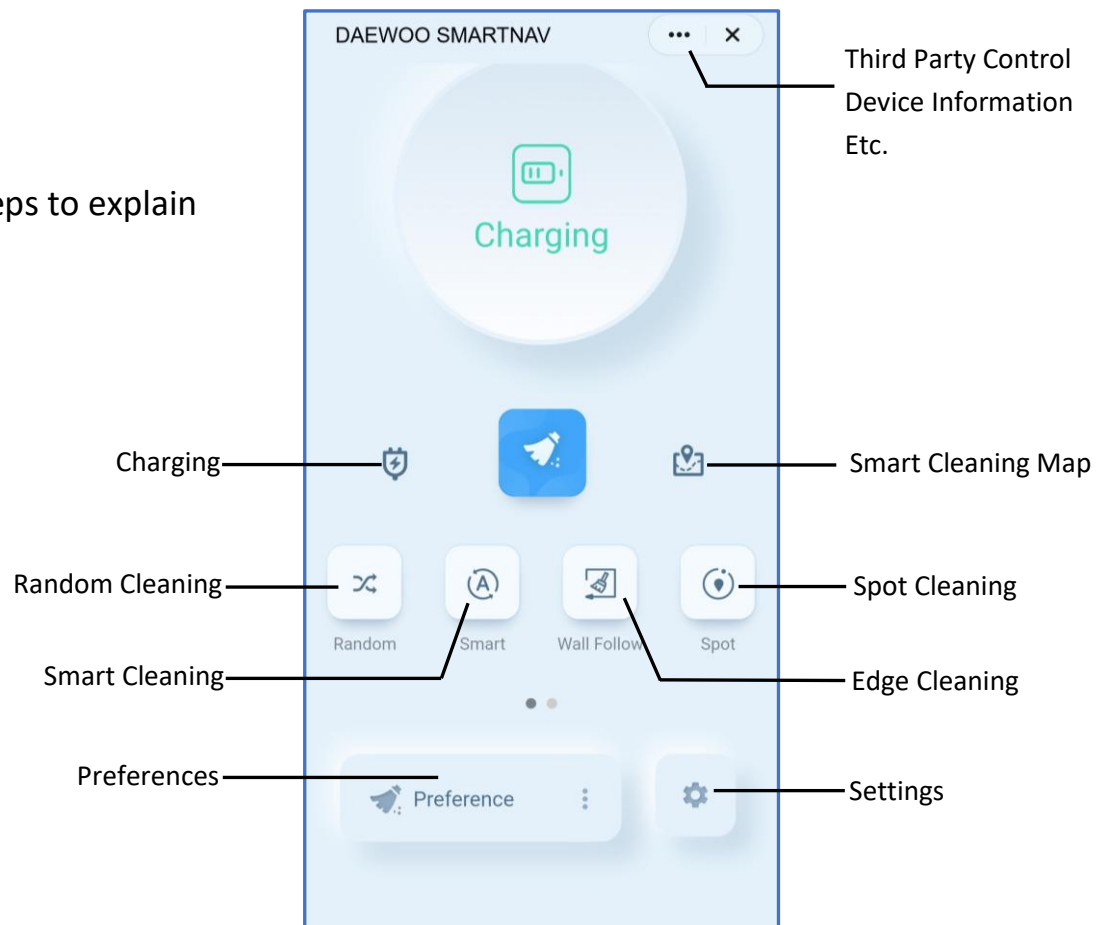

App Functions Explained



Tap 'Charging' to call the robot vacuum back to the **Charging Dock** (2) to recharge the **Battery** (K). The large round Charging Icon will show current state of the vacuum i.e. Charging, Paused, etc.

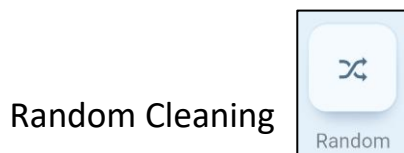


Tap 'Random' to enable the vacuum to clean the floor randomly.

Smart Cleaning




Smart Cleaning allows the robot vacuum to track its cleaning path whilst cleaning. Using its internal sensors the robot will know which areas it has already cleaned.

 Smart Cleaning Map



The Smart Cleaning Map (example right) displays the cleaning path generated during Smart Cleaning above, it shows which areas have been cleaned.

NB the red dot is the location of the vacuum on the map.

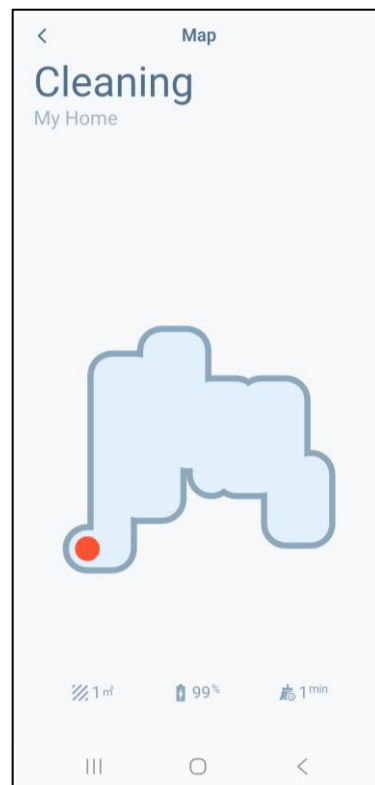

Spot Cleaning



Tap 'Spot' to enable the robot vacuum to clean the floor in a spiral pattern.

Edge Cleaning




Tap 'Wall Follow' to enable the robot vacuum to clean around the edges of the room against the wall.

Preference



Tap Preference to alter the preferred suction levels during vacuuming and the quantity of water used during mopping:

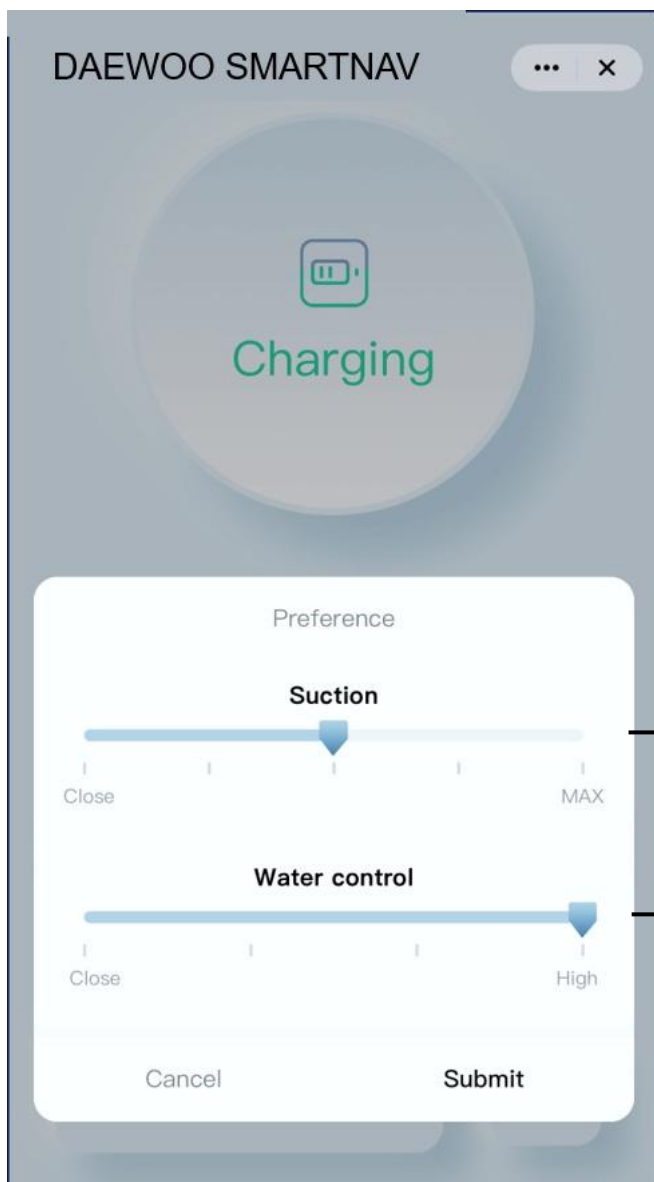

Slide the Suction bar left and right to adjust the suction level. Press Submit to select the suction level selected.


Slide the Water Control bar left and right to adjust the amount of water used during mopping. Press Submit to select the Water Control level selected.

NB the Mop Bracket (4) and Mop Pad (5) must be fitted to enable the mopping function.

Settings



Tap settings to check the Cleaning Record, select area units m² or ft², set Schedules and other settings as below:

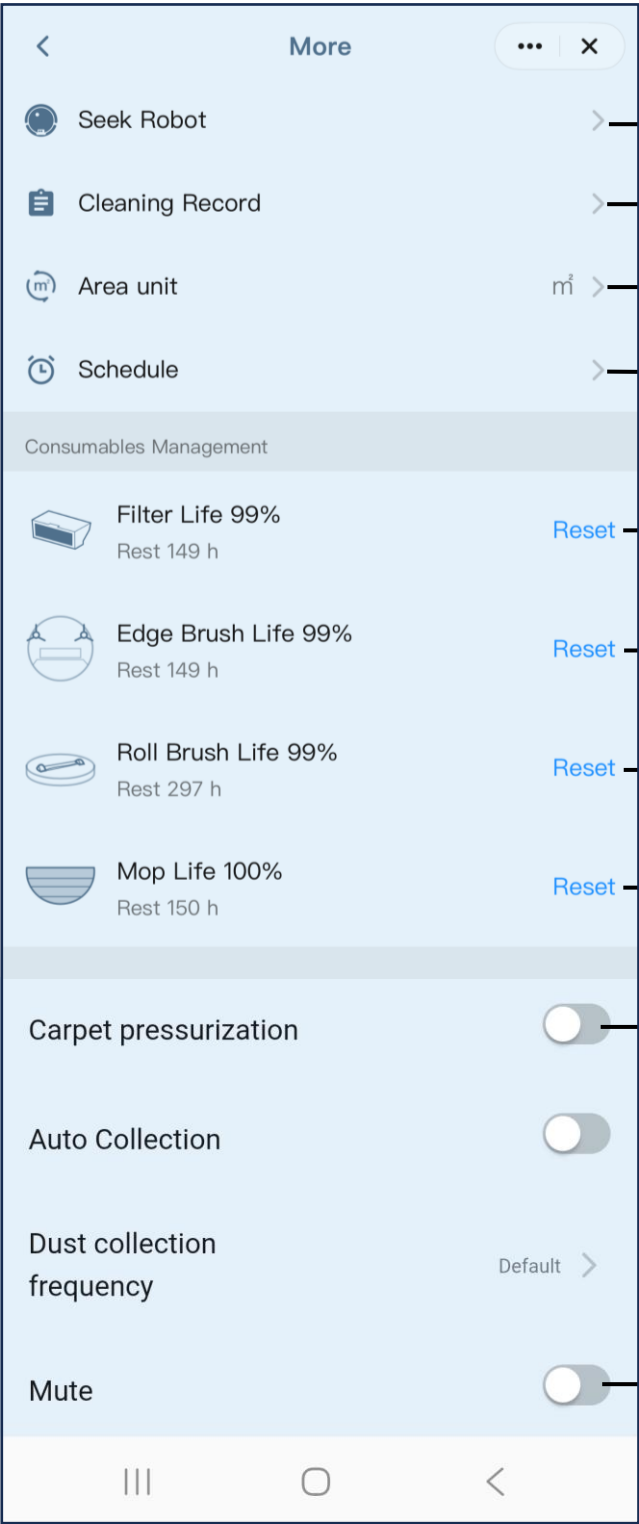

Select and the robot vacuum will call out where it currently is located.

Select to display cleaning records.

Select to change the units of measure.

Select to set a cleaning schedule – see below.

This shows the how many hours of use the HEPA filter (P) has before replacement is required. At 0h replace the filter and press

This shows the how many hours of use the Side Brushes (7) have before replacement is required. At '0h' replace the brushes and select reset.

This shows the how many hours of use the Floor Brush (M) has before replacement is required. At '0h' replace the Floor Brush and select reset.


This shows the how many hours of use the Mop Pad (5) has before replacement is required. At '0h' replace the Mop Pad and select reset.

Selecting Carpet Pressurisation enables the vacuum to automatically change to high suction mode on thick carpets and rugs.

Use the 'Mute' function to switch off the robot vacuum talking commands.

Setting a Schedule

Select Schedule from the settings page, press 'Add' to create a cleaning schedule then follow the below:

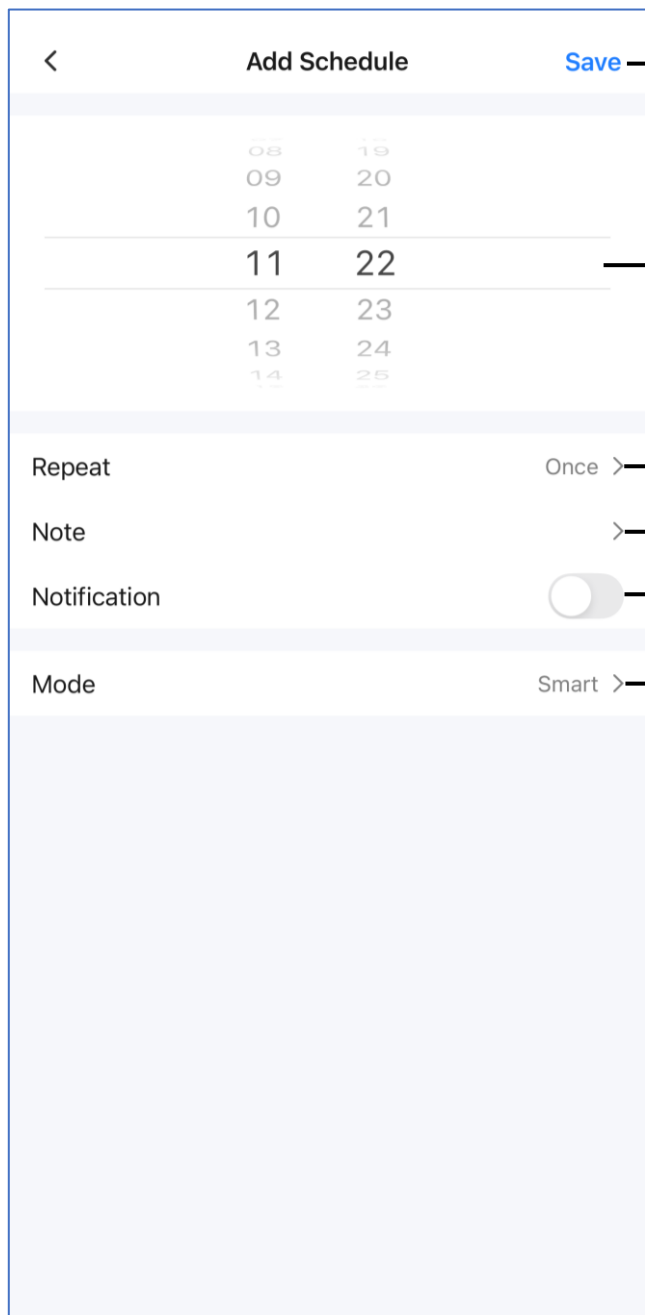

Add Schedule Save

08	19
09	20
10	21
11	22
12	23
13	24
14	25

Repeat Once

Note

Notification ☐

Mode Smart

Tap 'Save' to save your schedule settings.

Select the desired start time you wish the vacuum to begin cleaning.

 
Select which days of the week you wish the cleaning to be done.

Add a name to the cleaning schedule by selecting 'Note'.

Enable 'Notification' so that you are notified of the cleaning schedule.


Select mode to select which cleaning mode is used for the schedule cleaning, choose from 'Smart' or 'Wall Follow' cleaning modes.

Options





Tap the 'Options' menu at the top right of the App to reveal the options available such as Third Party Control, General Device Information, etc:

NB tapping 'Remove Device' will remove the robot from the App, this is useful when another user in the household wishes to control the vacuum with their phone/device.

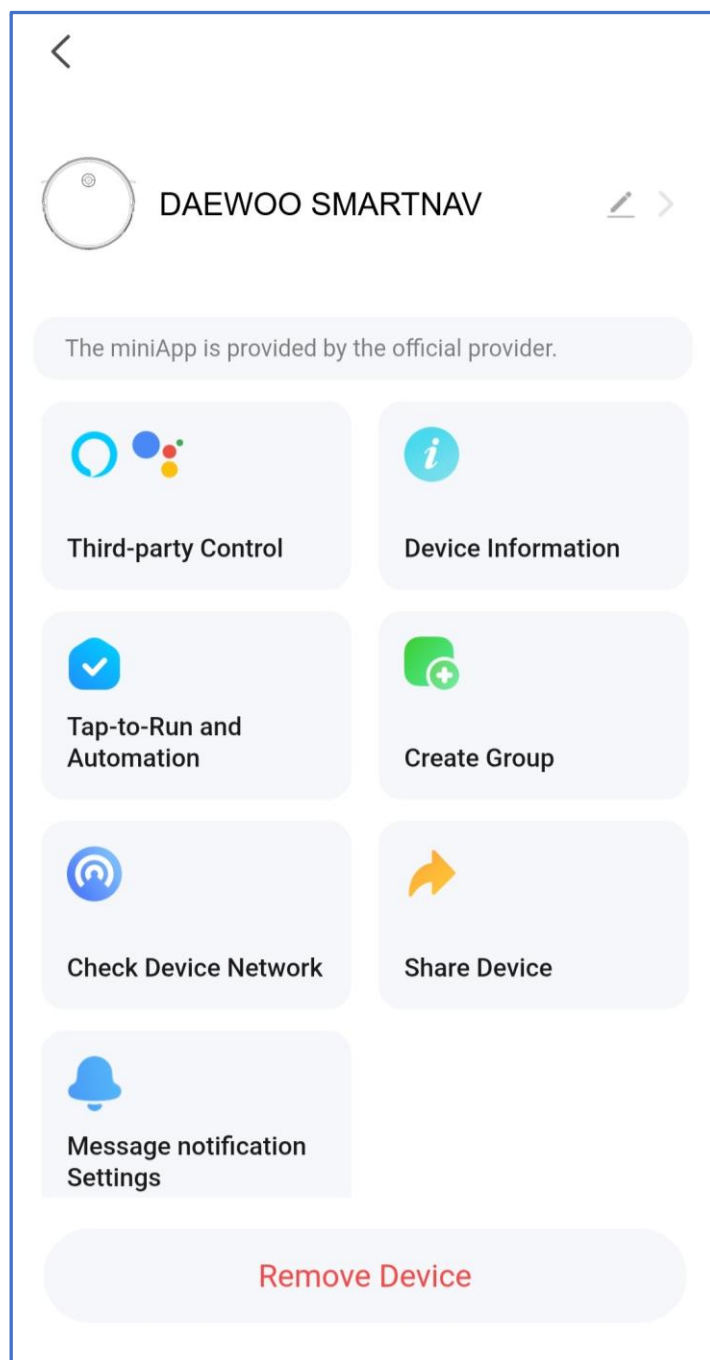

Step 1

Remove the **Dust Compartment/Water Tank (F)** from the robot vacuum.

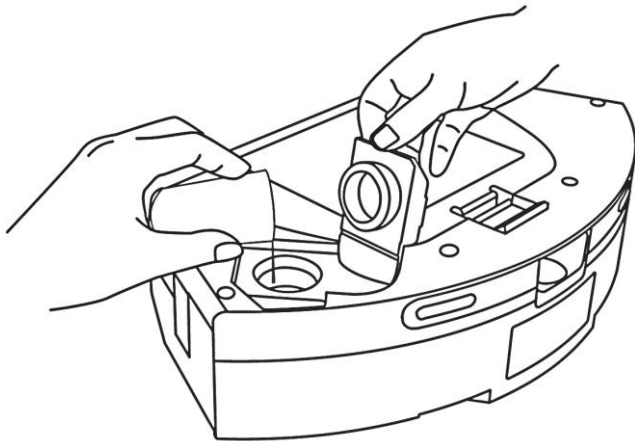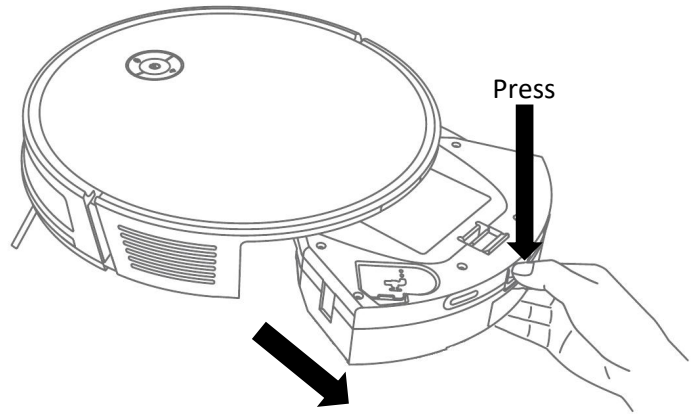


Step 2

Lift the **Water Fill Port (R)** and fill the tank with water.



Step 3

Wet the **Mop Pad (5)** and then wring out any excess water.

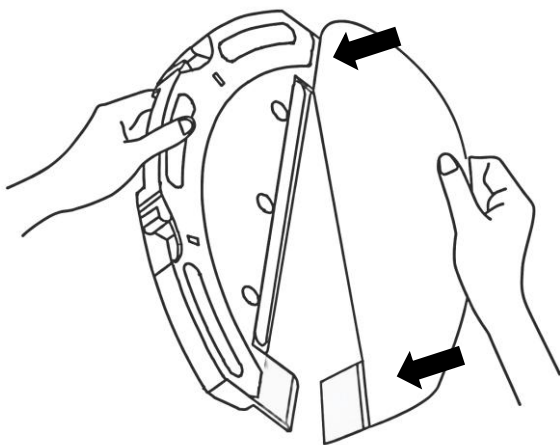


Step 4

Attach the **Mop Pad (5)** to the **Mop Bracket (4)**.


Step 5

Slide the **Mop Bracket** (4) and **Mop Pad** (5) onto the base of the **Dust Compartment/Water Tank** (F) until it clicks into place.

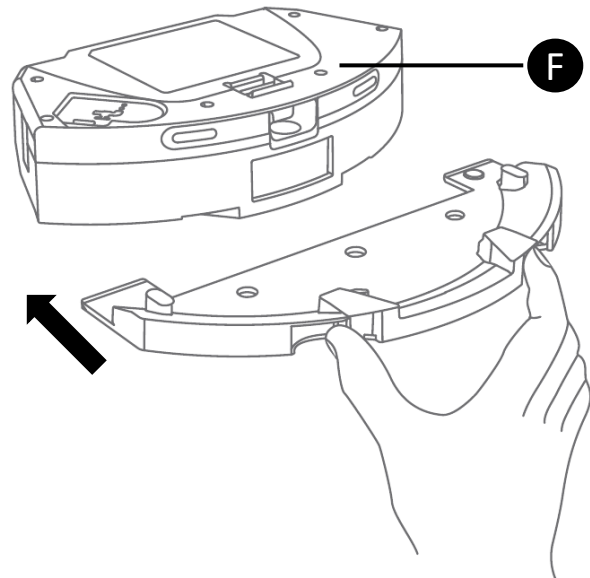

Step 6

Push the **Dust Compartment/Water Tank** (F) back into the robot vacuum complete with mopping attachments.

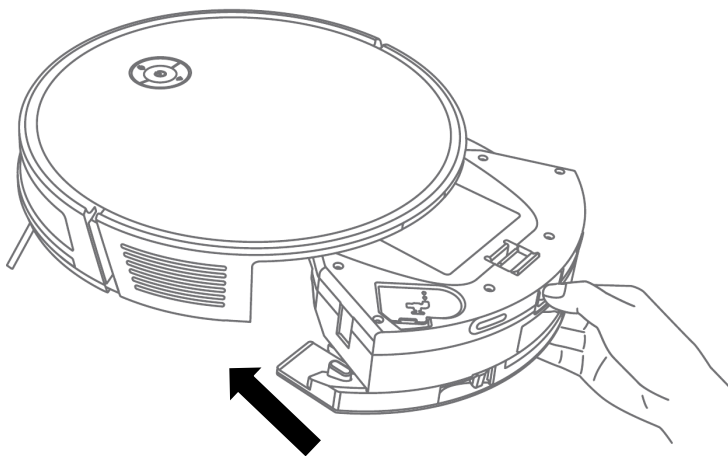


Once the **Mop Bracket** (4) and **Mop Pad** (5) are fitted to the robot vacuum it will automatically go into mopping mode rather than vacuuming mode.


Only use the mopping function on hard floors, **Do Not** use the mopping function on carpets.

Adjusting the amount of mopping water

If using the **Remote Control** (8), vary the water used during mopping by pressing 'Reduce mopping water' and 'Increase mopping water' buttons on the **Remote Control** (8).


If using the App, adjust the water rate under 'Preferences'.

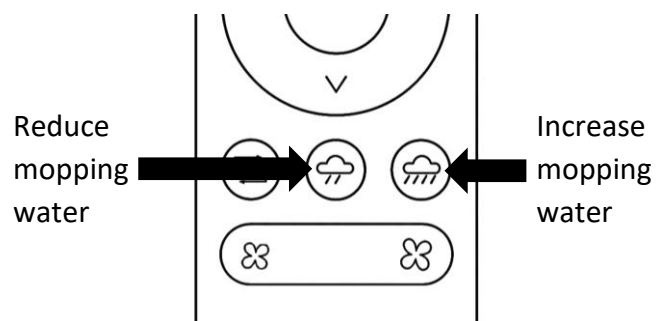

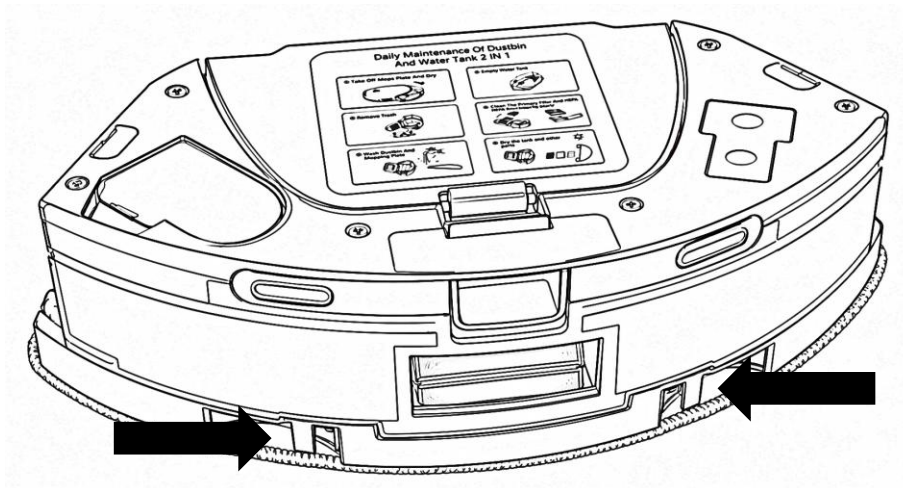

After mopping, remove the **Mop Bracket** (4) and **Mop Pad** (5) from the robot vacuum by pressing the two catches inwards as arrowed above.



NB Empty the water tank and remove the **Mop Pad** (5) and **Mop Bracket** (4) after mopping as below:

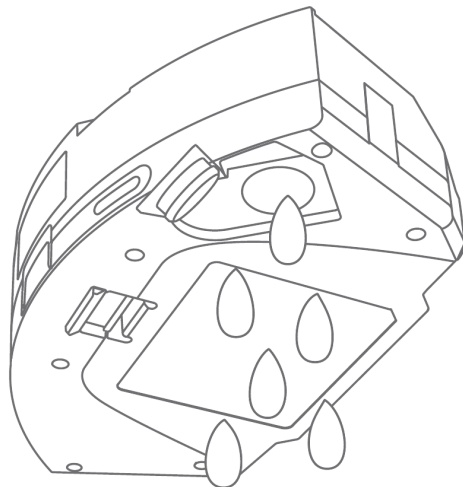

NB If the **Power On/Off Button** (B) flashes red after the **Dust Compartment/Water Tank** (F) has been reinstalled press the **Power On/Off Button** (B) until it stops flashing.

Step 1

Remove the **Dust Compartment/Water Tank (F)** from the robot vacuum.

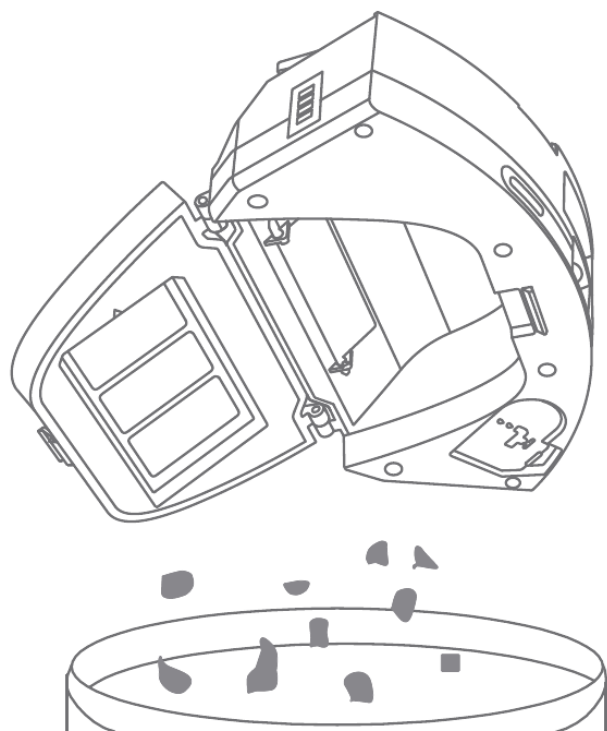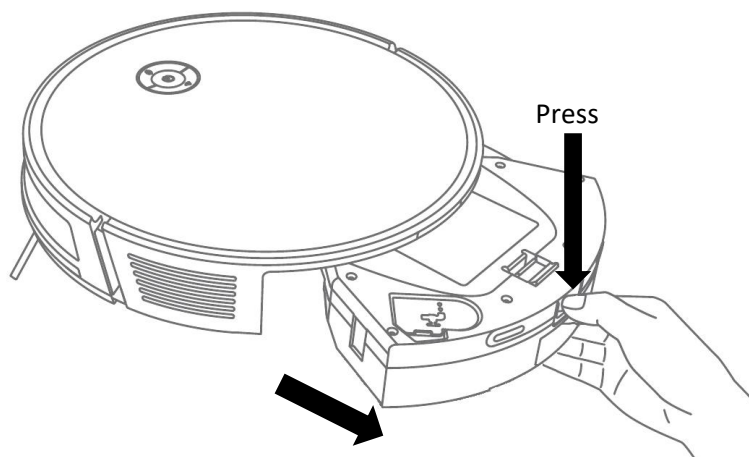

Step 2

Open the catch on the **Dust Compartment/Water Tank (F)** and lift the lid. Empty the contents into a waste bin.


Cleaning the Filters and Dust Compartment – see ‘Cleaning Rota’ on page 32

NB It is recommended that the **Hepa Filter (I)** is cleaned every 15-30 days – see ‘Cleaning Rota’ on page 31.

Step 1


Open the catch on the **Dust Compartment/Water Tank (F)** and lift the lid.

Pull the **Filter Holder (O)** out in the direction of the arrow shown right and pull the **Hepa Filter (P)** out by its tab.

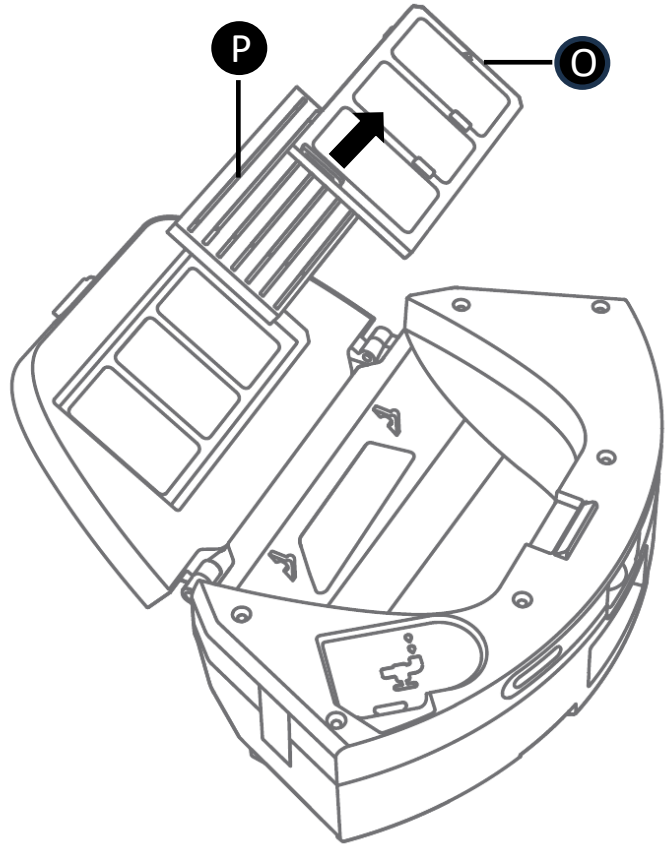

Step 2

Tap and shake the excess dirt from the **Hepa Filter (P)**. Brush the filter clean using the **Cleaning Brush (6)**. **Do not** wash the Hepa Filter. **Do not** expose the Hepa Filter to sunlight.

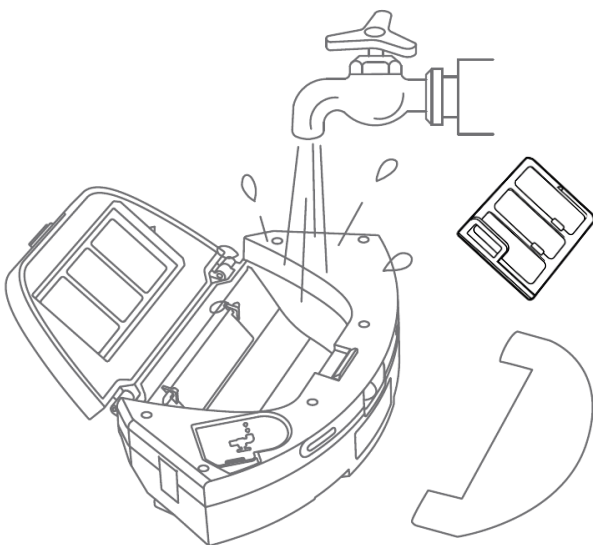




Step 3

Wash the **Dust Compartment/Water Tank (F)**, **Mop Pad (5)** and the **Filter Holder (O)** in running water until clean.

Do not wash the **HEPA Filter (P)**.

Step 4

Allow the **Dust Compartment/Water Tank (F)**, **Mop Pad (5)** and the **Filter Holder (O)** to dry thoroughly before refitting and reusing.

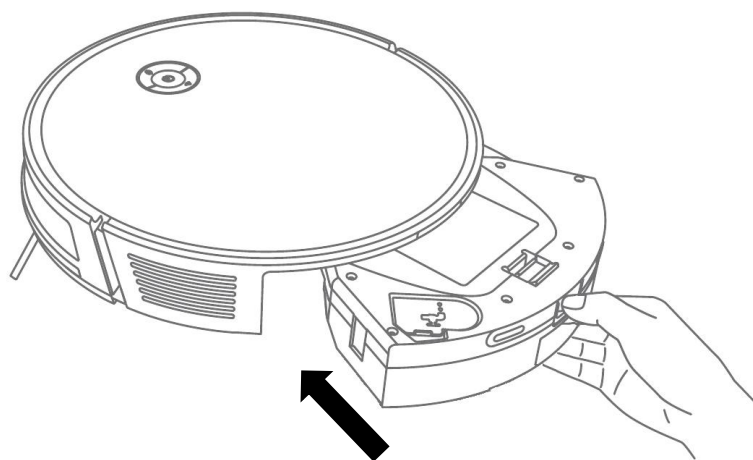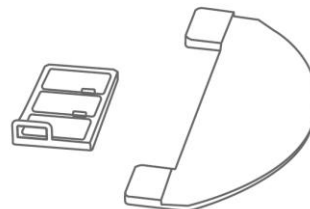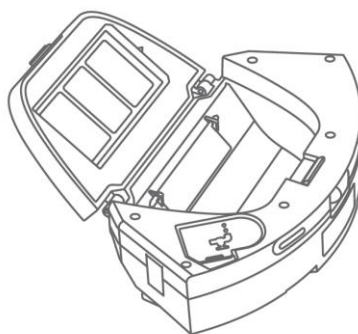


Step 5

Once dry, refit the **Hepa Filter (P)** and the **Filter Holder (O)** then replace the **Dust Compartment/Water Tank (F)** into the Robot Vacuum.

Cleaning the Contacts and Wheels – see 'Cleaning Rota' on page 32.

WARNING! Always remove the **Charging Dock** (2) from the mains socket before cleaning.


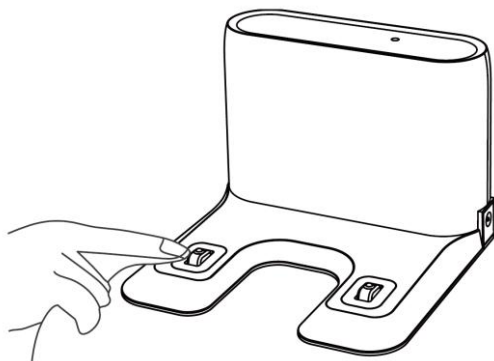


Step 1

Periodically wipe the contacts clean on the **Charging Dock** (2) with a clean damp cloth.

Step 2


Periodically wipe the **Charging Contacts** (G) and the **Antifall Sensors** (H) on the underside of the robot vacuum clean using a clean damp cloth.

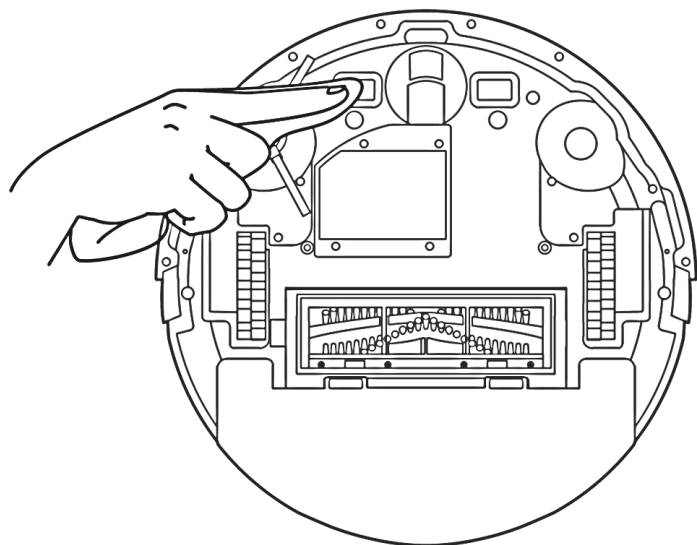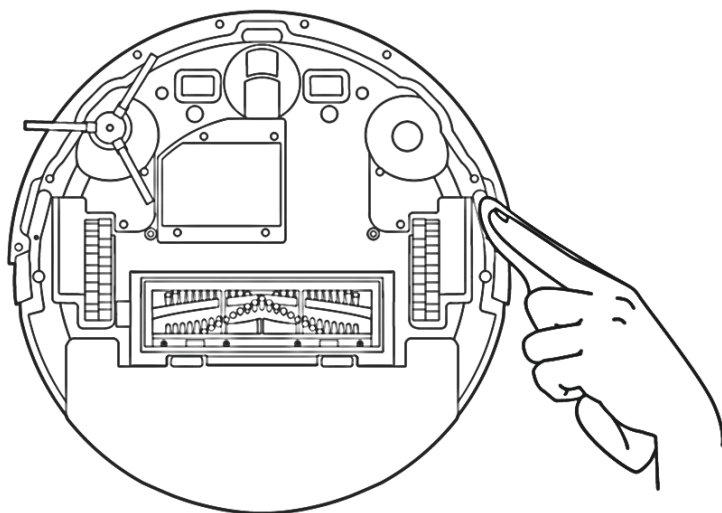

Step 3

Keep the **Driving Wheels** (L) and **Universal Wheel** (I) free of dust and hairs etc.

Cleaning the Floor Brush – see 'Cleaning Rota' on page 32.


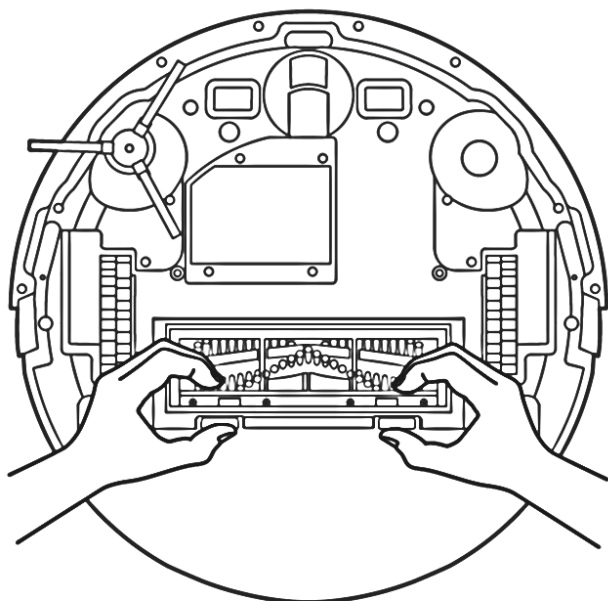


Step 1

Unclip the **Floor Brush (M)** surround as shown left.

Step 2

Remove the **Floor Brush (M)**.

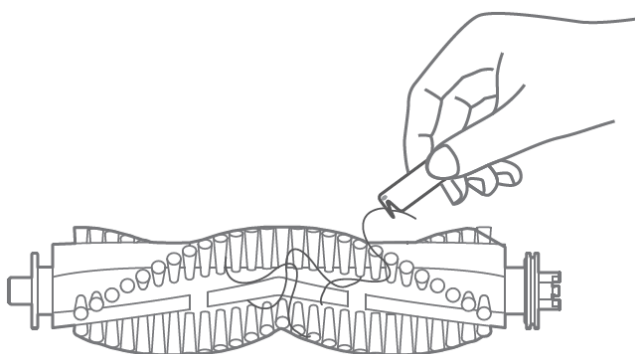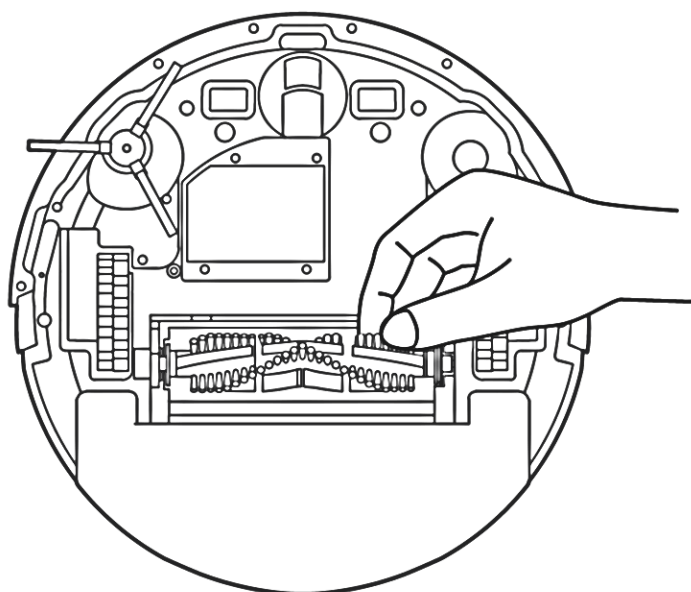



Step 3

Remove trapped hairs, etc. from the **Floor Brush (M)** using the **Cleaning Brush (6)**.

Cleaning the Side Brushes – see 'Cleaning Rota' on page 32.

Step 1

Pull the **Side Brushes (7)** off the **Side Brush Spindles (J)**.

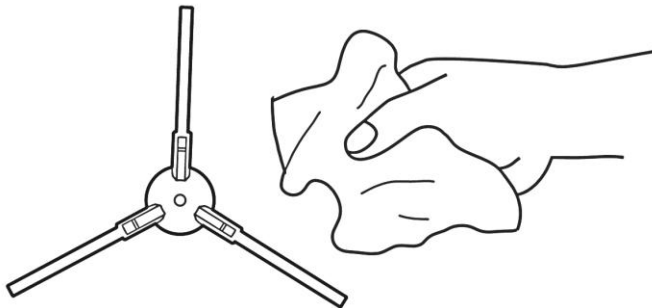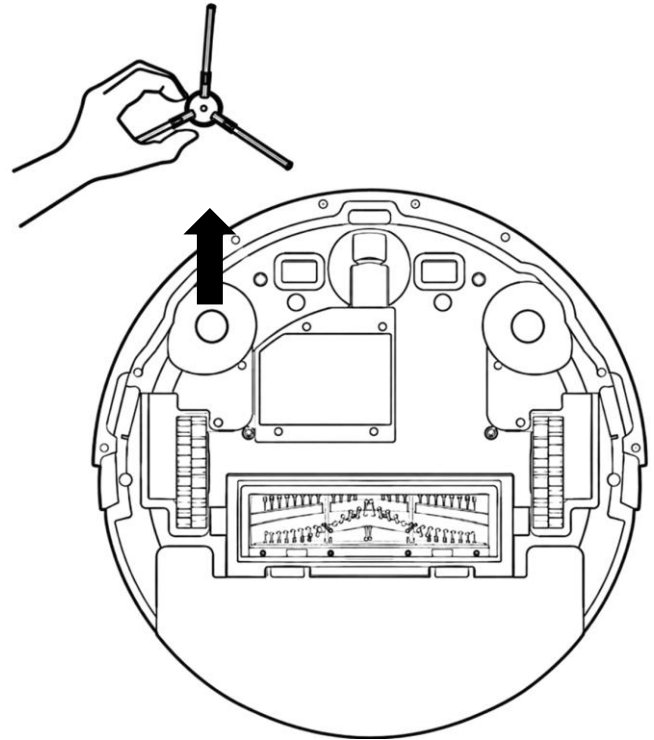

Step 2


Clean the **Side Brushes (7)** using the **Cleaning Brush (6)** and a soft damp cloth. Push the Side Brushes back onto the **Side Brush Spindles (J)**.

- Always disconnect the cleaner from the mains charger before cleaning.
- Clean the outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner or its charger in water or any other liquids.
- Wash the Hepa Filter every 15-30 days of use.

Cleaning Rota

Part/Component	Cleaning Frequency	Replace
HEPA Filter	Once a Week	Every three to six months
Dust Compartment	Once a Week or after every empty whichever is sooner	N/A
Floor Brush	Once a Week	Every six to twelve months
Side Brushes	Once a month	Every three to six months
Contact Plates of Charging Dock	Once a month	N/A
Universal Wheel	Once a month	N/A
Each Sensor	Once a month	N/A

Inserting the Batteries

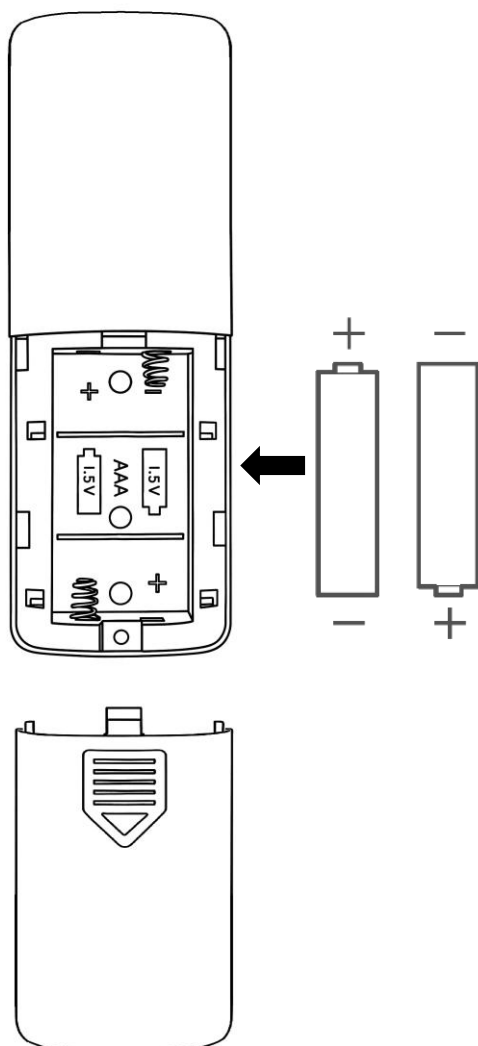

1. Slide the cover off the rear of the Remote Control (8) in the direction of the arrow shown on the back of the cover.
2. Insert 2x 1.5V AAA Batteries into the Battery compartment being careful to observe the polarity markings inside the compartment.
3. Slide the cover back on.

Battery Safety Warnings

- CAUTION: There is a danger of explosion if the batteries are incorrectly fitted.
- Ensure that the batteries are installed with the correct polarity.
- It is recommended that batteries are removed if the remote is not to be used for a long period of time or if the remote is to be disposed of.
- Replace only with the same or equivalent battery type.
- Store batteries in a cool dry place.
- Do not expose the batteries to sunshine, fire, heat or similar, never dispose of batteries in a fire.
- Do not charge non-rechargeable batteries.
- Do not short-circuit batteries.
- Do not mix old and new batteries.
- Exhausted batteries are to be removed from the product and safely disposed of.

WARNING!

- Do not ingest the battery, Chemical Burn Hazard.
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep away from children.
- If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.

Model No.	FLR00277
Mains Charger Rating	Input: AC 100-240V ~ 50/60Hz 0.35A max. Output: 19V DC $\overline{\sim}$ 0.6A 11.4W
Charge Time	4.5h Approximately
Battery Nominal Capacity	14.4V 2550mAh 36.72Wh Li-Ion (4 cells)
Battery Rated Capacity	14.4V 2400mAh 34.56Wh Li-Ion (4 cells)
Battery Model	C1251A7
Run Time	Up to 130 minutes
Suction Power	4000Pa
Dimensions	32cm (Dia.) x 7.5cm (H)
Unpacked Weight (approx.)	3.5 Kgs
Wi-Fi Frequency	2412-2472 MHz
Bluetooth Frequency	2403-2480 MHz
Maximum RF Power	≤20dBm
ErP: Power consumption of equipment in standby mode shall not exceed 0.5W	Standby Mode: 0.35W
ErP: Power consumption of equipment in networked standby mode shall not exceed 8.0W	Networked Standby Mode: 1.48W
This equipment complies with Annex III of Commission Regulation (EU) 2023/826	
This product conforms to Radio Equipment Directive 2014/53/EU (RED)	

Problem	Possible Cause	Possible Solution
Unit fails to turn on.	Internal battery not charged.	Charge the internal battery.
	The charger is not plugged into the mains socket.	Ensure the charger is fully inserted into the socket and the socket is switched on.
	The Charger is not plugged into the Charging Dock	Ensure the charger is plugged into the Charging Dock and the Charging Dock Power Indicator is lit.
Unit won't charge or is slow to charge	The Charger is not plugged into the Charging Station	Ensure the charger is plugged into the Charging Dock and the Charging Dock Power Indicator is lit.
	The charging contacts on the Charging Dock or underside of the vacuum are dirty	Clean the charging contacts on the Charging Dock and underside of the vacuum.
Low suction or poor pick-up.	Dust Compartment is full and/or the Hepa Filter is clogged.	Empty the Dust Compartment.
		Check and clean the Hepa Filter.
The vacuum is dropping debris and/or is making a "hissing" sound.	Dust Compartment is full and/or the airflow is restricted	Empty the Dust Compartment.
		Clear any blockages if necessary.
		Check and clean the Hepa Filter.
Vacuum not returning to Charging Dock	Too many articles around Charging Dock such as furniture or toys.	Ensure the correct clearance around Charging Dock and that the dock is against a wall.
	Charging Dock too far away	Ensure Charging Dock is in the same room as the robot vacuum.
Abnormal Sound whilst cleaning	Floor brush entangled with hair and/or dirt	Switch off and clean the Floor Brush.
Abnormal behaviour	Anti-Fall Sensors dirty	Clean the Anti-Fall sensors
Unable to connect to Wi-Fi	Wi-Fi function is not activated on the vacuum.	Press and hold the Wi-Fi button until the button flashes slowly and retry connecting.
	Wi-Fi Signal is poor	Check that the Wi-Fi signal is strong enough by using another device such as a phone.
	Wi-Fi frequency is 5GHz	The Wi-Fi frequency must be 2.4GHz for the robot vacuum to operate.
	Wi-Fi name or password incorrect.	Check Wi-Fi name and password and retry.
Vacuum is stuck/struggling to move	Vacuum is tangled in wires and/or obstructions	Ensure the floor area is clear of wires and other objects.


Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

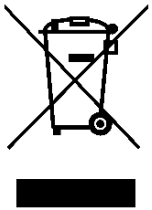


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

Disposal of Batteries




This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk or www.weeeireland.ie so that they can be disposed of in an environmentally friendly manner.

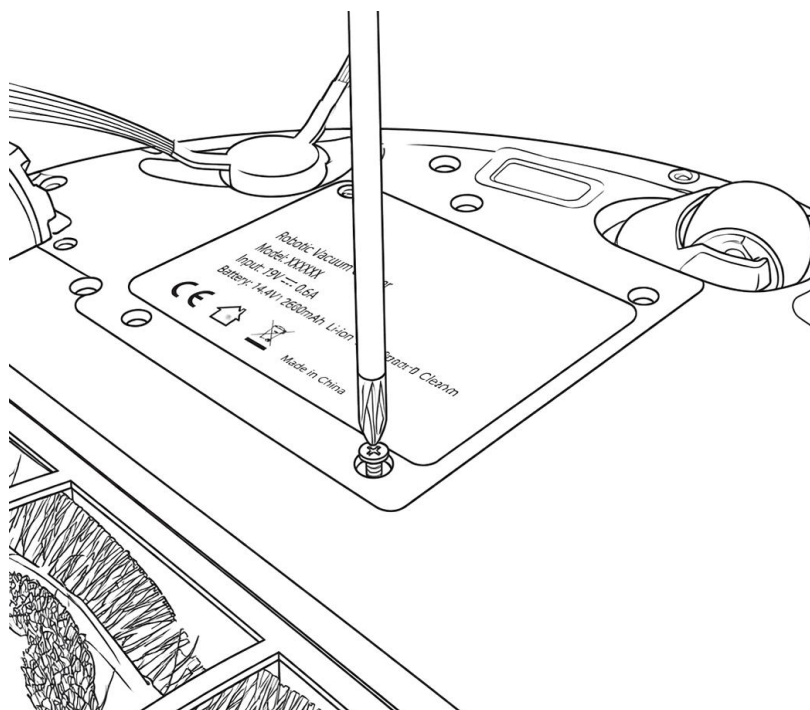


Step 1

Remove the four screws holding down the battery cover with cross head screwdriver (not supplied).

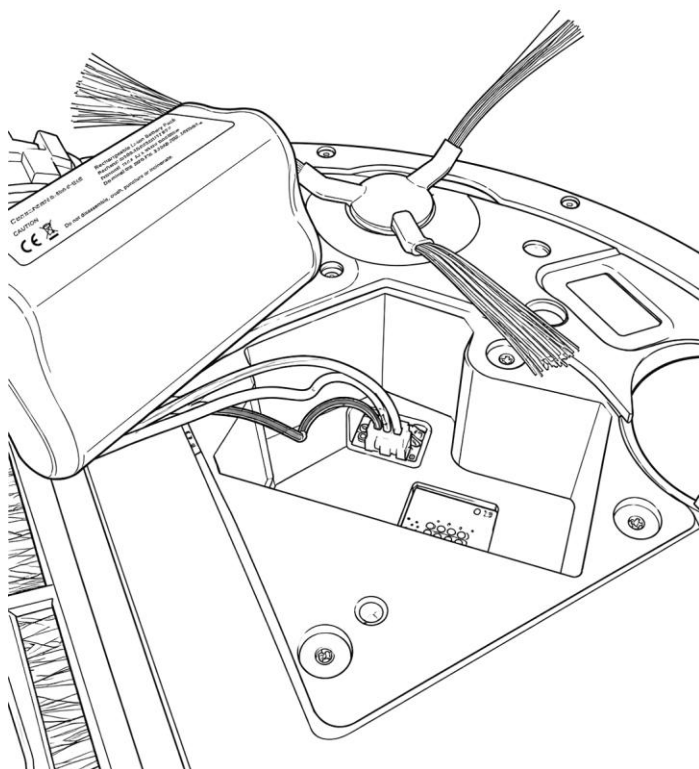

Step 2

Lift the battery out

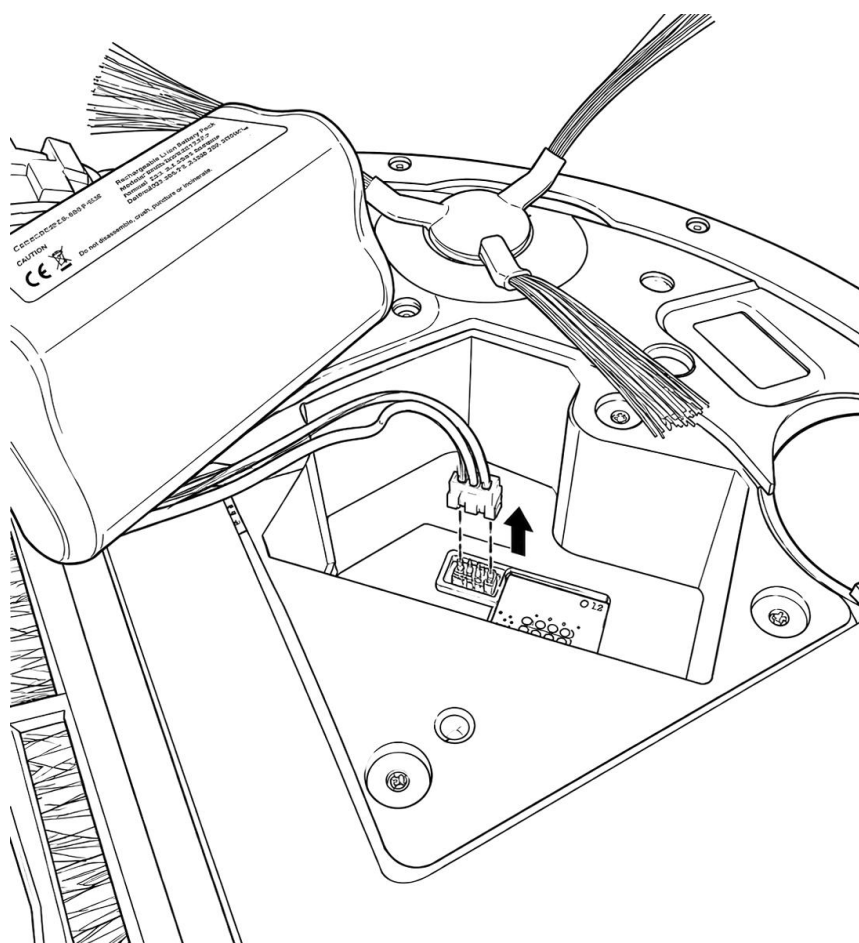


Step 3

Unplug the cable in the direction of the arrow shown left and remove the battery completely.

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email:

help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

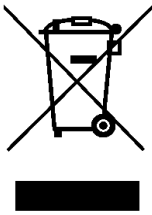

PSTI Act 2022/PSTI Regulation 2023.

1. PRODUCT IDENTIFICATION

Product name: Cyclone Freedom Smartnav Robotic Vacuum with WIFI
Model/version: Eurosonic model numbers: FLR00277.

Batch/serial number(s): EP120527, EP120730

Date first placed on the UK market: June 2026

2. MANUFACTURER / SUPPLIER

Name: Eurosonic Group Ltd
Address: Brightgate Way, 1 Brightgate House, Stretford, Manchester, M32 0TB

Contact details: Phil Marsland

3. DECLARATION

The undersigned declares that the product identified above complies with the applicable provisions of the Product Security and Telecommunications Infrastructure Act 2022 and the PSTI (Security Requirements for Relevant Connectable Products) Regulations 2023.

4. SECURITY REQUIREMENTS MET

- Product does not use universal default passwords.
- A vulnerability disclosure policy is in place and accessible at: www.esgltd.com
- Security updates will be provided for a period of _3_ years from first UK availability.

 
5. SIGNATURE

Place: _Manchester

Date: 09/06/2026

Name & position: Phil Marsland, QA Technical Manager.

On behalf of (organisation): _Eurosonic Group

Signature: 

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or materials, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://help.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China