 


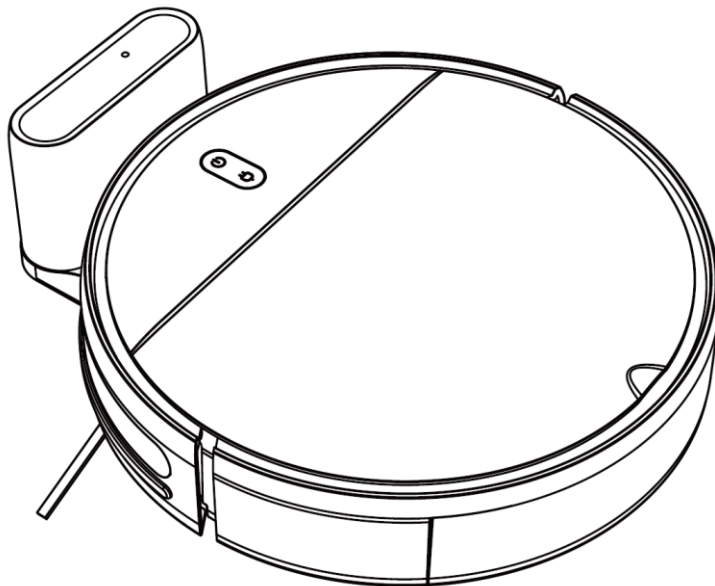

Cyclone Freedom Robot Vacuum

FLR00279



Page No.

2	Contents
3	Getting Started
3	Safety Advice
5	Description of Symbols
6	What's in the Box
7	Description of Parts
8	Description of Controls, etc.
9-10	Charging the Battery
10-11	Cleaning
11-12	Emptying the Dust Compartment
12-13	Cleaning the Hepa Filter
14-15	Care and Cleaning
16	First Use of the Remote Control
16	Replacing the Battery in the Remote Control
17	Battery Safety Warning
18	Technical Specification
19	Troubleshooting
20	Light Indicators
21	Recycling
22	Customer Support
23	Safety Markings
24	Warranty Information




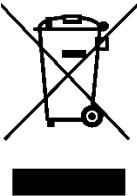


- Check that the product is intact and undamaged and all parts are present.
- Dispose of packaging materials responsibly.
- No tools are required, but some assembly of your Vacuum is required.

Safety Advice

- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years when it is energised or cooling down.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to


- ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** pull or carry the Charger by the electrical cord.
- Ensure fingers and other objects are never placed in any part of the vacuum cleaner. Clothing or hair may become trapped if the vacuum is used improperly.
- Keep hair, loose clothing, jewellery, fingers and all parts of the body away from openings and moving parts.
- Keep all air vents clear and free of dust, lint, hair and anything else that may reduce airflow.
- Avoid directing the appliance towards naked flames as the air discharged may extinguish gas fires or pilot lights and may disturb ashes in open fires.
- **DO NOT** Vacuum water or any other liquids with this vacuum.
- **DO NOT** Vacuum hot ashes or lit cigarettes, etc.
- Never use the appliance without the filter in place.
- **DO NOT** use the Vacuum without the Dust Compartment fitted.
- **DO NOT** vacuum any large or broken objects such as glass.
- **DO NOT** vacuum anything that is burning or smoking such as cigarettes, matches or hot ashes.

The following symbols or words are used in this instruction manual:


	<p>Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements</p>
	<p>Products labelled with this symbol conform to applicable provisions of the European Economic Area.</p>
 <p>Li-Ion</p>	<p>This symbol means batteries and rechargeable batteries may not be disposed of with household waste! As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.</p>
	<p>You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.</p>
	<p>This symbol indicates that the battery charger uses an alternating current mains supply.</p>
	<p>This symbol indicates that the vacuum cleaner uses Direct Current mains supply.</p>

What's in the Box




- Robot Vacuum
- Charging Station
- Charger
- Side Brushes
- Cleaning Brush
- Dust Compartment
- Remote Control
- User Manual (This Booklet)

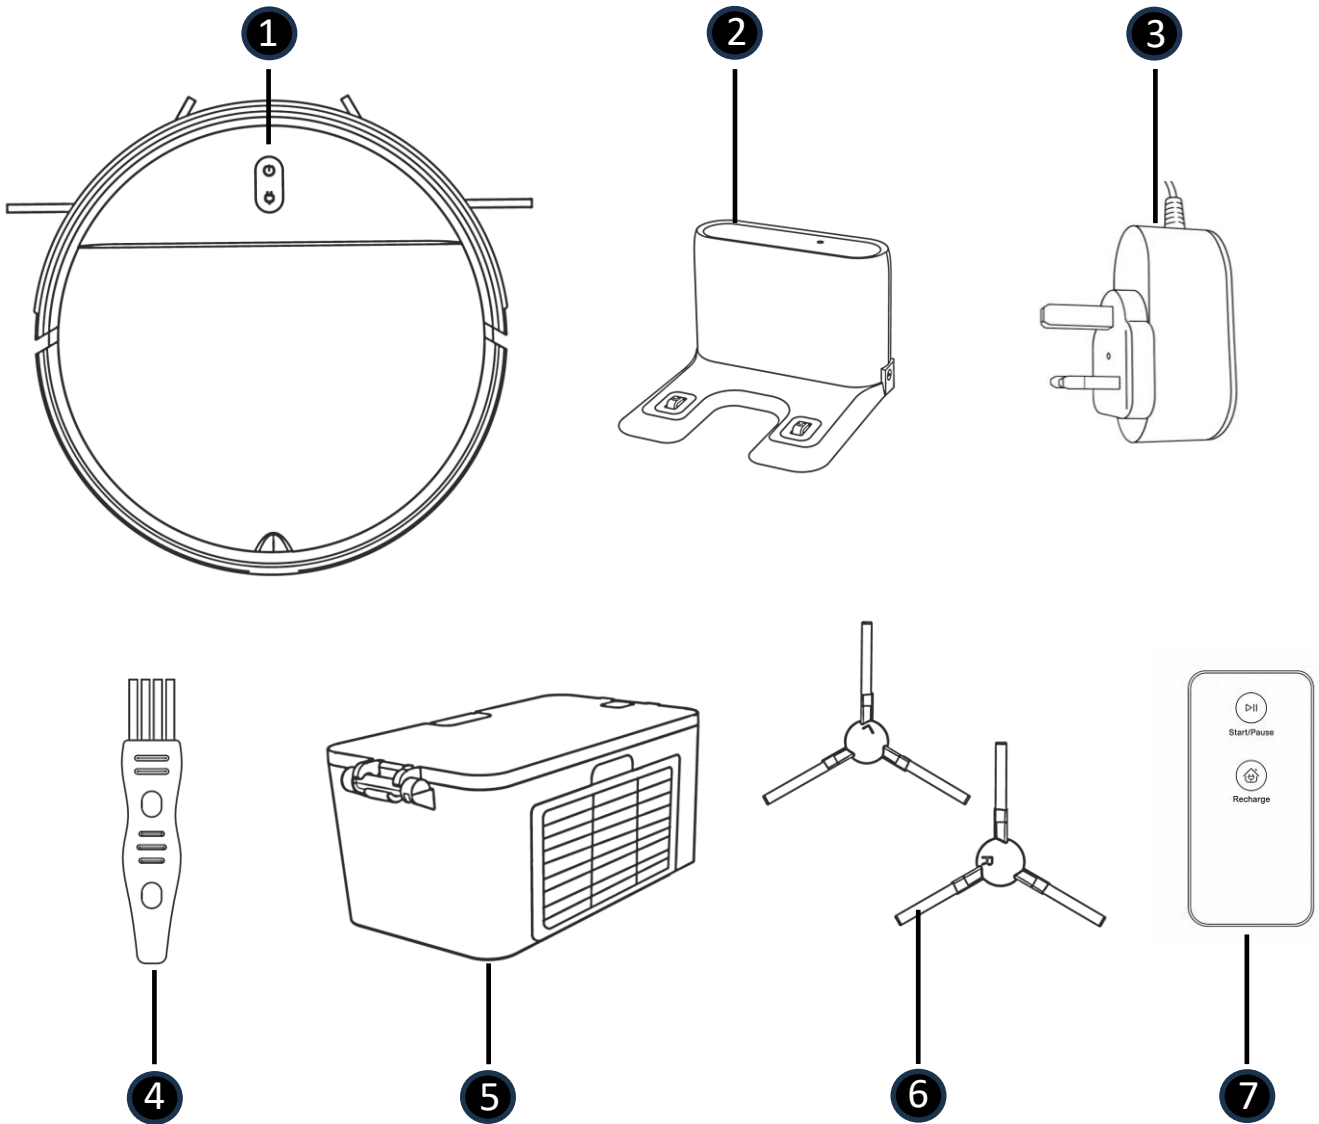

 
- 1. Robot Vacuum
- 2. Charging Station
- 3. Charger
- 4. Cleaning Brush
- 5. Dust Compartment
- 6. Side Brush (x2)
- 7. Remote Control

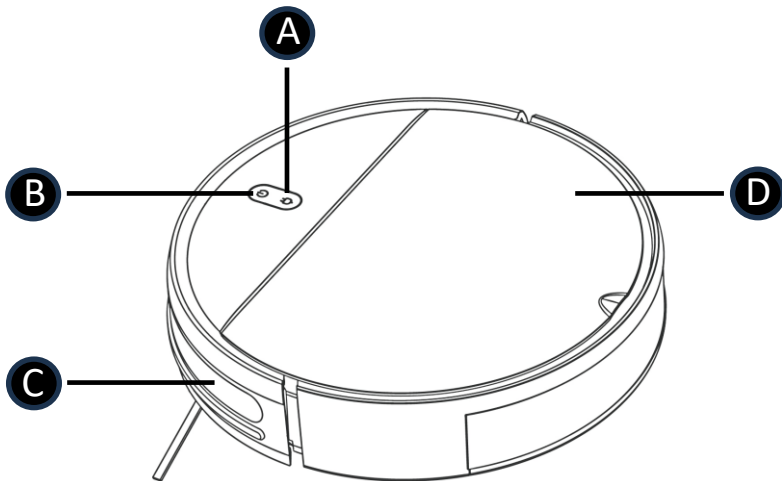

- A. Charge Indicator
- B. Power Button
- C. Omnidirectional Lens
- D. Lid
- E. Battery
- F. Universal Wheel
- G. Charging Contacts
- H. Driving Wheels
- I. Hepa Filter
- J. Power Indicator

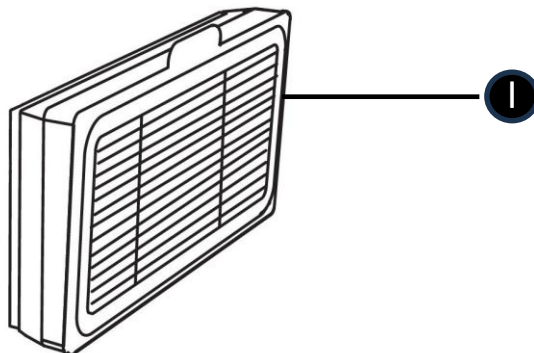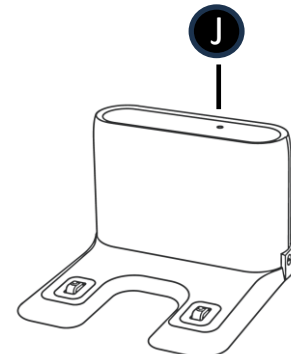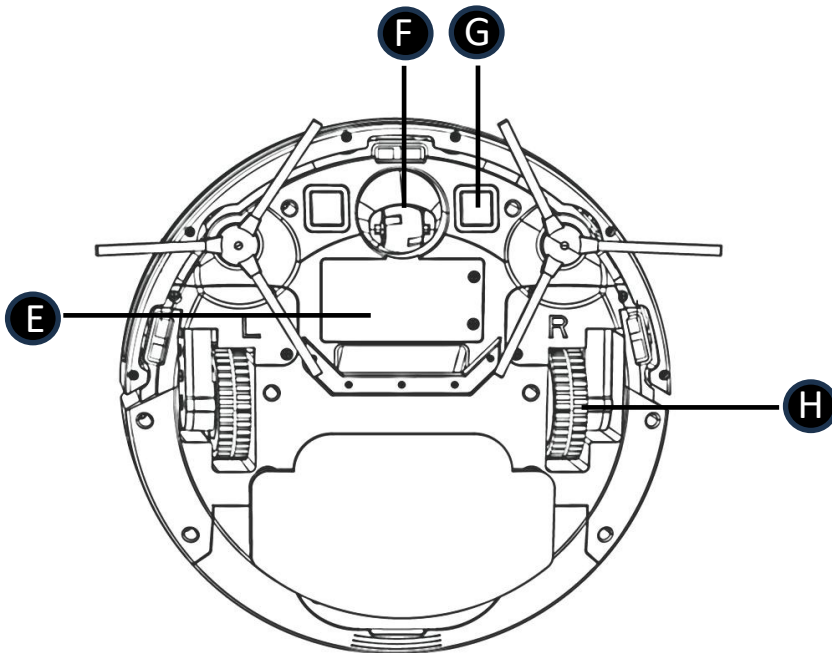

Remove the Protective Covering


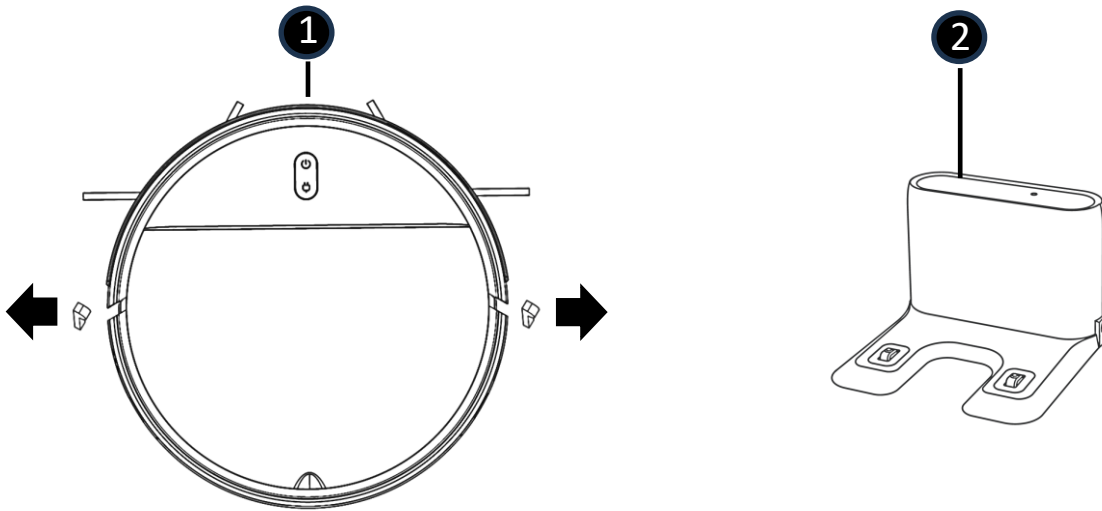


Before use, remove the protective strips from the **Robot Vacuum** (1) and the film from the **Charging Station** (2).

Charging the Battery

Step 1

Place the **Charging Station** (2) on flat ground against the wall. Do not place any articles 0.5m to the left or right of the charging station or 1.5m in front. Insert the **Charger** (3) into the nearest mains socket. The **Power Indicator** (J) will illuminate. **NB** the **Charging Station** (2) must be powered continuously during use.

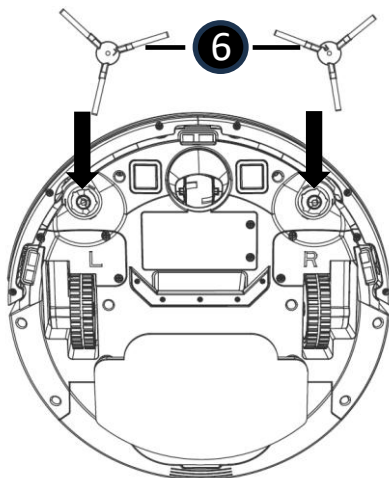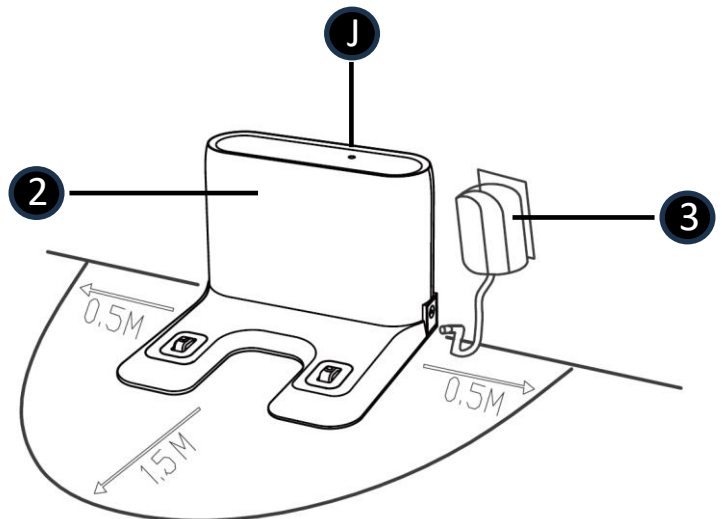

Step 2

Push the two **Side Brushes** (6) onto the spindles on the underside of the Robot Vacuum.

Step 3


Place the **Robot Vacuum (1)** onto the **Charging Station (2)** as shown.

The **Power Button (B)** will illuminate and the **Charge Indicator (A)** will slowly flash to show the vacuum is charging. Once the indicator stops flashing the battery is fully charged and the vacuum is ready to use.

NB Do not use the **Charging Station (2)** in direct sunlight or near mirrors which could cause reflections.

It is recommended to fully charge the vacuum before each use to maximise the life of the unit.

The charging time is approximately five hours.


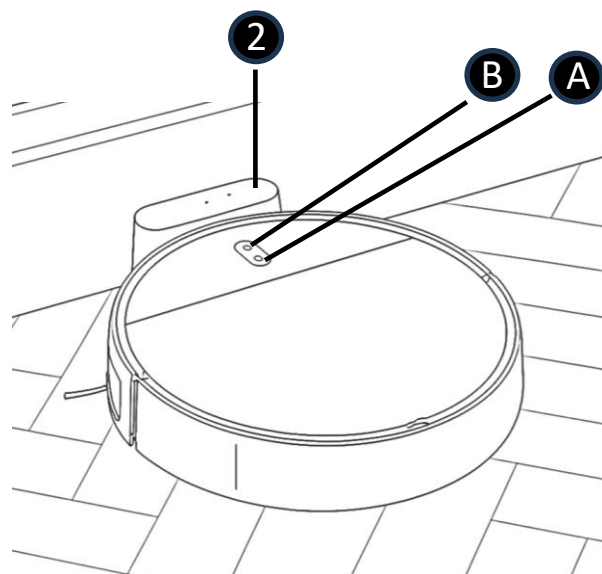


IMPORTANT Only use the Charger supplied with the product, using any other charger may result in permanent damage to the cleaner and could invalidate your warranty.

Cleaning

1. Press the **Power Button (B)** briefly to start vacuuming. The vacuum will chime and start vacuuming. Press the **Power Button (B)** to pause vacuuming

NB If the unit is in the off state (i.e. no indicators lit) press the **Power Button (B)** for 2-3 seconds to power up the vacuum.

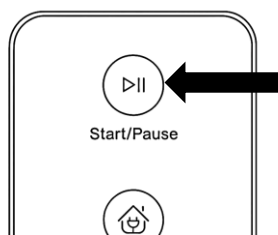
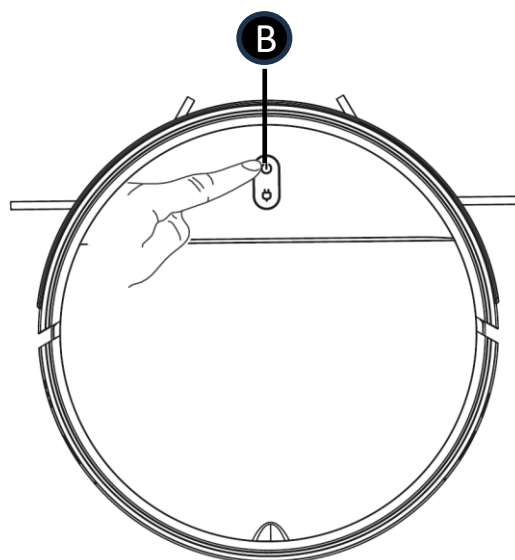


2. Alternatively press the Start/Pause Button on the **Remote Control (7)** to start vacuuming. Press the Start/Pause Button again to pause vacuuming.

3. The vacuum will randomly clean the floor for up to 90 minutes, after which it will automatically return to the **Charging Station (2)** to recharge the battery.


NB During cleaning, the vacuum will monitor its own power level.

If the power is insufficient, it will activate the returning mode and automatically return to the **Charging Station (2)** for recharging.

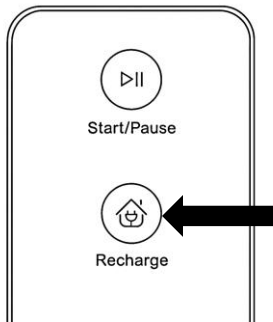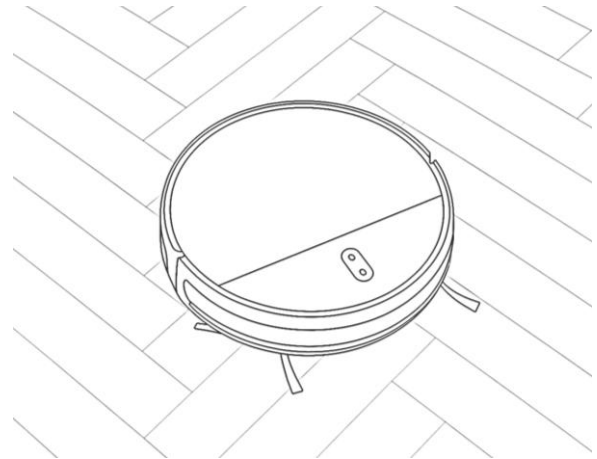


4. Alternatively, press the recharge button on the **Remote Control (7)**. This will stop the **Robot Vacuum (1)** vacuuming and return it to the **Charging Station (2)** for recharging.


Emptying the Dust Compartment

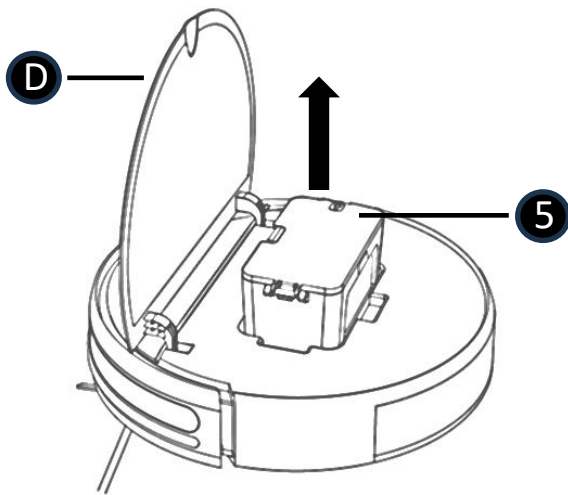

1. Remove the **Dust Compartment (5)** from the **Robot Vacuum (1)** by lifting the **Lid (D)** and pulling the Dust Compartment upwards.

2. Open the catch on the **Dust Compartment (5)** and lift the lid.....

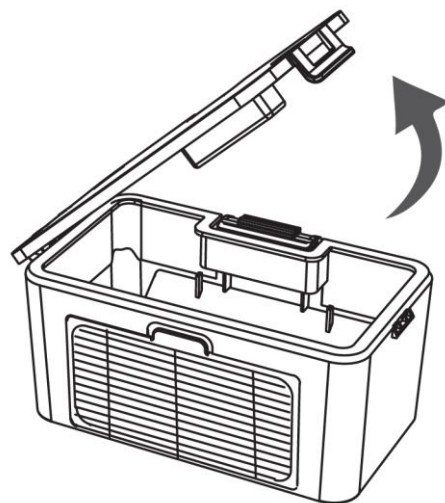


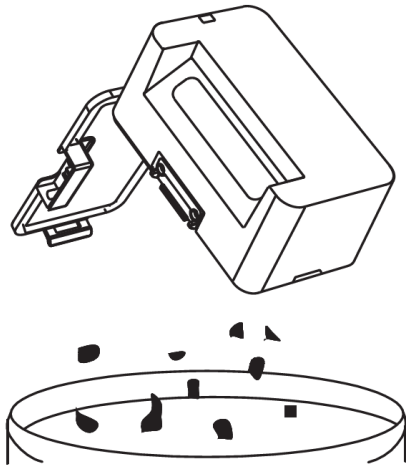


3.and empty out the contents over a Dust Bin.

Cleaning the Hepa Filter

It is recommended that the **Hepa Filter (I)** is cleaned every 15-30 days.



1. Remove the **Hepa Filter (I)** by pulling it out of side of the **Dust Compartment (5)** using the tab arrowed right.

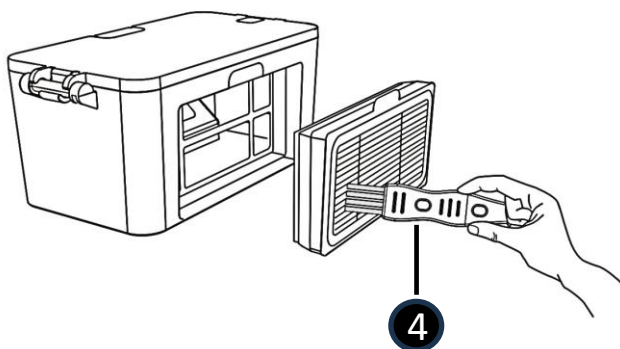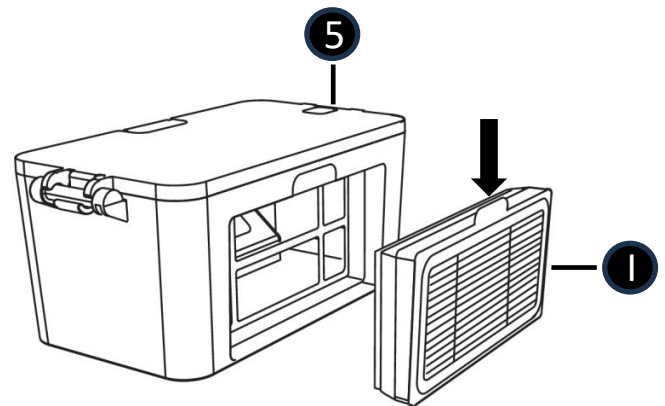


2. Shake the excess dirt from the **Hepa Filter (I)**. Brush the filter clean using the **Cleaning Brush (4)**.

NB Do not expose the Hepa Filter to sunlight. Do not wash the Hepa Filter.

3. Clean the **Dust Compartment (5)** out using a cloth or brush.

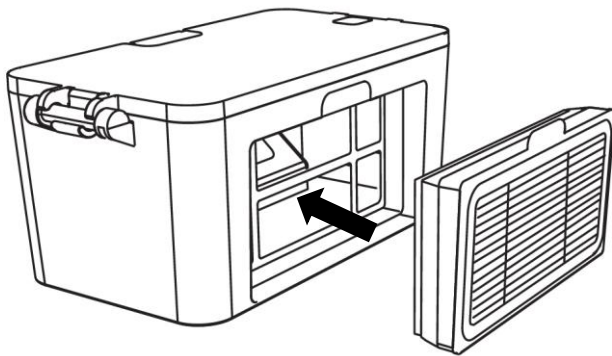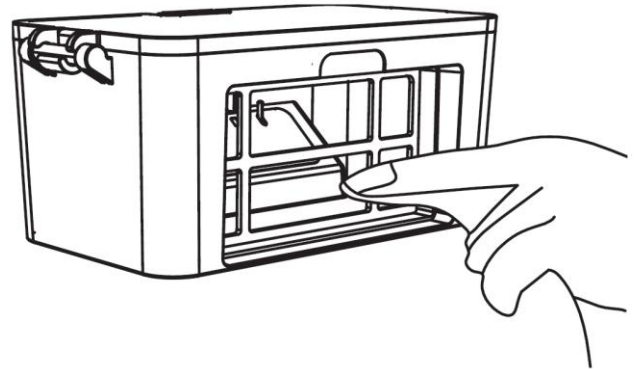


4. Push the **Hepa Filter (I)** into the side opening of the **Dust Compartment (5)**.

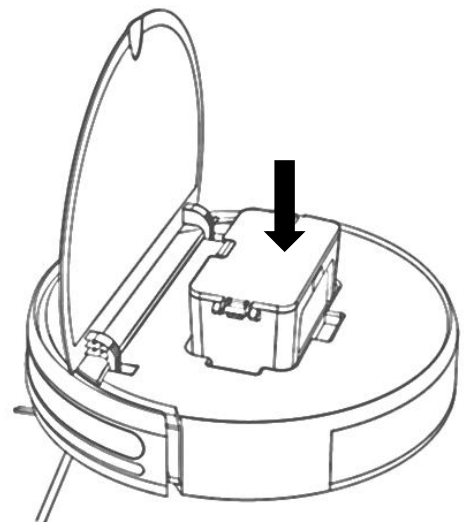



5. Replace the **Dust Compartment (5)** into the **Robot Vacuum (1)** and close the **Lid (D)**.

WARNING! Always remove the **Charger** (3) from the mains socket before cleaning.

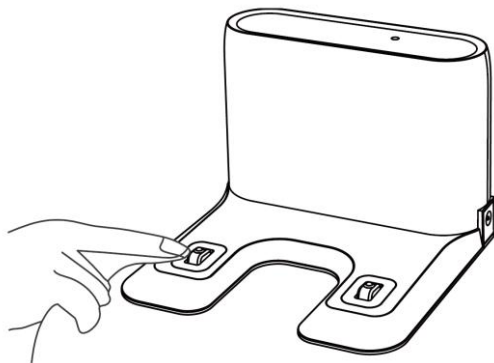

Periodically wipe the contacts clean on the **Charging Station** (2) with a clean damp cloth.


Periodically wipe the lower visual sensors on the underside clean using a clean damp cloth.

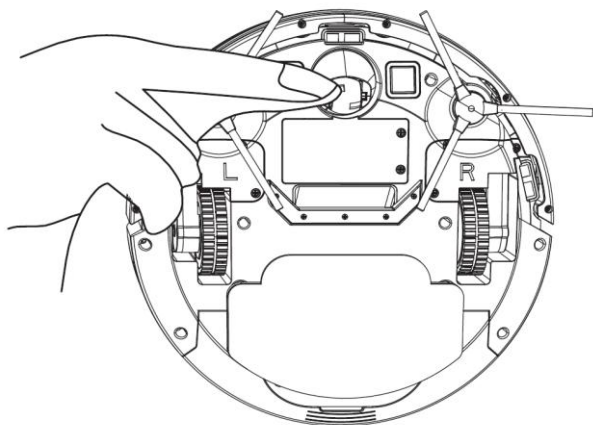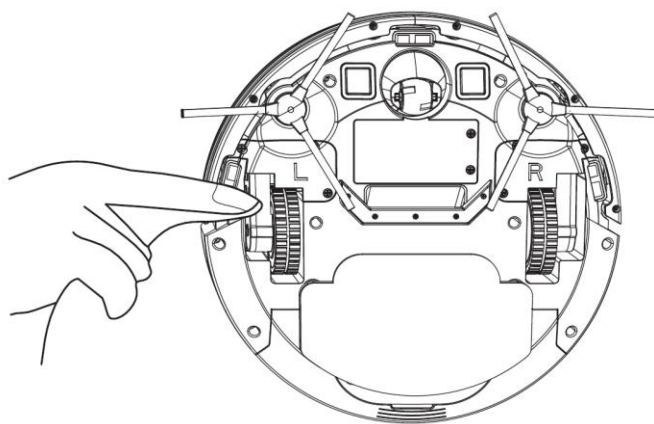

Keep the **Driving Wheels** (H) and **Universal Wheel** (F) free of dust and hairs etc.


- Always disconnect the cleaner from the mains charger before cleaning.
- Clean the outside of the cleaner with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Do not submerge the cleaner or its charger in water or any other liquids.
- Wash the Hepa Filter every 15-30 days of use.
- Allow the Hepa Filter to thoroughly dry out for 24 hours before reassembly and reuse.

If you are using the **Remote Control (7)** for the first time, pull the tab from the battery compartment as shown right to enable the supplied battery inside.

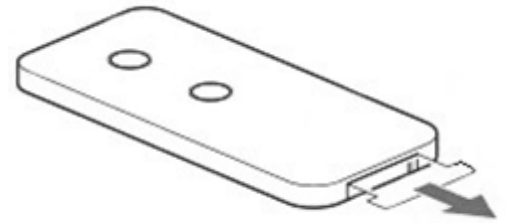


Replacing the Battery in the Remote Control


If the Remote-Control range has become reduced or it has stopped working altogether the battery will need replacing as shown below:

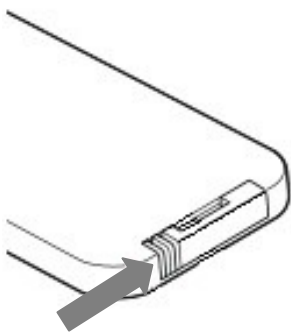

A Turn the remote upside down and push the tab on the battery compartment in the direction of the arrow as shown above.

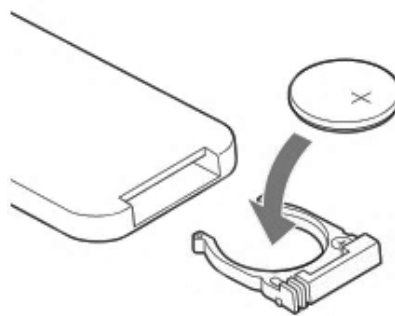

B Slide the battery compartment out and insert a new CR2025 battery ensuring the positive polarity marking is uppermost.

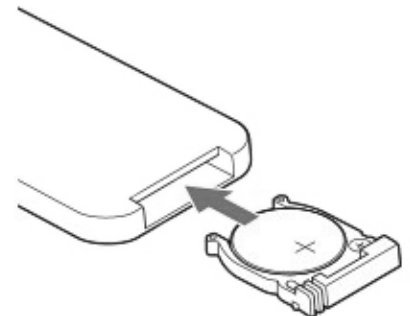

C Slide the battery compartment back into the Remote Control.

**BATTERY WARNING:
KEEP OUT OF REACH OF CHILDREN**

KEEP new and used batteries OUT OF REACH of CHILDREN



Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.



This product contains batteries

If the battery compartment does not close securely, stop using the product and keep it away from children.



1x 3V CR2025 Battery Included in the remote,

If a battery has been Ingested, or there is a possibility one might have been Ingested, please seek medical attention and inform the medical authorities that you suspect battery Ingestion. It's not always clear when a child has swallowed a button battery, as there are no specific symptoms. However, they might:

- cough, gag, or drool;
- seem to have a stomach bug or virus;
- vomit;
- complain of pain in their stomach, chest, or throat;
- appear tired or sluggish; and lose their appetite.

Since the signs aren't obvious, it is important to keep a close eye on loose, used, or spare button batteries in your home, as well as the products that contain them.

Model No.	FLR00279
Mains Charger	Input: AC 100-240V ~ 50/60Hz 0.35A max. Output: 19V DC ---0.6A 11.4W
Battery	14.4V 2000mAh Li-Ion (4 cells)
Run Time	Up to 90 minutes
Suction Power	2000Pa
Unpacked Weight (approx.)	2.2 Kgs
Dust Compartment	200ml

Problem	Possible Cause	Possible Solution
Unit fails to turn on.	Internal battery not charged.	Charge the internal battery.
	The charger is not plugged into the mains socket.	Ensure the charger is fully inserted into the socket and the socket is switched on.
	The Charger is not plugged into the Charging Station	Ensure the charger is plugged into the Charging Station
Low suction or poor pick-up.	Dust Compartment is full.	Empty the compartment.
	Hepa Filter is clogged.	Check and clean the Hepa Filter.
The vacuum is making a “hissing” sound.	The airflow is restricted	Empty the Dust Compartment. Check and clean the Hepa Filter. Clear any blockages if necessary.

Mode	Power Button Indicator (B)		Charge Indicator (A)	
	Colour	Light Status	Three Colour	Light Status
Power On	Green	On	N/A	Off
Power Off	N/A	Off	N/A	Off
Cleaning	Green	On	N/A	Off
Recharging	Green	On	Yellow	On
Low Battery Recharge	Green	On	Red	On
During Charging	Green	On	Green	Slow Flash
Charging Finished	Green	On	Green	On
Abnormal Warning	Red	Quick Flash	N/A	Off
Standby Mode	Green	On	N/A	Off
Sleep Mode	N/A	Off	N/A	Off
Low Battery	Red	Quick Flash	N/A	Off

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.


Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

Disposal of Batteries

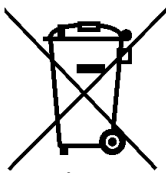

Li-Ion

This symbol means batteries and rechargeable batteries may not be disposed of with household waste!


As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or visit www.recycle-more.co.uk or www.weeeireland.ie so that they can be disposed of in an environmentally friendly manner.

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email:

help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

**UK
CA**

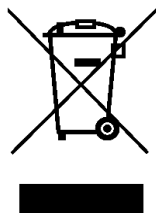

Li-Ion

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or materials, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at:

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China