



3 TIER HEATED AIRER



READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Heated Aired**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** install the appliance directly below an electrical socket.
- **DO NOT** use this heated aired with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the aired is positioned incorrectly.
- **DO NOT** use this aired with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have

- been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
 - Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
 - **DO NOT** use this ailer in the immediate surroundings of a bath, a shower or a swimming pool.
 - **DO NOT** immerse the appliance or its cord in water or any other liquids.
 - Always use this appliance on a solid, level, non-flammable surface.
 - **DO NOT** use this appliance outdoors.
 - It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
 - Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
 - **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
 - Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
 - The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
 - **DO NOT** allow the mains cable to hang over sharp edges or

come in contact with hot surfaces.

- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- Never place the appliance near to flammable material or high pressure containers. (e.g., Paper, wood, petrol, solvents, spray canisters etc.)
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area.
- The appliance should not be installed in areas which have a fire-risk, such as garages, stables or wooden sheds; this is applicable also for rooms in which highly inflammable gasses or dust can develop. Danger of fire!!
- Unplug after each use. Grasp the plug, not the cord.

THIS APPLIANCE MUST BE EARTHED

i During the first few minutes of initial use, you may notice a slight odour and a little smoke. This is normal and will quickly dissipate, it is the coating applied to the heating elements to prevent any corrosion during transit.

⚠ WARNING! This appliance is intended only for drying textiles washed in water.

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:

**UK
CA**

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

CE

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

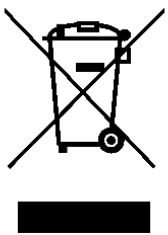

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.



This symbol provides useful additional information on the use of this product.

 


This symbol indicates that the supply uses an alternating current mains supply.



This symbol indicates that the surface gets hot and care must be taken.

Description of Parts

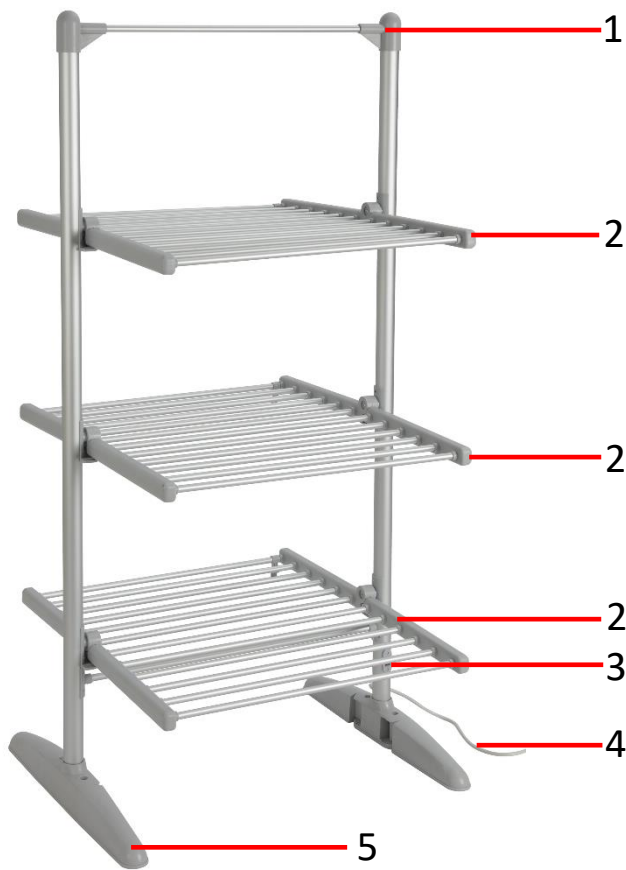

1. Support Stand
2. Drying Tiers
3. On/Off Switch
4. Power Lead and Plug
5. Feet

Before the First Use of Your Heated Airer

- Remove all packing materials and discard responsibly.
- Ensure all parts are present see **Description of Parts** above.
- Check that there is no damage to the mains cable or product.
- Ensure that you clean your Air Fryer before first and every use with a damp cloth and dry thoroughly.
- Whilst using your Airer for the first time you may notice a little smoke and odour; this is normal and simply the coating applied to the heating element to prevent any corrosion during transit and will soon dissipate.

Assembling your Heated Airing

1. Unfold the **Feet (5)** as shown in *Fig.1*
2. Lower the **Drying Tiers (2)** in the direction of the arrows shown below - see *Fig.2*
3. Repeat the above steps 1 and 2 for the other side until the ailer is fully unfolded – see *Fig.3* below.
4. To fold flat for storage simply repeat the above steps in reverse, the **Drying Tiers (2)** can be secured into place using the clip attached to one side of the **Drying Tiers (2)**.



Fig.1

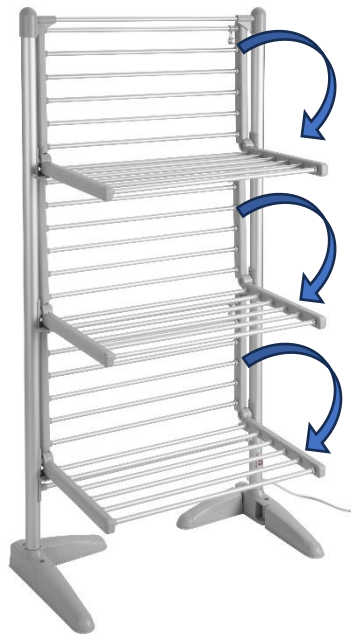 


Fig.2



Fig.3

Operating Instructions

1. Once assembled, ensure the ailer is on a solid, level surface and insert the mains plug into the nearest outlet socket.
2. Switch the ailer on using the **On/Off Switch (3)** located on the base of the **Support Stand (1)** near the **Feet (5)**, the **On/Off Switch (3)** will illuminate.
3. The appliance will now begin to heat and after a short time the Heated Airing will reach its operating temperature.
4. Clothes can either be hung flat over the **Drying Tiers (2)** or between the separate bars of the **Drying Tiers (2)**.

i Do not exceed the maximum load for this ailer of 30kg, otherwise permanent damage may occur to the ailer.

Cleaning and Maintenance of Your Heated Airing

- Always unplug the Heated Airing from the mains supply and allow to cool before cleaning.

- **DO NOT** submerge any part of the main body, the mains cable or mains plug in water or any other liquids.
- Clean the outside of the Heated Airing with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- Fold the Heated Airing flat before storing in a cool, dry location.
- **DO NOT** wrap the power lead around the Heated Airing when not in use or for storing.

Technical Specification

| | |
|------------------|------------------------------------|
| Model No. | HEA1864 |
| Rated Voltage | 220-240V~ 50-60Hz |
| Rated Power | 300W |
| IP Rating | IPX1 |
| Protection Class | I (This Appliance must be Earthed) |

Non-Wireable Mains Plug

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician. If you need to remove the plug – **DISCONNECT FROM THE MAINS** – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
 Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
 Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product



 
You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team at help@daewooelectricals.com or call 0161 831 7879.

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

**UK
CA** 

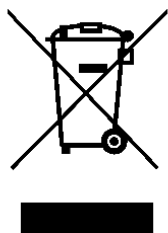



DAEWOO®



Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com