



HEATED FOOT WARMER

*Please refer to the warranty section for terms of your extended guarantee



READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Heated Foot Warmer.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** use this Heated Foot Warmer folded or rucked.
- **DO NOT** insert pins into this Heated Foot Warmer.
- This appliance can be used by children aged from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- The appliance can be used by children older than 3 years and younger than 8 years under supervision and with the

controller always set to the minimum (1) temperature setting.

- Not to be used by very young children (0-3 years).
- This appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- If sleeping for long periods of time, use the low heat setting (1) to avoid overheating and discomfort.
- Avoid using the Heated Foot Warmer with the higher heat settings whilst sleeping as this may increase the risk of skin burns and heat stroke.
- Only use the Controller marked on the rating label with this Heated Foot Warmer.
- Whilst storing the Heated Foot Warmer, allow it to fully cool then fold neatly but not tightly or roll loosely avoiding sharp bends in the heating element.
- **DO NOT** crease the appliance by placing other items on top of the Heated Foot Warmer.
- Examine the appliance frequently for signs of wear or damage. If there are such signs, if the appliance has been misused or does not work return it to the supplier before switching it on again.
- This Heated Foot Warmer is for domestic use only and is not intended for commercial use or for use in hospitals.
- **DO NOT** use if damp or wet.
- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.

- The appliance should not be used on an adjustable bed.
- When in use ensure the Heated Foot Warmer & mains lead do not get trapped.
- The cable and control unit of the appliance can give rise to risks of entanglement, strangulation, tripping or treading if not correctly arranged. The user shall make sure that excess ties and electric cords shall be arranged in a safe way.
- **DO NOT** dry clean this Heated Foot Warmer, for cleaning follow the instructions supplied.
- There are no user serviceable parts, the throw should only be repaired or serviced by a qualified service engineer.
- It is recommended this Heated Foot Warmer is used in conjunction with a residual current device (RCD) with a rated residual operating current not greater than 30mA.
- This Heated Foot Warmer is only for use by humans and shouldn't be used for pets.
- When in use the control unit must not be placed near open windows or inside the Heated Foot Warmer.
- Be sure the Heated Foot Warmer is only connected to an electrical supply as specified in the instructions.
- Switch off the power and remove the plug from the socket outlet when not in use.
- Shoes must be removed before use.
- **It is recommended that this appliance should not be used whilst sleeping.**

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

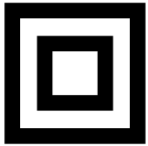

 This symbol indicates that the heater is double insulated and therefore does not require an Earth connection.

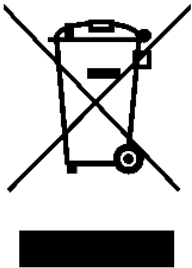

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

 
Before first use of Your Heated Foot Warmer

Remove all packing materials and discard responsibly.

Inner lining only maximum washing temperature 40°C  Dry Flat.


Outer casing DO NOT WASH

- Do not bleach
- Do not tumble dry
- Do not dry clean Do not insert pins
- Not suitable for under 3 years
- Do not iron

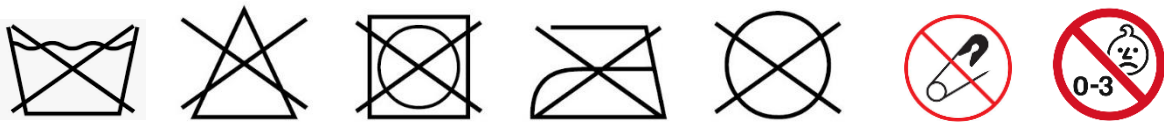

⚠ WARNING! DO NOT Immerse the outer casing of the Heated Foot warmer into water or any other liquid.

 Description of the Control

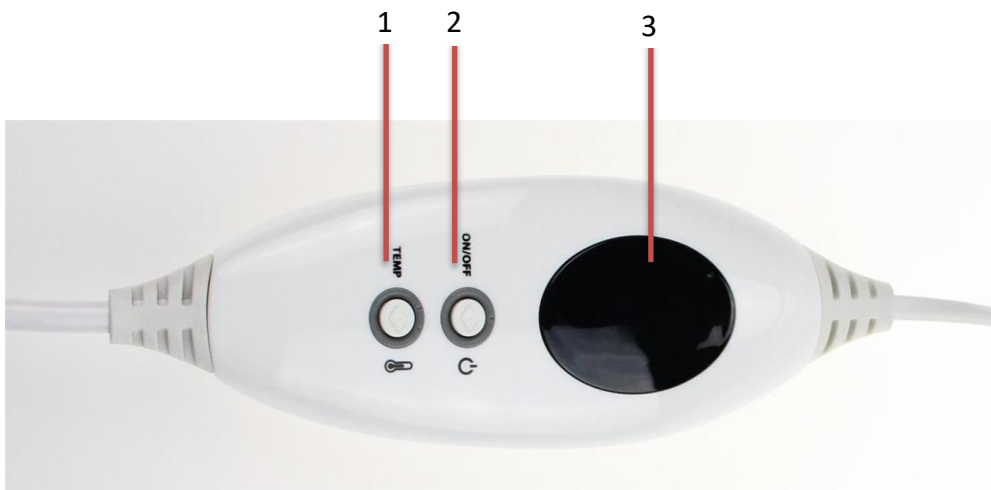

1. Temperature Button
2. ON/OFF Button
3. LED Display

Using the Heated Foot Warmer

1. Make sure there is a mains socket nearby when you are going to use the foot Heated Foot Warmer.
2. Insert the mains plug into the mains socket.
3. Press and hold the **ON/OFF button** (2) for 3 seconds, the initial start up will show '3' on the **LED display** (3).
4. The temperature can be set between 1 low to 6 high, to choose the required temperature press the **Temperature Button** (1) repeatedly until you reach the desired setting.
5. If you are going to use the Heated Foot Warmer for a long period of time, it is recommended to use the lowest temperature '1' for comfort.
6. To turn off the Heated Foot warmer, press the **ON/OFF button** (2) for 3 seconds until the **LED display** (3) goes off.

i The Heated Foot Warmer has a built in automatic shut off after 90 minutes.

NOTE: This Heated Foot Warmer should never be used whilst folded as this will cause overheating.

Care and Maintenance

Do not dry clean.

Do not iron.

Do not machine dry.

Spot Cleaning outer casing

Sponge the affected area using a damp cloth.

Inner lining

Use a small amount of detergent and set the washing machine to a “Delicate Wash” with a maximum temperature of 40°. Dry flat.

Technical Specification

Rated Voltage	220-240V~ 50Hz
Rated Power	100W
Model Number	HEA1982
Protection Class	II

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

 
If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

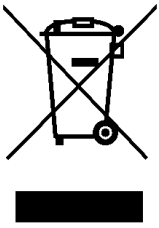Disposal of the Product

 
 
You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

**UK
CA**

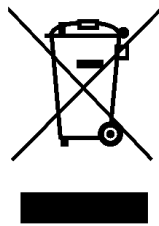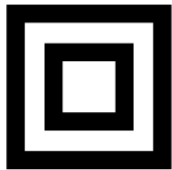

Notes



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at:*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com