

The
GRINCH
Dr. Seuss



4L MINI FRIDGE

Keep your treats cold... even if you're feeling a little green!

SDA2964GE



READING AND STORING THE USER MANUAL



BEFORE USING THIS PRODUCT, PLEASE READ THROUGH THIS MANUAL CAREFULLY PAYING PARTICULAR ATTENTION TO THE SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE PRODUCT.

CAREFULLY SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE. ENSURE THE USER MANUAL IS INCLUDED WHEN PASSING THE PRODUCT ON TO ANY THIRD PARTIES.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

ONLY USE THE PRODUCT AS DESCRIBED IN THIS USER MANUAL. ANY OTHER USE IS CONSIDERED IMPROPER AND MAY RESULT IN DAMAGE TO PROPERTY OR PERSONS.

THE MANUFACTURER OR VENDOR CANNOT BE HELD LIABLE FOR DAMAGES OR INJURY INCURRED THROUGH IMPROPER OR INCORRECT USE.

- **READ AND FAMILIARISE YOURSELF WITH ALL OPERATING INSTRUCTIONS BEFORE USING THIS MINI FRIDGE.**
- **BEFORE PLUGGING YOUR APPLIANCE INTO THE MAINS, VISUALLY CHECK THAT IT IS INTACT AND HAS NOT SUFFERED ANY TRANSIT DAMAGE.**
- **CHECK THAT THE VOLTAGE INDICATED ON THE DATA PLATE CORRESPONDS WITH THAT OF THE LOCAL NETWORK BEFORE CONNECTING THE APPLIANCE TO THE MAINS POWER SUPPLY.**
- **DO NOT USE THIS PRODUCT WITH A PROGRAMMER, TIMER, SEPARATE REMOTE-CONTROL SYSTEM OR ANY OTHER SUCH DEVICE.**
- **DO NOT IMMERSE THIS APPLIANCE IN WATER OR ANY OTHER LIQUIDS.**
- **COOKING APPLIANCES SHOULD BE POSITIONED IN A STABLE SITUATION WITH THE HANDLES (IF ANY) POSITIONED TO AVOID SPILLAGE OF LIQUIDS.**
- **DO NOT TOUCH HOT SURFACES. ACCESSIBLE SURFACES ARE LIABLE TO GET HOT DURING USE. ALWAYS USE THE HANDLE.**
- **TURN THE APPLIANCE OFF AND DISCONNECT FROM THE MAINS AND LET IT COOL SUFFICIENTLY BEFORE MOVING IT.**
- **CLOSE SUPERVISION IS REQUIRED WHEN USING THIS APPLIANCE NEAR CHILDREN.**
- **NEVER LEAVE THIS APPLIANCE WITHIN REACH OF CHILDREN.**
- **THIS APPLIANCE SHALL NOT BE USED BY CHILDREN FROM 0 TO 8 YEARS.**
- **THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND**



UNDERSTAND THE HAZARDS INVOLVED.

- **CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.**
- **KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN LESS THAN 8 YEARS.**
- **CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN.**
- **ALWAYS USE THIS APPLIANCE ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.**
- **DO NOT USE THIS APPLIANCE OUTDOORS.**
- **IT IS IMPERATIVE TO UNPLUG THE POWER CORD AFTER THE APPLIANCE HAS BEEN USED, BEFORE IT IS CLEANED AND WHILST BEING REPAIRED.**
- **REGULAR, PERIODIC CHECKS SHOULD BE CARRIED OUT ON THE SUPPLY CORD TO ENSURE NO DAMAGE IS EVIDENT. SHOULD THERE BE ANY SIGNS OF DAMAGE THE APPLIANCE SHOULD NOT BE USED.**
- **IF THE SUPPLY CORD IS DAMAGED IT IS TO BE REPLACED BY QUALIFIED PERSONNEL IN ORDER TO AVOID A HAZARD.**
- **DO NOT OPERATE THIS APPLIANCE WITH A DAMAGED PLUG OR CORD, AFTER A MALFUNCTION OR AFTER BEING DROPPED OR DAMAGED IN ANY WAY.**
- **DO NOT ALLOW THE MAINS CABLE TO HANG OVER SHARP EDGES OR COME IN CONTACT WITH HOT SURFACES.**
- **ALLOW THE APPLIANCE TO COOL BEFORE STORAGE.**
- **NEVER PLACE THE APPLIANCE NEAR TO FLAMMABLE MATERIAL OR HIGH PRESSURE CONTAINERS.**
- **THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY AND SHOULD NOT BE USED FOR INDUSTRIAL OR COMMERCIAL PURPOSES.**
- **DO NOT USE ANY ACCESSORIES OR ATTACHMENTS WITH THIS APPLIANCE OTHER THAN THOSE SUPPLIED OR RECOMMENDED BY SUPPLIER.**
- **DO NOT USE THIS APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- **DO NOT PUSH OBJECTS INTO ANY OPENINGS AS DAMAGE TO THE APPLIANCE AND/OR ELECTRIC SHOCK MAY OCCUR.**
- **ENSURE APPLIANCE IS SITUATED IN AN OPEN AREA, DO NOT ALLOW IT TO COME IN CONTACT WITH CUPBOARDS, CURTAINS, WALL COVERINGS, CLOTHING OR OTHER FLAMMABLE MATERIALS.**
- **DO NOT TOUCH ANY SECTIONS OF THE APPLIANCE THAT MAY BECOME HOT OR THE HEATING COMPONENTS OF THE APPLIANCE, AS THIS COULD CAUSE INJURY TO THE USER.**
- **UNPLUG AFTER EACH USE. GRASP THE PLUG, NOT THE CORD.**



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

- **DO NOT COVER THIS APPLIANCE.**
- **NEVER PLACE THIS APPLIANCE ON AN ELECTRIC, GAS, OR ANY OTHER TYPE OF HOB.**
- **DO NOT USE THIS APPLIANCE WITH AN EXTENSION LEAD.**
- **THE VEHICLE FUNCTION MUST ONLY OPERATE WHILE THE VEHICLE IS RUNNING. ENSURE THE UNIT IS SWITCHED OFF AND THE VEHICLE POWER CORD IS UNPLUGGED ONCE THE VEHICLE STOPS.**

⚠ WARNING! THE STICKERS INCLUDED WITH THIS APPLIANCE ARE SMALL AND MAY POSE A CHOKING HAZARD. KEEP OUT OF REACH OF CHILDREN

EXPLANATION OF SYMBOLS

THE FOLLOWING WARNING SYMBOLS OR WORDS ARE USED IN THIS INSTRUCTION MANUAL:

 


PRODUCTS LABELLED WITH UK CONFORMITY ASSESSMENT IDENTIFIES PRODUCTS CONFORMING TO UK STATUTORY REQUIREMENTS.

PRODUCTS LABELLED WITH THIS SYMBOL CONFORM TO APPLICABLE PROVISIONS OF THE EUROPEAN ECONOMIC AREA.



THIS SYMBOL PROVIDES USEFUL ADDITIONAL INFORMATION ON THE USE OF THIS PRODUCT.

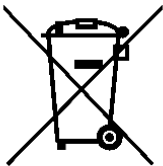

YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



WARNING!

THIS DESIGNATES A HAZARD WITH MODERATE RISK, WHICH MAY RESULT IN SEVERE INJURY OR DEATH IF NOT ADHERED TO.

- **PLEASE NOTE: DO NOT USE THE MINI FRIDGE IN FRONT OF, NEAR OR BELOW COMBUSTIBLE MATERIALS SUCH AS PLASTICS, CURTAINS OR CUPBOARDS, ETC.**
- **DO NOT PLACE THE APPLIANCE AGAINST A WALL OR AGAINST OTHER APPLIANCES. LEAVE AT LEAST 10cm MINIMUM FREE SPACE ON THE BACK AND SIDES AND 10cm MINIMUM FREE SPACE ABOVE THE APPLIANCE.**
- **DO NOT PLACE ANYTHING ON TOP OF THE APPLIANCE.**

BEFORE FIRST USE OF YOUR MINI FRIDGE

REMOVE ALL PACKING MATERIALS INSIDE THE MINI FRIDGE AND DISCARD RESPONSIBLY.


BEFORE USING THE MINI FRIDGE FOR THE FIRST TIME, WIPE OVER THE UNIT AND INTERNAL COMPARTMENTS USING A SOFT, CLEAN DAMP CLOTH AND DRY WITH A CLOTH OR PAPER TOWEL.



WHILST USING YOUR MINI FRIDGE FOR THE FIRST TIME IT MAY EMIT A LITTLE SMOKE AND ODOUR WHICH WILL SOON PASS. THIS IS THE PROTECTIVE COATING APPLIED TO ELEMENTS DURING TRANSIT AND DOES NOT AFFECT YOUR APPLIANCE.

ENSURE ALL PARTS ARE PRESENT (IF APPLICABLE) SEE DESCRIPTION OF PARTS BELOW.

DESCRIPTION OF PARTS

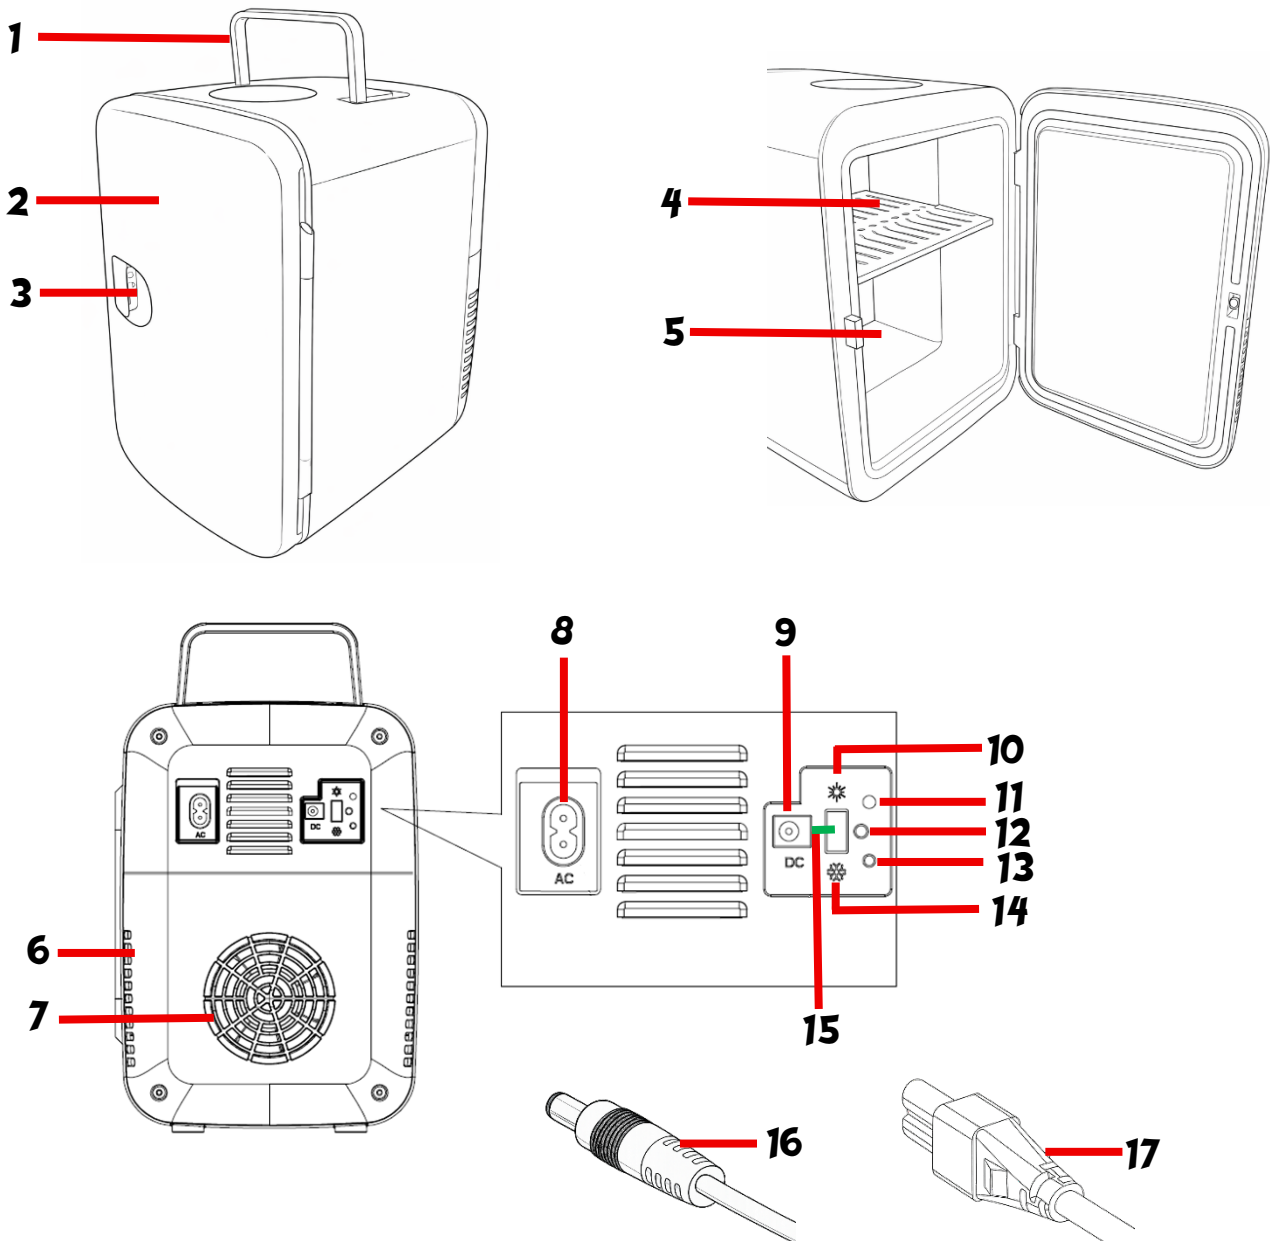

- 1. CARRY HANDLE**
- 2. DOOR**
- 3. DOOR HANDLE**
- 4. SHELF**
- 5. INNER COMPARTMENT**
- 6. AIR INLET**
- 7. AIR OUTLET**
- 8. AC PORT**

- 9. DC PORT**
- 10. HEATING MODE**
- 11. HEATING INDICATOR LIGHT**
- 12. OFF POSITION**
- 13. COOLING INDICATOR LIGHT**
- 14. COOLING MODE**
- 15. OFF/MODE SELECTION SWITCH**
- 16. DC ADAPTOR**
- 17. AC ADAPTOR**



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

 
INSTRUCTIONS FOR USE

1. PLACE THE MINI FRIDGE ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.
2. BEFORE PLUGGING IN THE MINI FRIDGE, ENSURE THAT THE OFF / MODE SELECTION SWITCH (15) IS SET TO OFF POSITION (12).

❗ THIS MINI FRIDGE IS SUITABLE FOR USE IN THE HOUSEHOLD AND INSIDE VEHICLES. ENSURE THE CORRECT POWER CORD IS USED.

FOR HOUSEHOLD USE:


- INSERT THE AC ADAPTOR (17) INTO THE AC PORT (8)
- INSERT THE PLUG (WITH DRY HANDS) INTO THE MAINS SOCKET AND SWITCH THE SOCKET ON (IF APPLICABLE).

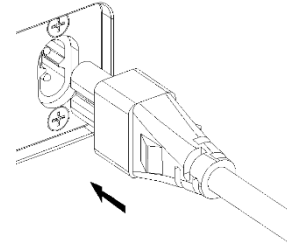

FOR VEHICLE USE:

VEHICLE/CAR ENGINES MUST BE TURNED ON FIRST BEFORE PLUGGING IN THE MINI FRIDGE. THIS PRECAUTION PREVENTS A POWER SURGE THAT CAN LEAD TO THE UNIT OVERHEATING AND/OR BECOMING A POTENTIAL FIRE RISK.

- INSERT THE DC ADAPTOR (16) INTO THE DC PORT (9)
- INSERT THE DC PLUG INTO AN APPROPRIATE 12V SOCKET.

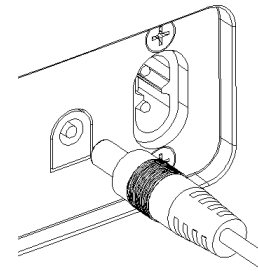

3. FOR COOLING, TURN THE OFF/MODE SELECTION SWITCH (15) TO COOLING MODE (14). THE COOLING INDICATOR LIGHT (13) WILL ILLUMINATE GREEN TO INDICATE THE UNIT IS IN OPERATION. ALLOW 2 HOURS TO REACH CORRECT TEMPERATURE BEFORE PLACING ANYTHING INSIDE.
 4. FOR HEATING, TURN THE OFF/MODE SELECTION SWITCH (15) TO HEATING MODE (10). THE HEATING INDICATOR LIGHT (11) WILL ILLUMINATE RED TO INDICATE THE UNIT IS IN OPERATION. ALLOW 2 HOURS TO REACH CORRECT TEMPERATURE BEFORE PLACING ANYTHING INSIDE.
- ❗ AFTER DRINKS/FOOD HAVE BEEN PLACED INSIDE THE MINI FRIDGE, ENSURE THE DOOR (2) IS FULLY CLOSED.
- ❗ THE MAXIMUM CAPACITY IS 4L, THE APPLIANCE CAN HOLD A MAXIMUM OF 6 X 330ML. THE SHELF (4) CAN BE REMOVED TO ALLOW A LARGER BOTTLE TO FIT INSIDE.
5. TO TURN THE MINI FRIDGE OFF, TURN THE OFF/MODE SELECTION SWITCH (15) TO THE OFF POSITION (12). UNPLUG THE MINI FRIDGE FROM THE MAINS POWER SUPPLY/12V SOCKET.

⚠ WARNING! WHEN SWITCHING BETWEEN HEATING MODE (10) AND COOLING MODE (14), FIRST SET THE OFF/MODE SELECTION SWITCH (15) TO THE OFF POSITION (12). WAIT 15 MINUTES BEFORE CHANGING MODES. DO NOT SWITCH DIRECTLY BETWEEN COOLING MODE (14) AND HEATING MODE (10) AS THIS MAY DAMAGE THE COOLING SYSTEM DUE TO RAPID TEMPERATURE CHANGE



ADDITIONAL USAGE INFORMATION

- AMBIENT TEMPERATURE AND SURROUNDING AIR CIRCULATION AFFECT THE COOLING SPEED AND OPERATING TEMPERATURE OF THE APPLIANCE.
- THE APPLIANCE COOLS TO A TEMPERATURE AT LEAST **15°C** BELOW THE AMBIENT TEMPERATURE. FOR EXAMPLE, IF THE AMBIENT TEMPERATURE IS **27°C**, THE INTERNAL TEMPERATURE WILL REACH APPROXIMATELY **12°C** WHEN SET TO COLD MODE.
- THE IDEAL AMBIENT TEMPERATURE FOR THE APPLIANCE TO PERFORM IS BETWEEN **20-25°C**.
- THIS APPLIANCE USES A SEMICONDUCTOR REFRIGERATION TECHNOLOGY, AND NOT A COMPRESSOR COOLING SYSTEM. THEREFORE, TO REACH **0°C** OR HAVE THE SAME COOLING PERFORMANCE IS NOT POSSIBLE.
- HEATING TEMPERATURE RANGE **55°C +/- 10°C**
- THE TEMPERATURE OF NEWLY STORED ITEMS AND THE FREQUENCY OF DOOR OPENING AFFECT THE INTERNAL COMPARTMENT TEMPERATURE. ADJUST THE TEMPERATURE SETTING IF REQUIRED.
- WHEN THE APPLIANCE IS SWITCHED ON FOR THE FIRST TIME, ALLOW IT TO OPERATE CONTINUOUSLY FOR **2 HOURS** TO REACH THE REQUIRED COOLING OR HEATING TEMPERATURE.
- DURING THIS PERIOD, AVOID FREQUENT DOOR OPENING AND DO NOT PLACE A LARGE NUMBER OF ITEMS INSIDE THE APPLIANCE.
- IF THE UNIT IS SWITCHED OFF OR UNPLUGGED, WAIT AT LEAST **5 MINUTES** BEFORE RESTARTING OR RECONNECTING THE APPLIANCE.
- THIS APPLIANCE IS SUITABLE TO USE IN HOUSEHOLD OR INSIDE A VEHICLE, ENSURE THE CORRECT POWER CORD IS USED.
- OBJECTS SUITABLE FOR COOLING: STORE FRUITS, BOTTLED OR CANNED DRINKS, TEA, MEDICINES, AND COSMETICS
- OBJECTS **NOT** SUITABLE FOR COOLING: FROZEN FOODS SUCH AS ICE CREAM, CHEMICAL REAGENTS, OR RAW MEAT.

⚠ WARNING! THE STICKERS INCLUDED WITH THIS APPLIANCE ARE SMALL AND MAY POSE A CHOKING HAZARD. KEEP OUT OF REACH OF CHILDREN

⚠ WARNING! HIGH TACK PERMANENT STICKER. CANNOT BE REMOVED OR REPOSITIONED ONCE APPLIED.

CLEANING YOUR MINI FRIDGE

- ALWAYS UNPLUG THE MINI FRIDGE FROM THE POWER SUPPLY BEFORE CLEANING.
 - ALLOW THE APPLIANCE TO COOL BEFORE CLEANING.
 - DO NOT CLEAN ANY PART OF YOUR MINI FRIDGE IN A DISHWASHER.
 - DO NOT SUBMERGE ANY PART OF THE MAIN BODY OR MAINS CABLE IN WATER OR ANY OTHER LIQUIDS.
 - WIPE EXCESS OIL FROM THE MINI FRIDGE WITH KITCHEN ROLL OR SIMILAR.
 - CLEAN THE SHELF (4) OF THE MINI FRIDGE IN WARM, SOAPY WATER AND DRY THOROUGHLY.
 - WIPE CLEAN THE OUTSIDE OF THE MAIN BODY WITH A SOFT DAMP CLOTH.
 - NEVER CLEAN ANY PART OF THE MINI FRIDGE WITH HARSH OR ABRASIVE CLEANERS.
- i** IF THE MINI FRIDGE IS NOT USED FOR A LENGTHY PERIOD OF TIME (IE. HOLIDAYS), CLEAN THE UNIT AND LEAVE THE DOOR (2) OPEN TO PREVENT HUMIDITY AND BAD ODOURS.



TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
THE APPLIANCE DOES NOT WORK	POWER SUPPLY ISSUE OR APPLIANCE NOT SWITCHED ON	ENSURE THE APPLIANCE IS SWITCHED ON. CHECK FOR A POWER CUT. CHECK THE PLUG FOR DAMAGE. CHECK IF THE FUSE HAS BLOWN. ENSURE THE SUPPLY VOLTAGE MATCHES THE APPLIANCE RATING.
THE TEMPERATURE INSIDE THE APPLIANCE IS NOT COLD ENOUGH	INCORRECT SETTINGS, OVERFILLING, OR UNSUITABLE OPERATING CONDITIONS	ENSURE THE APPLIANCE IS NOT OVERFILLED. SET THE UNIT TO COOLING MODE AND NOT OFF OR HEATING MODE. DO NOT PLACE THE APPLIANCE IN DIRECT SUNLIGHT OR NEAR A HEAT SOURCE. ENSURE THE AMBIENT TEMPERATURE IS WITHIN THE OPERATING RANGE. AVOID OPENING THE DOOR FREQUENTLY. ENSURE THE DOOR IS FULLY CLOSED AND THE DOOR GASKET IS CLEAN AND UNDAMAGED.
THE TEMPERATURE INSIDE THE APPLIANCE IS NOT HOT ENOUGH	INCORRECT TEMPERATURE MODE SELECTED	ENSURE THE APPLIANCE IS SET TO HEATING MODE AND NOT COOLING MODE.
INNER SURFACES OF THE APPLIANCE ARE WET	CONDENSATION INSIDE THE COMPARTMENT	DRY THE INSIDE OF THE APPLIANCE WITH A SOFT CLOTH.
OUTER SURFACES OF THE APPLIANCE ARE WET	CONDENSATION ON THE EXTERIOR SURFACE	CAREFULLY DRY THE OUTSIDE OF THE APPLIANCE.
UNUSUAL NOISES	APPLIANCE NOT LEVEL OR TOUCHING SURROUNDING OBJECTS	PLACE THE APPLIANCE ON A FLAT AND LEVEL SURFACE. ENSURE THERE IS SPACE AROUND THE APPLIANCE, AND IT IS NOT TOUCHING OTHER ITEMS.



NON-REWIREABLE MAINS PLUG

IF YOUR APPLIANCE IS SUPPLIED WITH A NON-REWIREABLE PLUG FITTED TO THE MAINS LEAD AND SHOULD THE FUSE NEED REPLACING, YOU MUST USE AN ASTA APPROVED ONE (CONFORMING TO BS 1362 OF THE SAME RATING).

NEVER USE A PLUG WITH THE FUSE COVER MISSING. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

IF YOU NEED TO REMOVE THE PLUG – **DISCONNECT FROM THE MAINS** – AND THEN CUT IT OFF THE MAINS LEAD AND IMMEDIATELY DISPOSE OF IT SAFELY. NEVER ATTEMPT TO REUSE THE PLUG OR INSERT IT INTO A SOCKET OUTLET AS THERE IS A DANGER OF ELECTRIC SHOCK.

TECHNICAL SPECIFICATION

MODEL NUMBER	SDA2964
RATED VOLTAGE	220-240V~, 50-60Hz, DC12V
RATED POWER	36W OR 26W
PROTECTION CLASS	II
ERP: POWER CONSUMPTION OF EQUIPMENT IN OFF MODE SHALL NOT EXCEED 0.50W	0.15 W
THIS EQUIPMENT COMPLIES WITH ANNEX III OF THE COMMISSION REGULATION (EU) 2023/826	



RECYCLING INFORMATION

DISPOSAL OF THE PACKAGING

DISPOSE OF PAPER AND CARDBOARD IN APPROPRIATE PAPER RE-CYCLING FACILITIES.

DISPOSE OF PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSE OF NON-RECYCLABLE PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSAL OF THE PRODUCT



YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



CUSTOMER SUPPORT

SHOULD YOU REQUIRE ANY PRODUCT INFORMATION, REPLACEMENT PARTS OR ACCESSORIES, PLEASE CONTACT OUR CUSTOMER CARE TEAM ON **0161 831 7879 (8.30AM-4.30PM MONDAY TO THURSDAY, 8.00AM-4.00PM FRIDAY)** AND SELECT OPTION **3** OR BY CONTACTING US VIA EMAIL **THEGRINCH@ESGLTD.COM**

- **REPLACEMENT PARTS AND ACCESSORIES ARE GUARANTEED FOR 1 YEAR FROM THE DATE OF PURCHASE.**
- **IT IS IMPORTANT TO NOTE THAT YOUR WARRANTY BECOMES INVALID SHOULD NON GRINCH PARTS OR ACCESSORIES BE USED WITH THIS APPLIANCE.**



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved

The GRINCH™

Dr. Seuss™



WARRANTY

Thank you for purchasing your Grinch product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Grinch product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty * please email the model number and your receipt to :

thegrinch@esg ltd.com

****Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.***

TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

Produced and imported under licence by Euro Group Ltd.
Brightgate House, 1 Brightgate Way, Manchester, M32 0TB, UK.
EU Rep: EuroSonic Magppie (ESM) Ltd. D05 X006, Ireland.
Made in China

www.esg ltd.com