

The
GRINCH
Dr. Seuss



CHOCOLATE FOUNTAIN

A fountain of choc-tastic festive cheer!

SDA2956GE

READING AND STORING THE USER MANUAL



BEFORE USING THIS PRODUCT, PLEASE READ THROUGH THIS MANUAL CAREFULLY PAYING PARTICULAR ATTENTION TO THE SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE PRODUCT.

CAREFULLY SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE. ENSURE THE USER MANUAL IS INCLUDED WHEN PASSING THE PRODUCT ON TO ANY THIRD PARTIES.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

ONLY USE THE PRODUCT AS DESCRIBED IN THIS USER MANUAL. ANY OTHER USE IS CONSIDERED IMPROPER AND MAY RESULT IN DAMAGE TO PROPERTY OR PERSONS.

THE MANUFACTURER OR VENDOR CANNOT BE HELD LIABLE FOR DAMAGES OR INJURY INCURRED THROUGH IMPROPER OR INCORRECT USE.

- **READ AND FAMILIARISE YOURSELF WITH ALL OPERATING INSTRUCTIONS BEFORE USING THIS CHOCOLATE FOUNTAIN.**
- **BEFORE PLUGGING YOUR APPLIANCE INTO THE MAINS, VISUALLY CHECK THAT IT IS INTACT AND HAS NOT SUFFERED ANY TRANSIT DAMAGE.**
- **CHECK THAT THE VOLTAGE INDICATED ON THE DATA PLATE CORRESPONDS WITH THAT OF THE LOCAL NETWORK BEFORE CONNECTING THE APPLIANCE TO THE MAINS POWER SUPPLY.**
- **DO NOT** USE THIS PRODUCT WITH A PROGRAMMER, TIMER, SEPARATE REMOTE-CONTROL SYSTEM OR ANY OTHER SUCH DEVICE.
- **DO NOT** IMMERSE THIS APPLIANCE IN WATER OR ANY OTHER LIQUIDS.
- **COOKING APPLIANCES SHOULD BE POSITIONED IN A STABLE SITUATION WITH THE HANDLES (IF ANY) POSITIONED TO AVOID SPILLAGE OF LIQUIDS.**
- **DO NOT** TOUCH HOT SURFACES. ACCESSIBLE SURFACES ARE LIABLE TO GET HOT DURING USE. ALWAYS USE THE HANDLE.
- **OVEN GLOVES SHOULD BE USED WHILST USING THE APPLIANCE.**
- **HOT STEAM MAY BE RELEASED WHEN OPENING AND CLOSING THE APPLIANCE DURING USE — RISK OF SCALDING!**
- **AVOID MOVING THE APPLIANCE WHILST IT IS STILL HOT OR CONTAINS HOT FOOD.**
- **TURN THE APPLIANCE OFF AND DISCONNECT FROM THE MAINS AND LET IT COOL SUFFICIENTLY BEFORE MOVING IT.**
- **CLOSE SUPERVISION IS REQUIRED WHEN USING THIS APPLIANCE NEAR CHILDREN.**
- **NEVER LEAVE THIS APPLIANCE WITHIN REACH OF CHILDREN.**
- **THIS APPLIANCE SHALL NOT BE USED BY CHILDREN FROM 0 TO 8 YEARS.**





- **THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.**
- **CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.**
- **KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN LESS THAN 8 YEARS.**
- **CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED DURING USE.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST CONNECTED TO THE MAINS SUPPLY.**
- **ALWAYS USE THIS APPLIANCE ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.**
- **DO NOT USE THIS APPLIANCE OUTDOORS.**
- **IT IS IMPERATIVE TO UNPLUG THE POWER CORD AFTER THE APPLIANCE HAS BEEN USED, BEFORE IT IS CLEANED AND WHILST BEING REPAIRED.**
- **REGULAR, PERIODIC CHECKS SHOULD BE CARRIED OUT ON THE SUPPLY CORD TO ENSURE NO DAMAGE IS EVIDENT. SHOULD THERE BE ANY SIGNS OF DAMAGE THE APPLIANCE SHOULD NOT BE USED.**
- **IF THE SUPPLY CORD IS DAMAGED IT IS TO BE REPLACED BY QUALIFIED PERSONNEL IN ORDER TO AVOID A HAZARD.**
- **DO NOT OPERATE THIS APPLIANCE WITH A DAMAGED PLUG OR CORD, AFTER A MALFUNCTION OR AFTER BEING DROPPED OR DAMAGED IN ANY WAY.**
- **DO NOT ALLOW THE MAINS CABLE TO HANG OVER SHARP EDGES OR COME IN CONTACT WITH HOT SURFACES.**
- **ALLOW THE APPLIANCE TO COOL BEFORE STORAGE.**
- **NEVER PLACE THE APPLIANCE NEAR TO FLAMMABLE MATERIAL OR HIGH PRESSURE CONTAINERS.**
- **THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY AND SHOULD NOT BE USED FOR INDUSTRIAL PURPOSES.**
- **DO NOT USE ANY ACCESSORIES OR ATTACHMENTS WITH THIS APPLIANCE OTHER THAN THOSE SUPPLIED OR RECOMMENDED BY SUPPLIER.**
- **DO NOT USE THIS APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- **DO NOT PUSH OBJECTS INTO ANY OPENINGS AS DAMAGE TO THE APPLIANCE AND/OR ELECTRIC SHOCK MAY OCCUR.**



- **ENSURE APPLIANCE IS SITUATED IN AN OPEN AREA, DO NOT ALLOW IT TO COME IN CONTACT WITH CUPBOARDS, CURTAINS, WALL COVERINGS, CLOTHING OR OTHER FLAMMABLE MATERIALS.**
- **DO NOT TOUCH ANY SECTIONS OF THE APPLIANCE THAT MAY BECOME HOT OR THE HEATING COMPONENTS OF THE APPLIANCE, AS THIS COULD CAUSE INJURY TO THE USER.**
- **UNPLUG AFTER EACH USE. GRASP THE PLUG, NOT THE CORD.**
- **DO NOT COVER THIS APPLIANCE.**
- **NEVER PLACE THIS APPLIANCE ON AN ELECTRIC, GAS, OR ANY OTHER TYPE OF HOB.**
- **ENSURE ADEQUATE VENTILATION WHILST COOKING FOODS THAT ARE PRONE TO GIVING OFF SMOKE.**
- **ALWAYS USE THE APPLIANCE ON A STABLE, HEAT RESISTANT SURFACE, AT A HEIGHT THAT IS COMFORTABLE FOR THE USER.**
- **THIS APPLIANCE SHOULD NOT BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE CONTROL SYSTEM.**
- **THIS APPLIANCE IS FOR DOMESTIC USE ONLY. IT SHOULD NOT BE USED FOR COMMERCIAL PURPOSES ONLY.**
- **DO NOT USE THIS APPLIANCE WITH AN EXTENSION LEAD.**
- ** **WARNING!** DO NOT ATTEMPT TO MOVE THE CHOCOLATE FOUNTAIN WHILST IT IS HOT.**

THIS APPLIANCE MUST BE EARTHED

EXPLANATION OF SYMBOLS

THE FOLLOWING WARNING SYMBOLS OR WORDS ARE USED IN THIS INSTRUCTION MANUAL:



PRODUCTS LABELLED WITH UK CONFORMITY ASSESSMENT IDENTIFIES PRODUCTS CONFORMING TO UK STATUTORY REQUIREMENTS.

PRODUCTS LABELLED WITH THIS SYMBOL CONFORM TO APPLICABLE PROVISIONS OF THE EUROPEAN ECONOMIC AREA.



THIS SYMBOL PROVIDES USEFUL ADDITIONAL INFORMATION ON THE USE OF THIS PRODUCT.



YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



WARNING!

THIS DESIGNATES A HAZARD WITH MODERATE RISK, WHICH MAY RESULT IN SEVERE INJURY OR DEATH IF NOT ADHERED TO.

- **PLEASE NOTE:** Do NOT USE THE CHOCOLATE FOUNTAIN IN FRONT OF, NEAR OR BELOW COMBUSTIBLE MATERIALS SUCH AS PLASTICS, CURTAINS OR CUPBOARDS, ETC.
- Do NOT PLACE THE APPLIANCE AGAINST A WALL OR AGAINST OTHER APPLIANCES. LEAVE AT LEAST 10cm MINIMUM FREE SPACE ON THE BACK AND SIDES AND 10cm MINIMUM FREE SPACE ABOVE THE APPLIANCE.
- Do NOT PLACE ANYTHING ON TOP OF THE APPLIANCE.

BEFORE FIRST USE OF YOUR CHOCOLATE FOUNTAIN

REMOVE ALL PACKING MATERIALS INCLUDING IN BETWEEN THE PLATES INSIDE THE CHOCOLATE FOUNTAIN AND DISCARD RESPONSIBLY.

BEFORE USING THE CHOCOLATE FOUNTAIN FOR THE FIRST TIME, WIPE OVER BOTH COOKING PLATES USING A SOFT, CLEAN DAMP CLOTH AND DRY WITH A CLOTH OR PAPER TOWEL.



WHILST USING YOUR CHOCOLATE FOUNTAIN FOR THE FIRST TIME IT MAY EMIT A LITTLE SMOKE AND ODOUR WHICH WILL SOON PASS. THIS IS THE PROTECTIVE COATING APPLIED TO ELEMENTS DURING TRANSIT AND DOES NOT AFFECT YOUR APPLIANCE.

ENSURE ALL PARTS ARE PRESENT (IF APPLICABLE) SEE DESCRIPTION OF PARTS BELOW.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

DESCRIPTION OF PARTS

 


- 1. CHOCOLATE FOUNTAIN MAIN UNIT**
- 2. CHOCOLATE BOWL**
- 3. 3-TIER TOWER**
- 4. TOWER SUPPORT BASE**


- 5. INDICATOR LIGHT**
- 6. CONTROL DIAL**
- 7. BASE**
- 8. AUGER**

ASSEMBLING THE CHOCOLATE FOUNTAIN

- ENSURE THE CHOCOLATE FOUNTAIN IS NOT CONNECTED TO THE MAINS.
- PLACE THE CHOCOLATE FOUNTAIN ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.
- INSERT THE AUGER (8) INTO THE MOTOR SPINDLE FOUND IN THE CENTRE OF THE CHOCOLATE BOWL (2). ROTATE THE AUGER SLIGHTLY BACK AND FORTH UNTIL IT DROPS FULLY INTO PLACE OVER THE MOTOR SPINDLE.

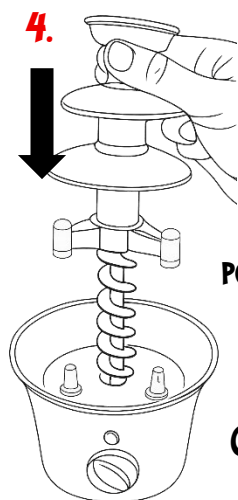

 - POSITION THE TOWER SUPPORT BASE (4) AND 3-TIER TOWER (3) ONTO THE THREE PINS IN THE CHOCOLATE BOWL.
- CHECK THAT THE TOWER ASSEMBLY IS PROPERLY ALIGNED AND STABLE BEFORE OPERATING THE APPLIANCE.
- ENSURE THE CONTROL DIAL (6) IS SET TO THE 'OFF' POSITION. INSERT THE PLUG INTO MAINS POWER SUPPLY.

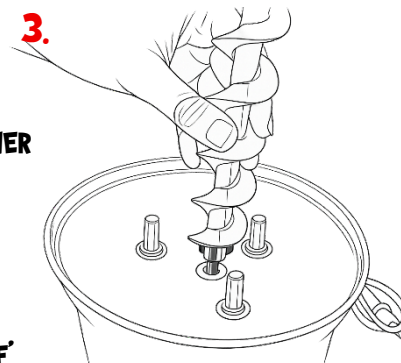

- TURN THE CONTROL DIAL (6) TO THE 'HEAT MOTOR' POSITION TO CHECK THAT THE AUGER IS MOVING FREELY.
- FIT THE BASE TRAY (7) AROUND THE BOTTOM OF THE CHOCOLATE FOUNTAIN MAIN UNIT (1). ENSURE THE GAP IN THE TRAY ALIGNS WITH THE POWER CABLE.

 
CHOOSING THE CHOCOLATE

THE CHOCOLATE FOUNTAIN WILL WORK WITH MOST TYPES OF CHOCOLATE, PARTICULARLY THOSE WITH A HIGH COCOA BUTTER CONTENT, AS THESE MELT SMOOTHLY AND FLOW WELL THROUGH THE FOUNTAIN. CHOCOLATE SUCH AS BELGIAN OR COUVERTURE CHOCOLATE USUALLY REQUIRES LITTLE OR NO ADDITIONAL OIL.

MILK, DARK, AND COOKING CHOCOLATES WILL ALSO WORK WELL BUT MAY NEED TO BE THINNED WITH A SMALL AMOUNT OF VEGETABLE OR SUNFLOWER OIL TO ACHIEVE A SMOOTH, FLOWING CONSISTENCY. ADD ONLY A SMALL AMOUNT AT A TIME UNTIL THE DESIRED CONSISTENCY IS REACHED.

INSTRUCTIONS FOR USE

1. PLACE THE CHOCOLATE FOUNTAIN ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.
2. ENSURE THE CHOCOLATE FOUNTAIN IS ASSEMBLED CORRECTLY AS DESCRIBED IN THE SECTION ABOVE.
3. ADD CHOCOLATE PIECES TO THE CHOCOLATE BOWL (2). FILL IT JUST BELOW THE RIM, TAKING CARE NOT TO OVERFILL
4. INSERT THE PLUG (WITH DRY HANDS) INTO THE MAINS SOCKET AND SWITCH THE SOCKET ON (IF APPLICABLE).
5. ROTATE THE CONTROL DIAL (6) TO THE 'HEAT' POSITION AND ALLOW THE CHOCOLATE TO FULLY MELT, STIRRING OCCASIONALLY.
6. THE INDICATOR LIGHT (5) WILL ILLUMINATE, INDICATING THE APPLIANCE IS IN OPERATION.

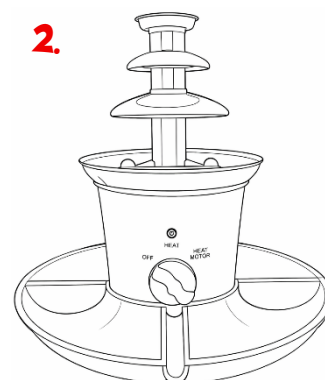




7. AFTER THE CHOCOLATE HAS MELTED, ROTATE THE CONTROL DIAL (6) TO THE 'HEAT MOTOR' POSITION. THE MELTED CHOCOLATE WILL BE DRAWN UP TO THE TOP OF THE CHOCOLATE FOUNTAIN BY THE ROTATING AUGER (8) AND FLOW OVER THE 3 TIER TOWER (3) SECTION.

8. IF THE CHOCOLATE IS TOO THICK TO FLOW SMOOTHLY, ADD A LITTLE VEGETABLE OR SUNFLOWER OIL (IF REQUIRED) AND MIX THOROUGHLY UNTIL THE CHOCOLATE IS A SMOOTH CONSISTENCY.

9. ONCE THE CHOCOLATE IS CASCADING SMOOTHLY, FOOD CAN BE DIPPED INTO THE MELTED CHOCOLATE.

 WARNING! DO NOT MOVE THE APPLIANCE WHILST IT IS IN USE.

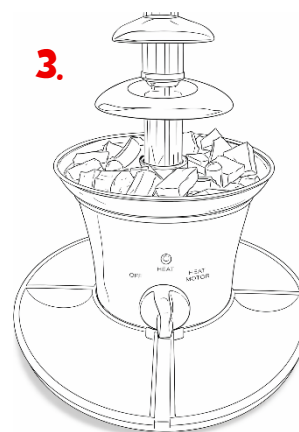

CLEANING YOUR CHOCOLATE FOUNTAIN

- ALWAYS UNPLUG THE CHOCOLATE FOUNTAIN FROM THE MAINS POWER SUPPLY BEFORE CLEANING.
- ALLOW THE APPLIANCE TO COOL BEFORE CLEANING.
- DO NOT CLEAN ANY PART OF YOUR CHOCOLATE FOUNTAIN IN A DISHWASHER.
- DO NOT SUBMERGE ANY PART OF THE MAIN BODY OR MAINS CABLE IN WATER OR ANY OTHER LIQUIDS.
- WIPE EXCESS OIL FROM THE CHOCOLATE BOWL (2), WITH KITCHEN ROLL OR SIMILAR.
- CLEAN THE 3-TIER TOWER (3), BASE (7), AND AUGER (8) OF THE CHOCOLATE FOUNTAIN IN WARM, SOAPY WATER AND DRY THOROUGHLY.
- DO NOT CLEAN ANY PART OF YOUR CHOCOLATE FOUNTAIN IN A DISHWASHER.
- WIPE CLEAN THE OUTSIDE OF THE MAIN BODY WITH A SOFT DAMP CLOTH.
- NEVER CLEAN ANY PART OF THE CHOCOLATE FOUNTAIN WITH HARSH OR ABRASIVE CLEANERS.

i DO NOT POUR EXCESS CHOCOLATE DOWN THE SINK AS MELTRED CHOCOLATE SOLIDIFEDS, WHEN ITS COOLS AND COULD BLOCK THE DRAIN

NON-REWIREABLE MAINS PLUG

IF YOUR APPLIANCE IS SUPPLIED WITH A NON-REWIREABLE PLUG FITTED TO THE MAINS LEAD AND SHOULD THE FUSE NEED REPLACING, YOU MUST USE AN ASTA APPROVED ONE (CONFORMING TO BS 1362 OF THE SAME RATING). NEVER USE A PLUG WITH THE FUSE COVER MISSING. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

IF YOU NEED TO REMOVE THE PLUG – **DISCONNECT FROM THE MAINS** – AND THEN CUT IT OFF THE MAINS LEAD AND IMMEDIATELY DISPOSE OF IT SAFELY. NEVER ATTEMPT TO REUSE THE PLUG OR INSERT IT INTO A SOCKET OUTLET AS THERE IS A DANGER OF ELECTRIC SHOCK.

TECHNICAL SPECIFICATION

MODEL NUMBER	SDA2956
RATED VOLTAGE	220-240V~ 50-60Hz
RATED POWER	70W
PROTECTION CLASS	I (THIS APPLIANCE MUST BE EARTHED)
ERP: POWER CONSUMPTION OF EQUIPMENT IN OFF MODE SHALL NOT EXCEED 0.50W	0 W
THIS EQUIPMENT COMPLIES WITH ANNEX III OF THE COMMISSION REGULATION (EU) 2023/826	



TROUBLESHOOTING

<i>PROBLEM</i>	<i>CAUSE</i>	<i>SOLUTION</i>
THE CHOCOLATE IS VERY THICK.	NOT ENOUGH OIL HAS BEEN ADDED TO THE CHOCOLATE.	ADD SMALL AMOUNT OF VEGETABLE/SUNFLOWER OIL AND STIR UNTIL THE CHOCOLATE REACHES A SMOOTHER CONSISTENCY.
THERE IS AN UNEVEN FLOW OF CHOCOLATE.	THE CHOCOLATE FOUNTAIN BASE IS NOT LEVEL. THE CHOCOLATE IS NOT EVENLY DISTRIBUTED IN THE BOWL.	PLACE THE FOUNTAIN ON A FLAT, LEVEL SURFACE. STIR THE CHOCOLATE IN THE BOWL SO IT IS EVENLY DISTRIBUTED.
THERE IS AN INTERMITTENT FLOW OF CHOCOLATE.	THERE MAY BE BLOCKAGES AT THE BASE OF THE 3-TIER TOWER.	SWITCH OFF THE APPLIANCE AND UNPLUG FROM THE MAINS. REMOVE THE TOWER AND CHECK FOR BLOCKAGES. CLEAN IF NECESSARY BEFORE REASSEMBLING.
THE CHOCOLATE IS LUMPY	THE CHOCOLATE HAS BEEN BURNT OR OVERHEATED.	SWITCH OFF THE APPLIANCE AND REPLACE THE CHOCOLATE WITH FRESHLY MELTED CHOCOLATE.

RECYCLING INFORMATION

DISPOSAL OF THE PACKAGING

DISPOSE OF PAPER AND CARDBOARD IN APPROPRIATE PAPER RE-CYCLING FACILITIES.

DISPOSE OF PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSE OF NON-RECYCLABLE PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSAL OF THE PRODUCT



YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



CUSTOMER SUPPORT

SHOULD YOU REQUIRE ANY PRODUCT INFORMATION, REPLACEMENT PARTS OR ACCESSORIES, PLEASE CONTACT OUR CUSTOMER CARE TEAM ON **0161 831 7879 (8.30AM-4.30PM MONDAY TO THURSDAY, 8.00AM-4.00PM FRIDAY)** AND SELECT OPTION **3** OR BY CONTACTING US VIA EMAIL **THEGRINCH@ESGLTD.COM**

- **REPLACEMENT PARTS AND ACCESSORIES ARE GUARANTEED FOR 1 YEAR FROM THE DATE OF PURCHASE.**
- **IT IS IMPORTANT TO NOTE THAT YOUR WARRANTY BECOMES INVALID SHOULD NON GRINCH PARTS OR ACCESSORIES BE USED WITH THIS APPLIANCE.**



 
TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved

The GRINCH™

Dr. Seuss™

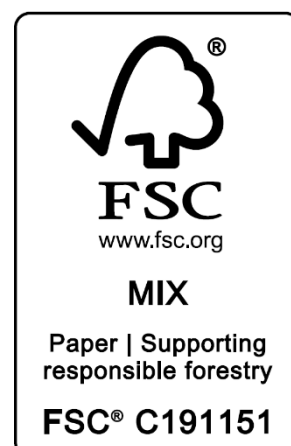

WARRANTY

Thank you for purchasing your Grinch product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Grinch product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty * please email the model number and your receipt to :

thegrinch@esg ltd.com

****Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.***

TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

Produced and imported under licence by Euro Group Ltd.
Brightgate House, 1 Brightgate Way, Manchester, M32 0TB, UK.
EU Rep: EuroSonic Magppie (ESM) Ltd. D05 X006, Ireland.
Made in China

www.esg ltd.com