

The
GRINCH
Dr. Seuss



CANDY FLOSS MAKER

Spin up some sugary cheer and let your heart grow three sizes this year!

SDA2957GE



READING AND STORING THE USER MANUAL



BEFORE USING THIS PRODUCT, PLEASE READ THROUGH THIS MANUAL CAREFULLY PAYING PARTICULAR ATTENTION TO THE SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE PRODUCT.

CAREFULLY SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE. ENSURE THE USER MANUAL IS INCLUDED WHEN PASSING THE PRODUCT ON TO ANY THIRD PARTIES.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

ONLY USE THE PRODUCT AS DESCRIBED IN THIS USER MANUAL. ANY OTHER USE IS CONSIDERED IMPROPER AND MAY RESULT IN DAMAGE TO PROPERTY OR PERSONS.

THE MANUFACTURER OR VENDOR CANNOT BE HELD LIABLE FOR DAMAGES OR INJURY INCURRED THROUGH IMPROPER OR INCORRECT USE.

- **READ AND FAMILIARISE YOURSELF WITH ALL OPERATING INSTRUCTIONS BEFORE USING THIS CANDY FLOSS MAKER**
- **BEFORE PLUGGING YOUR UNIT INTO THE MAINS, VISUALLY CHECK THAT IT IS INTACT AND HAS NOT SUFFERED ANY TRANSIT DAMAGE.**
- **CHECK THAT THE VOLTAGE INDICATED ON THE DATA PLATE CORRESPONDS WITH THAT OF THE LOCAL NETWORK BEFORE CONNECTING THE APPLIANCE TO THE MAINS POWER SUPPLY.**
- **DO NOT USE THIS PRODUCT WITH A PROGRAMMER, TIMER, SEPARATE REMOTE-CONTROL SYSTEM OR ANY OTHER SUCH DEVICE.**
- **DO NOT IMMERSE THIS APPLIANCE IN WATER OR ANY OTHER LIQUIDS.**
- **COOKING APPLIANCES SHOULD BE POSITIONED IN A STABLE SITUATION WITH THE HANDLES (IF ANY) POSITIONED TO AVOID SPILLAGE OF LIQUIDS.**
- **DO NOT TOUCH HOT SURFACES. ACCESSIBLE SURFACES ARE LIABLE TO GET HOT DURING USE. ALWAYS USE THE HANDLE.**
- **AVOID MOVING THE APPLIANCE WHILST IT IS STILL HOT OR CONTAINS HOT FOOD.**
- **TURN THE APPLIANCE OFF AND DISCONNECT FROM THE MAINS AND LET IT COOL SUFFICIENTLY BEFORE MOVING IT.**
- **CLOSE SUPERVISION IS REQUIRED WHEN USING THIS APPLIANCE NEAR CHILDREN.**
- **NEVER LEAVE THIS APPLIANCE WITHIN REACH OF CHILDREN.**
- **THIS APPLIANCE SHALL NOT BE USED BY CHILDREN FROM 0 TO 8 YEARS.**
- **THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE**



AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.

- **CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.**
- **KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN LESS THAN 8 YEARS.**
- **CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED DURING USE.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST CONNECTED TO THE MAINS SUPPLY.**
- **ALWAYS USE THIS APPLIANCE ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.**
- **DO NOT USE THIS APPLIANCE OUTDOORS.**
- **IT IS IMPERATIVE TO UNPLUG THE POWER CORD AFTER THE APPLIANCE HAS BEEN USED, BEFORE IT IS CLEANED AND WHILST BEING REPAIRED.**
- **REGULAR, PERIODIC CHECKS SHOULD BE CARRIED OUT ON THE SUPPLY CORD TO ENSURE NO DAMAGE IS EVIDENT. SHOULD THERE BE ANY SIGNS OF DAMAGE THE APPLIANCE SHOULD NOT BE USED.**
- **IF THE SUPPLY CORD IS DAMAGED IT IS TO BE REPLACED BY QUALIFIED PERSONNEL IN ORDER TO AVOID A HAZARD.**
- **DO NOT OPERATE THIS APPLIANCE WITH A DAMAGED PLUG OR CORD, AFTER A MALFUNCTION OR AFTER BEING DROPPED OR DAMAGED IN ANY WAY.**
- **DO NOT ALLOW THE MAINS CABLE TO HANG OVER SHARP EDGES OR COME IN CONTACT WITH HOT SURFACES.**
- **ALLOW THE UNIT TO COOL BEFORE STORAGE.**
- **NEVER PLACE THE APPLIANCE NEAR TO FLAMMABLE MATERIAL OR HIGH PRESSURE CONTAINERS.**
- **THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY AND SHOULD NOT BE USED FOR INDUSTRIAL PURPOSES.**
- **DO NOT USE ANY ACCESSORIES OR ATTACHMENTS WITH THIS APPLIANCE OTHER THAN THOSE SUPPLIED OR RECOMMENDED BY SUPPLIER.**
- **DO NOT USE THIS APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- **DO NOT PUSH OBJECTS INTO ANY OPENINGS AS DAMAGE TO THE APPLIANCE AND/OR ELECTRIC SHOCK MAY OCCUR.**
- **ENSURE APPLIANCE IS SITUATED IN AN OPEN AREA, DO NOT ALLOW IT TO COME IN**



CONTACT WITH CUPBOARDS, CURTAINS, WALL COVERINGS, CLOTHING OR OTHER FLAMMABLE MATERIALS.

- **UNPLUG AFTER EACH USE. GRASP THE PLUG, NOT THE CORD.**
- **DO NOT COVER THIS APPLIANCE.**
- **NEVER PLACE THIS APPLIANCE ON AN ELECTRIC, GAS, OR ANY OTHER TYPE OF HOB.**
- **ENSURE ADEQUATE VENTILATION WHILST COOKING FOODS THAT ARE PRONE TO GIVING OFF SMOKE.**
- **DO NOT USE THIS APPLIANCE WITH AN EXTENSION LEAD.**
- ** WARNING! DO NOT ATTEMPT TO MOVE THE CANDY FLOSS MAKER WHILST IT IS HOT.**



THIS APPLIANCE MUST BE EARTHED

EXPLANATION OF SYMBOLS

THE FOLLOWING WARNING SYMBOLS OR WORDS ARE USED IN THIS INSTRUCTION MANUAL:



 
PRODUCTS LABELLED WITH UK CONFORMITY ASSESSMENT IDENTIFIES PRODUCTS CONFORMING TO UK STATUTORY REQUIREMENTS.



PRODUCTS LABELLED WITH THIS SYMBOL CONFORM TO APPLICABLE PROVISIONS OF THE EUROPEAN ECONOMIC AREA.



THIS SYMBOL PROVIDES USEFUL ADDITIONAL INFORMATION ON THE USE OF THIS PRODUCT.

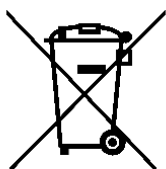

YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



THIS DESIGNATES A HAZARD WITH MODERATE RISK, WHICH MAY RESULT IN SEVERE INJURY OR DEATH IF NOT ADHERED TO.

- **PLEASE NOTE:** DO NOT USE THE CANDY FLOSS MAKER IN FRONT OF, NEAR OR BELOW COMBUSTIBLE MATERIALS SUCH AS PLASTICS, CURTAINS OR CUPBOARDS, ETC.
- DO NOT PLACE THE APPLIANCE AGAINST A WALL OR AGAINST OTHER APPLIANCES. LEAVE AT LEAST 10cm MINIMUM FREE SPACE ON THE BACK AND SIDES AND 10cm MINIMUM FREE SPACE ABOVE THE APPLIANCE.
- DO NOT PLACE ANYTHING ON TOP OF THE APPLIANCE.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

BEFORE FIRST USE OF YOUR CANDY FLOSS MAKER

REMOVE ALL PACKING MATERIALS INCLUDING INSIDE THE CANDY FLOSS MAKER AND DISCARD RESPONSIBLY.

BEFORE USING THE CANDY FLOSS MAKER FOR THE FIRST TIME, WIPE THE UNIT WITH A DAMP CLOTH AND DRY THOROUGHLY.

NEVER USE HARSH OR ABRASIVE CLEANING DETERGENTS OR SCOURERS TO CLEAN THE CANDY FLOSS MAKER, AND THIS COULD DAMAGE THE SURFACE.

i WHILST USING YOUR CANDY FLOSS MAKER FOR THE FIRST TIME IT MAY EMIT A LITTLE SMOKE AND ODOUR WHICH WILL SOON PASS. THIS IS THE PROTECTIVE COATING APPLIED TO ELEMENTS DURING TRANSIT AND DOES NOT AFFECT YOUR APPLIANCE.

ENSURE ALL PARTS ARE PRESENT (IF APPLICABLE) SEE DESCRIPTION OF PARTS BELOW.

DESCRIPTION OF PARTS



1. SPLASH GUARD
2. SUGAR INLET
3. SUGAR PAN (REMOVABLE)
4. CANDY FLOSS MAKER MAIN UNIT
5. ON/OFF SWITCH

 
6. RUBBER FEET
7. DRIVE SHAFT
8. HEATING ELEMENT (HIDDEN)
9. CANDY FLOSS BOWL
10. MEASURING SPOON
11. CANDY FLOSS STICKS (X5)



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.



ASSEMBLING YOUR CANDY FLOSS MAKER

1. ENSURE THE CANDY FLOSS MAKER IS NOT CONNECTED TO THE MAINS.
2. PLACE THE CANDY FLOSS MAKER MAIN UNIT (4) ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.
3. PLACE THE CANDY FLOSS BOWL (9) ONTO THE CANDY FLOSS MAKER MAIN UNIT (4) AND TWIST IT IN AN ANTICLOCKWISE DIRECTION, UNTIL IT LOCKS INTO POSITION.
4. PLACE THE SUGAR PAN (3) ONTO THE DRIVE SHAFT (7) IN THE CENTRE OF THE HEATING ELEMENT (8). ENSURE THE TABS ON THE DRIVE SHAFT (7) ALIGN WITH SLOT ON THE SUGAR PAN (3).
5. ONCE ALIGNED, PUSH THE SUGAR PAN (3) ALL THE WAY DOWN ONTO THE DRIVE SHAFT (7) THREAD TO LOCK IT IN PLACE.
6. POSITION THE SPLASH GUARD (1) ON TOP OF THE CANDYFLOSS BOWL (9), GENTLY PUSHING DOWN ENSURING IT IS SECURELY IN PLACE.

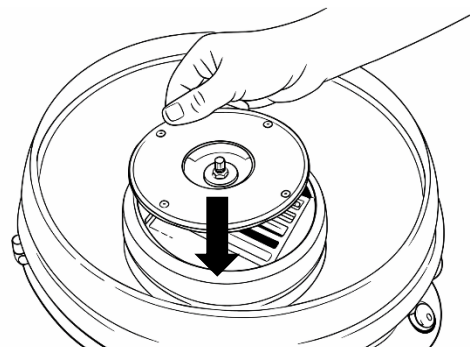

INSTRUCTIONS FOR USE

  1. ENSURE THE CANDY FLOSS MAKER IS FULLY ASSEMBLED FOLLOWING THE INSTRUCTION IN THE SECTION ABOVE.
 2. INSERT THE PLUG (WITH DRY HANDS) INTO THE MAINS SOCKET AND SWITCH THE SOCKET ON (IF APPLICABLE).
 3. TURN ON THE CANDY FLOSS MAKER BY PRESSING THE ON/OFF SWITCH (5). ALLOW THE CANDY FLOSS MAKER TO PREHEAT FOR APPROXIMATELY 2-3 MINUTES AND THEN TURN IT OFF USING THE ON/OFF SWITCH (5)
 4. USING THE MEASURING SPOON (10), ADD ONE SCOOP (APPROXIMATELY 20G) OF SUGAR INTO THE SUGAR INLET (2). ENSURE THE SUGAR PAN (3) IS STATIONARY WHEN DOING SO.
- i** DO NOT OVERFILL THE SUGAR INLET (2). EXCESS SUGAR WILL BE SPUN OUTWARDS IF DONE SO.
 - i** USE WHITE GRANULATED SUGAR OR COLOURED CANDY FLOSS SUGAR.
 - i** DO NOT USE BROWNING SUGAR OR ICING SUGAR AS THIS COULD DAMAGE THE UNIT.
5. TURN ON THE CANDY FLOSS MAKER BY PRESSING THE ON/OFF SWITCH (5). THE SUGAR PAN (3) WILL BEGIN TO SPIN AND HEAT UP. AFTER A SHORT TIME, CANDY FLOSS STRANDS WILL BEGIN TO FORM AROUND THE EDGE OF THE CANDY FLOSS BOWL (9)
 6. USING A CANDY FLOSS STICK (11), SLOWLY ROTATE THE STICK AROUND THE INSIDE EDGE OF THE CANDY FLOSS BOWL (9) TO COLLECT THE FORMING CANDY FLOSS STRANDS. CONTINUE TURNING THE STICK BETWEEN YOUR FINGERS AS THE STRANDS WRAP AROUND IT.
 7. AS CANDY FLOSS BUILDS, GENTLY LIFT THE STICK SLIGHTLY ABOVE THE CANDY FLOSS BOWL (9) WHILE CONTINUING TO ROTATE. MOVE THE STICK SLOWLY AROUND THE BOWL TO GATHER ALL SUGAR STRANDS BEING PRODUCED.
 8. WHEN NO MORE CANDY FLOSS STRANDS ARE FORMING, SWITCH OFF THE CANDY FLOSS MAKER BY PRESSING THE ON/OFF SWITCH (5).
- i** PRACTICE MAKES PERFECT! THE RESULTS WILL IMPROVE WITH PRACTICE. THE MORE EVENLY YOU TURN THE CANDY FLOSS STICKS, THE MORE EVEN THE RESULTS WILL BE.

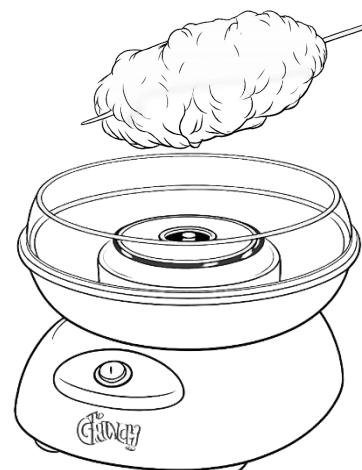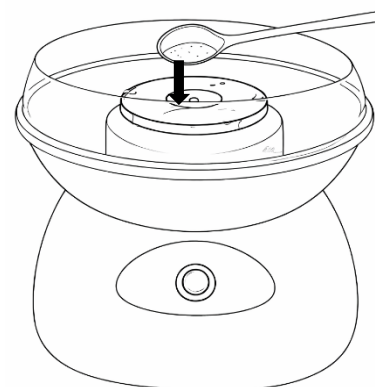



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

- i** **COLOURED CANDYFLOSS CAN ONLY BE MADE BY USING COLOURED SUGAR.**
WHITE GRANULATED SUGAR WILL NOT PRODUCE COLOURED CANDYFLOSS.

⚠ WARNING! **ENSURE THE SUGAR PAN (3) REMAINS STATIONARY BEFORE ADDING SUGAR.**
NEVER ADD SUGAR WHILE THE CANDY FLOSS MAKER IS SWITCHED ON.
DO NOT TOUCH THE SUGAR PAN (3) OR THE HEATING ELEMENT (8). THESE PARTS BECOME HOT DURING USE AND REMAIN HOT IMMEDIATELY AFTER USE.

ENSURE SUGAR ADDED TO THE SUGAR PAN (3) DOES NOT SPILL ONTO THE HEATING ELEMENT (8). DO NOT OVERFILL THE SUGAR PAN (3). OVERFILLING LEADS TO SUGAR SPILLING INTO THE HEATING ELEMENT (8).

SWITCHING OFF THE CANDY FLOSS MAKER

- 1. SWITCH OFF THE CANDY FLOSS MAKER BY PRESSING THE ON/OFF SWITCH (5). AND UNPLUG FROM THE MAINS POWER SUPPLY.**
- 2. ALLOW THE UNIT TO FULLY COOL BEFORE ATTEMPTING TO CLEAN OR DISASSEMBLE IT.**
- 3. REMOVE THE SPLASH GUARD (1) BY CAREFULLY LIFTING IT AWAY FROM THE CANDY FLOSS BOWL (9).**
- 4. REMOVE THE SUGAR PAN (3) BY PULLING IT UP AND OFF THE DRIVE SHAFT (7) AT THE CENTRE OF THE HEATING ELEMENT (8).**
- 5. TWIST THE CANDY FLOSS BOWL (9) IN A CLOCKWISE DIRECTION TO UNLOCK AND THEN PULL OUT FROM THE CANDY FLOSS MAKER.**

CLEANING YOUR CANDY FLOSS MAKER

- ALWAYS UNPLUG THE CANDY FLOSS MAKER FROM THE MAINS POWER SUPPLY BEFORE CLEANING.**
- ALLOW THE UNIT TO COOL BEFORE CLEANING.**
- CLEAN THE CANDY FLOSS BOWL, SPLASH GUARD, SUGAR PAN, AND MEASURING SPOON IN WARM SOAPY WATER.**
- DO NOT CLEAN ANY PART OF YOUR CANDY FLOSS MAKER IN A DISHWASHER.**
- DO NOT SUBMERGE ANY PART OF THE MAIN BODY OR MAINS CABLE IN WATER OR ANY OTHER LIQUIDS.**
- WIPE CLEAN THE OUTSIDE OF THE MAIN BODY WITH A SOFT DAMP CLOTH.**
- ENSURE THE SUGAR PAN IS THOROUGHLY**
- NEVER CLEAN ANY PART OF THE CANDY FLOSS MAKER WITH HARSH OR ABRASIVE CLEANERS.**

STORING YOUR CANDY FLOSS MAKER

- DO NOT WRAP THE CORD AROUND THE APPLIANCE OR THE BASE OF YOUR CANDY FLOSS MAKER.**
- DO NOT STORE IN DIRECT SUNLIGHT.**
- WIPE THE INTERIOR OF THE CANDY FLOSS MAKER WITH A DRY CLOTH, BEING CAREFUL NOT TO ALLOW ANY WATER INTO THE HEATING ELEMENT, AS THIS WILL DAMAGE THE MACHINE.**
- ENSURE ALL PARTS ARE FULLY COOLED BEFORE STORING.**
- ENSURE ALL PARTS ARE DRIED THOROUGHLY BEFORE STORING.**
- STORE IN THE UPRIGHT POSITION.**



NON-REWIREABLE MAINS PLUG

IF YOUR APPLIANCE IS SUPPLIED WITH A NON-REWIREABLE PLUG FITTED TO THE MAINS LEAD AND SHOULD THE FUSE NEED REPLACING, YOU MUST USE AN ASTA APPROVED ONE (CONFORMING TO BS 1362 OF THE SAME RATING). NEVER USE A PLUG WITH THE FUSE COVER MISSING. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN. IF YOU NEED TO REMOVE THE PLUG – **DISCONNECT FROM THE MAINS** – AND THEN CUT IT OFF THE MAINS LEAD AND IMMEDIATELY DISPOSE OF IT SAFELY. NEVER ATTEMPT TO REUSE THE PLUG OR INSERT IT INTO A SOCKET OUTLET AS THERE IS A DANGER OF ELECTRIC SHOCK.

TECHNICAL SPECIFICATION

MODEL NUMBER	SDA2957
RATED VOLTAGE	220-240V~ 50-60Hz
RATED POWER	500W
PROTECTION CLASS	1 (THIS APPLIANCE MUST BE EARTHED)
POWER CONSUMPTION OF EQUIPMENT IN OFF MODE SHALL NOT EXCEED 0.50W	0 W
THIS EQUIPMENT COMPLIES WITH ANNEX III OF THE COMMISSION REGULATION (EU) 2023/826	

RECYCLING INFORMATION

DISPOSAL OF THE PACKAGING

DISPOSE OF PAPER AND CARDBOARD IN APPROPRIATE PAPER RE-CYCLING FACILITIES.

DISPOSE OF PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSE OF NON-RECYCLABLE PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSAL OF THE PRODUCT



YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



CUSTOMER SUPPORT

SHOULD YOU REQUIRE ANY PRODUCT INFORMATION, REPLACEMENT PARTS OR ACCESSORIES, PLEASE CONTACT OUR CUSTOMER CARE TEAM ON **0161 831 7879 (8.30AM-4.30PM MONDAY TO THURSDAY, 8.00AM-4.00PM FRIDAY)** AND SELECT OPTION **3** OR BY CONTACTING US VIA EMAIL **THEGRINCH@ESGLTD.COM**

- **REPLACEMENT PARTS AND ACCESSORIES ARE GUARANTEED FOR 1 YEAR FROM THE DATE OF PURCHASE.**
- **IT IS IMPORTANT TO NOTE THAT YOUR WARRANTY BECOMES INVALID SHOULD NON GRINCH PARTS OR ACCESSORIES BE USED WITH THIS APPLIANCE.**



 
TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

The GRINCH™

Dr. Seuss™

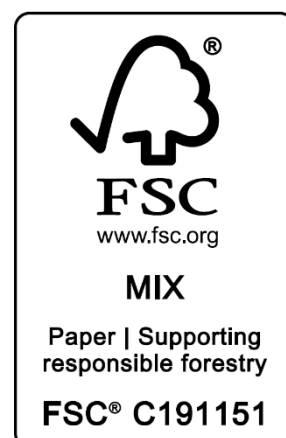

WARRANTY

Thank you for purchasing your Grinch product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Grinch product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty * please email the model number and your receipt to :*

thegrinch@esgltd.com

**Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

Produced and imported under licence by Euro Group Ltd.
Brightgate House, 1 Brightgate Way, Manchester, M32 0TB, UK.
EU Rep: EuroSonic Magppie (ESM) Ltd. D05 X006, Ireland.
Made in China

www.esgltd.com