



DAEWOO®



*Please refer to the warranty section for terms of your extended guarantee



600W HAND BLENDER SET

Contents

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts & Accessories
7	Before First Use of Your Hand Blender Set
7	Using the Blending Head
8	Releasing Attachment
8	Using the Chopper
9	Using the Whisk
9	For Best Whisking Result
9	Cleaning and Maintenance
9	Plug Wiring Information
10	Technical Specification
10	Recycling Information
11	Customer Support
Back Page	Guarantee

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this hand blender.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** use this blender with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.

- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the power cord to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cord is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- **DO NOT** allow the power cord to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than its intended use.

-
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
 - Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
 - Grasp the plug, not the cord.
 - **DO NOT** touch the blades whilst the blender is connected to the mains.
 - Wash the blades in warm soapy water, rinse and dry thoroughly.
 - **CAUTION:** the blades on this blender are very sharp; extreme caution should be taken whilst cleaning.

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

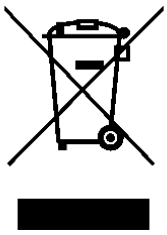

 
You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeireland.ie, enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

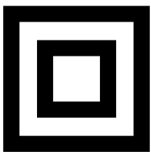 


This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

Description of Parts & Accessories

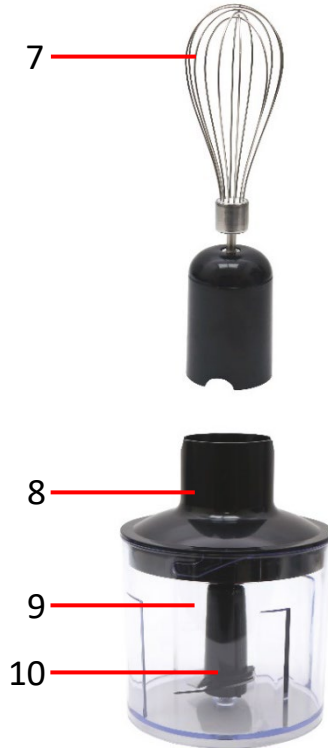

1. Speed Adjustment Control
2. Speed Button
3. Turbo Speed Button
4. Motor Unit
5. Blender Attachment
6. Blades & Guard
7. Whisk Attachment
8. Chopper Lid
9. Chopper Bowl
10. Chopper Blade
11. Beaker



Before First Use of Your Hand Blender Set

- Remove all packing materials and discard responsibly.
 - Check that all parts are present – See '**Description of Parts & Accessories**' above.
 - Wash the Chopper Lid, Chopper Bowl, the Blender Attachment and the Whisk Attachment in warm soapy water, rinse and dry thoroughly afterwards.
- CAUTION:** the blades on this hand blender set are very sharp; extreme caution should be taken whilst cleaning.
- Do not clean any part of your hand blender set in a dishwasher.
 - Never immerse the motor unit in water or any other liquids.
 - Wipe over the motor unit with a damp sponge or cloth.
 - Do not use harsh or abrasive cleaners.

Using the Blender Attachment (5)

For blending liquids such as dairy products, sauces, soft fruit, soups, milk shakes and mixing soft ingredients.

1. Attach the **Blender Attachment (5)** to the **Motor Unit (4)** by turning anticlockwise until it 'clicks' into place and at the locked position as shown right.
2. Insert the mains plug into the mains socket.
3. Add the ingredients to the **Beaker (11)**.
4. Immerse the **Blender Attachment (5)** into the ingredients making sure the **Blades & Guard (6)** are completely covered.



5. Press either the **Speed Button** (2) or the **Turbo Speed Button** (3) to blend the ingredients. You may adjust the speed by rotating the **Speed Adjustment Control** (1) and pressing the **Speed Button** (2).

i The correct speed depends on the quantity and consistency of the ingredients. Use the lower speeds for small amounts and the turbo speed for large amounts and harder ingredients.

i If you wish to blend in a saucepan, remove the pan from the heat and allow to cool a little before using the blender. **DO NOT** leave or use the blender in a pan whilst on the heat.

Do not run the blender in free air otherwise damage may occur.

Whilst blending heavier mixtures, do not use the blender for longer than 30 seconds with 3 minutes rest in between.

Releasing the Attachments

To release attached accessory from the **Motor Unit** (4), hold the accessory and turn the **Motor Unit** (4) to the right:



Using the Chopper

Use the Chopper for chopping ingredients such as nuts, meat, onions, hard cheese, boiled eggs, garlic, herbs and dry bread.

⚠ WARNING! The blades are very sharp, so be careful whilst handling the blade unit. Be especially careful when removing the blade from the chopper bowl for emptying and cleaning.

1. Place the **Chopper Blade** (10) into the **Chopper Bowl** (9).
2. Place the ingredients into the **Chopper Bowl** (9).
3. Place the **Chopper Lid** (8) onto the **Chopper Bowl** (9).



4. Place the **Motor Unit** (4) onto the **Chopper Lid** (8) by rotating clockwise until it “clicks” into place and is in the ‘locked’ position as shown circled left:

NB Rotate the **Motor Unit** (4) anticlockwise to the ‘unlocked’ position in order to remove it after use.

5. Press either the **Speed Button** (2) or the **Turbo Speed button** (3) to blend the ingredients.

Using the Whisk Attachment (7)

Use the whisk only for whipping cream, beating egg whites, mixing cake sponges, etc.


1. Attach the **Whisk Attachment** (7) to the **Motor Unit** (4) and rotate it anticlockwise until it 'clicks' into place and is in the 'locked' position as shown circled right.
2. Add the ingredients to a mixing bowl.
3. Before pressing either the **Speed Button** (2) or the **Turbo Speed button** (3) to blend the ingredients, place the Whisk into the mixture first and then start whisking.



For Best Whisking Results

- Do not use the beaker, use a wide bowl.
- Start with the low speed setting and progress to the turbo speed.
- Move the whisk by holding it a slight angle.
- Whisk up to a maximum of 400ml of cream at one time.
- Whisk up to a maximum quantity of 4 eggs at one time.

Cleaning and Maintenance

 **WARNING!** The blades are very sharp, extreme caution should be taken whilst cleaning.

- Always turn the power off and remove the plug from the socket outlet before carrying out any cleaning.
- Do not immerse the **Motor Unit** (4) in water or any other liquids.
- Remove any accessories from the **Motor Unit** (4) and clean the motor unit with a clean damp cloth, do not immerse in water.
- Wash the accessories only in warm soapy water and dry thoroughly afterwards.
- Do not use harsh or abrasive scouring pads, powders or cleaners.
- Do not place in a dishwasher.
- Store in a dry cool place away from direct heat or sunlight.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification

 
Model Number	SDA1622
Rated Voltage	220-240V~ 50-60Hz
Rated Power	600W
Protection Class	II
Power consumption of equipment in Off Mode shall not exceed 0,50W	0,20 W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

Recycling Information**Disposal of the Packaging**

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

 
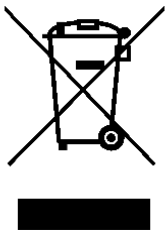 
Disposal of the Product

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeireland.ie, enter your postcode to find out your nearest recycling site.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

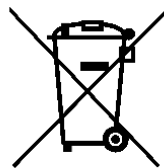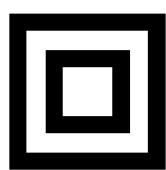**UK
CA**



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty please register your purchase online within 28 days of the original purchase date by registering at*

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

**Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com