



1.7L PLASTIC KETTLE

Contents

Page No.

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts
7	Before First Use of Your Kettle
7	Instruction for Use
8	Boil Dry Protection
8	Important – Descaling your Kettle
8	Cleaning and Maintenance
8	Plug Wiring Information
8	Technical Specification
9	Recycling Information
	Back Page

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.


Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Kettle.**
- Before plugging your kettle into the mains, visually check that the kettle is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This kettle is only to be used with the stand provided.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use if the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with

reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

 
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Never place the appliance near to flammable material or high-pressure containers.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this

- appliance other than those supplied or recommended by supplier.
- **DO NOT** immerse the appliance, base or its cord in water or any other liquids.
 - **DO NOT** use this appliance for anything other than its intended use.
 - **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
 - Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
 - Unplug after each use. Grasp the plug, not the cord.
 - **DO NOT** cover this appliance.
 - Never place this appliance on an electric, gas, or any other type of hob.
 - **⚠ WARNING!** Do not open lid whilst the water is boiling.
 - Never fill the kettle more than its capacity – ensure the water level is between the min and max marks. If the kettle is overfilled, boiling water may be ejected.
 - Always close the lid during use and do not open the lid whilst the water is boiling.
 - **CAUTION: The outside surface of the kettle will get hot during use.** A yellow triangular warning icon with a black border and three wavy lines inside, indicating a hot surface.
 - Ensure the kettle has switched off before removing it from the base.
 - Please note, due to this being a fast boil kettle it is recommended that you don't use this in conjunction with any other appliances on a multi socket extension lead.

THIS APPLIANCE MUST BE EARTHED


Explanation of Symbols

The following warning symbols or words are used in this instruction manual:

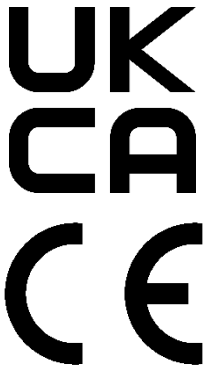

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

 Products labelled with this symbol conform to applicable provisions of the European Economic Area.

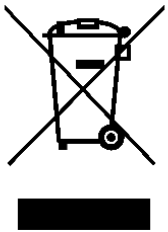

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie, enter your postcode to find out your nearest recycling site.



This designates a hazard with moderate risk, which may result in severe injury or death if not adhered to.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the surface is gets hot and care must be taken.

Description of Parts

1. Spout
2. Filter (Inside Spout)
3. Lid
4. Handle
5. Water Gauge
6. On/Off Switch
7. Base*



 ***PLEASE NOTE THE KETTLE BASE IS STORED INSIDE THE KETTLE**

Before first Use of Your kettle


Remove all packing and dispose of responsibly.

Before using the kettle for the first time, fill to the max mark and allow the water to boil.

Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.

Do not immerse the kettle or its base in water.

Instructions for Use

- Place the kettle base on a solid, level, non-flammable surface.
- Remove the lid and fill the kettle with water to the desired level ensuring that it is above the MIN mark and below the MAX mark.
- Push the lid closed and place the kettle onto the base.
- Insert the mains plug (with dry hands) into the mains socket and switch on if applicable.
- Push down the power on/off switch which will illuminate and the water will begin to boil.
- At the end of the boiling cycle the power on/off switch will automatically switch off.
- Wait until the water has finished boiling before removing it from the base unit.
-  **WARNING!** Ensure the lid is correctly closed before pouring boiling water – beware of scalding.

Boil dry protection

Should you accidentally switch the kettle on without water; the boil-dry protection will automatically switch off the power. If this occurs, allow the appliance to cool and reset before use.

Important – Descaling your Kettle/Reducing Limescale Build up

- To prolong the life of your kettle it is imperative that it is descaled regularly.
- The frequency of the descaling depends on the hardness of the water in your area and how often the appliance is used.
- In extreme hard water areas, descaling your kettle at least once a month is highly recommended also the use of filtered water in your kettle will increase the life expectancy and help prevent excessive lime scale build up.
- If the kettle switches off before it boils or has a white deposit building up inside then it will need to be descaled.



Do not use vinegar but a commercially available descaling agent; carefully follow the quantities recommended in the instructions of the agent.

Cleaning and Maintenance of Your Kettle

- Ensure the mains plug is removed from the socket outlet before cleaning.
- Do not immerse the kettle or the base in water or any other liquids.
- Wipe the outside of the kettle with a clean damp cloth.
- Do not use harsh or abrasive cleaners such as scouring pads.
- Do not clean your kettle in a dishwasher.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification

Model Number	SDA1673
Rated Voltage	220-240V~ 50-60Hz
Rated Power	1850-2200W
Protection Class	I (This appliance must be Earthed)
Capacity	1.7 Litre
ErP: Power consumption of equipment in off mode shall not exceed 0.30W	0 W
This equipment complies with Annex III of Commission Regulation (EU) 2023/826	

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

Recycling Information

 
Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

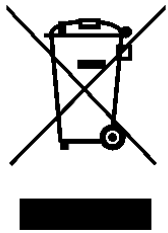

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie, enter your postcode to find out your nearest recycling site.





Daewoo Essentials is a registered trademark.
Produced and imported under license by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esg ltd.com