



# DAEWOO®



\*Please refer to the warranty section for terms of your extended guarantee.

## 200W 12 PIECE PLATE WARMER

perfect for large dinner parties



## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Plate Warmer.**
- **DO NOT** use this Plate Warmer with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically.
- **DO NOT** use this Plate Warmer with an extension cable.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction

concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Keep the appliance and its cord out of reach of children less than 8 years.

**CAUTION** — some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

- Do not use this Plate Warmer in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there

- be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or suitable qualified personnel in order to avoid a hazard
  - **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
  - **DO NOT** run the mains cable under carpets, rugs, etc.
  - Allow the unit to cool before storage.
  - Before cleaning, disconnect the appliance from the mains supply and allow to cool.
  - This appliance is intended for household use only and should not be used for industrial purposes.
  - **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
  - **DO NOT** use this appliance for anything other than its intended use.
  - **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
  - Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
  - Unplug after each use. Grasp the plug, not the cord.

### Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

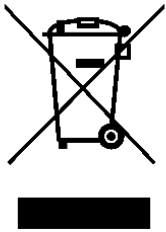


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.




This symbol provides useful additional information on the use of this product.



 
This symbol indicates that the supply uses an alternating current mains supply.

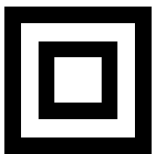

 This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.

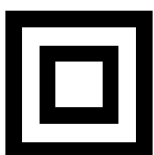

## Description of Parts

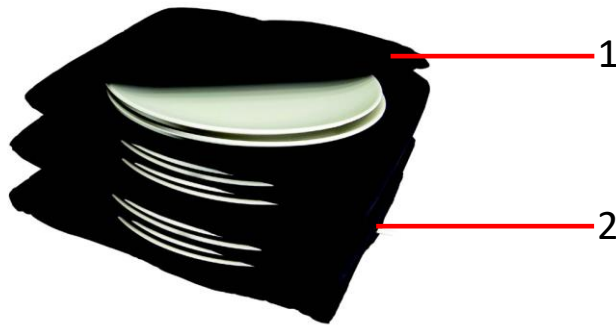 

1. Plate Warmer
2. Power Cord

## Before first use of Your Plate Warmer

Remove all packing materials and discard responsibly.  
Check the heating elements are unfolded inside the cases.  
Ensure the power cord is untangled and out of the pockets before use.

## Operating Instructions

1. There are 5 plate pockets. You may place up to 2 plates in each pocket plus 1 plate beneath and 1 plate on top to heat a total of 12 plates simultaneously.
2. Always have at least 1 plate in each pocket to avoid overheating.
3. Insert the plug into the mains outlet and turn on the switch.
4. It will take a few minutes before the plate warmer feels hot.
5. After 30 minutes, the Plate Warmer will have reached its maximum temperature of 70°C.
6. Always use oven gloves to remove the plates from the heat pockets.
7. Always place the heated plates onto a heat resistant surface or place mat.
8. Allow your Plate Warmer to cool completely before storing after use.

**i** Please note that smaller or thinner plates will heat faster than large thick plates.

## Cleaning and Maintenance

- Remove the plug from the mains socket and allow the Plate Warmer to cool completely before cleaning.
- **DO NOT** immerse the appliance in water or any other liquid.
- Clean the pockets by brushing gently with a soft brush.
- **DO NOT** use scouring pads, steel wool or any type of solvents or abrasive cleaning agents to clean the appliance; they may damage your Plate Warmer.
- The outer fabric cover may be removed and washed as per the instructions on the washing label attached.
- To remove the fabric cover, separate the Velcro fastenings at the top of the cover and take out the inner aluminium element section. Separate cleaning

- instructions are attached to the outer fabric cover and the inner heating element.

**CAUTION: Ensure the plate warmer has fully cooled before carrying out any cleaning or maintenance.**

Allow the cover to fully dry before refitting over the heating element.

**WARNING: Never use the plate warmer without the fabric cover fitted.**  
Never immerse the inner heating element in water or any other liquid.

### ***Technical Specification***

Rated Voltage	220-240V~ 50-60Hz
Rated power	200W
Protection Class	II
Model Number	SDA1763

### ***Non-Wireable Mains Plug***

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

### ***Recycling Information***

#### ***Disposal of the Packaging***

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

#### ***Disposal of the Product***

 
 


You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.

## ***Customer Support***

*Should you require any product information, replacement parts or accessories, please contact our customer care team at [help@daewooelectricals.com](mailto:help@daewooelectricals.com) or call 0161 831 7879.*

- *Replacement parts and accessories are guaranteed for 1 year from the date of purchase.*
- *It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance*

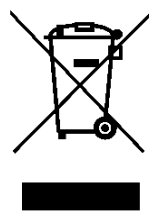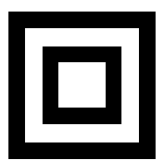**UK  
CA**

## Notes



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo Plate Warmer.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty hotplate should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

***To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at <https://help.daewooelectricals.com> or [Contact Us \(daewooelectricals.com\)](https://help.daewooelectricals.com)***

*\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

Daewoo is a registered trademark.  
Produced and imported under licence by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)