



# 1.7L 3KW JUG KETTLE



---

**Contents**

Page No.	
2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
6	Introduction
7	Description of Parts
7	Before First Use of Your Kettle
7	Using Your Kettle
9	Boil Dry Protection
9	Important – Descaling your Kettle
10	Replacing the Filter
10	Cleaning and Maintenance
11	Troubleshooting Guide
11	Plug Wiring Information
11	Technical Specification
12	Recycling Information
12	Customer Support
Back Page	Warranty Information

---

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## **IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE**

**When using electrical appliances, basic safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Kettle.**
- Before plugging your kettle into the mains, visually check that the kettle is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This kettle is only to be used with the stand provided.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use if the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of

experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

- **DO NOT** leave the appliance unattended during use.
  - **DO NOT** leave the appliance unattended whilst connected to the mains supply.
  - Always use this appliance on a solid, level, non-flammable surface.
  - **DO NOT** use this appliance outdoors.
  - It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
  - If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
  - Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
  - **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
  - Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
  - **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
  - **DO NOT** run the mains cable under carpets, rugs, etc.
  - Allow the unit to cool before storage.
  - Never place the appliance near to flammable material or high-pressure containers.
  - This appliance is intended for household use only and should not be used for industrial purposes.
  - **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by
-

supplier.

- **DO NOT** immerse the appliance, base or its cord in water or any other liquids.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** cover this appliance.
- Never place this appliance on an electric, gas, or any other type of hob.
- **⚠ WARNING! DO NOT open the lid whilst the water is boiling.**
- Never fill the kettle more than its capacity – ensure the water level is between the min and max marks. If the kettle is overfilled, boiling water may be ejected.
- Always close the lid during use and do not open the lid whilst the water is boiling.
- **CAUTION: The outside surface of the kettle will get hot during use.**
- Ensure the kettle has switched off before removing it from the base.
- Please note, due to this being a rapid boil kettle it is recommended that you don't use this in conjunction with any other appliances on a multi socket extension lead.

**THIS APPLIANCE MUST BE EARTHED**

## Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:

**UK  
CA**

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

**CE**

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

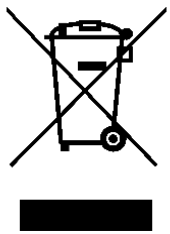

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

## Introduction

This household 3kw Kettle is a rapid boil type for quicker boiling. Therefore, it is recommended that this kettle should not be used with an extension lead.

## Description of Parts

1. Spout
2. Filter (Inside)
3. Lid
4. Handle
5. Water Gauge
6. On/Off Switch
7. Base

 


## Before the first Use of Your Kettle

Before using the kettle for the first time, fill to the max mark and allow the water to boil. Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.

## Using Your Kettle

- 1** Ensure that the kettle is disconnected from the mains supply.

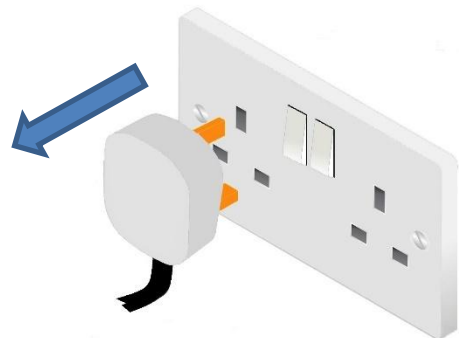

- 2** Place the kettle **Base (7)** on a flat, level, non-flammable surface.



**3**

To Fill the Kettle, remove the **Lid** (3).

Replace the **Lid** (3) after filling until it clicks into place.

 
**4**

Fill the kettle to the desired level on the **Water Gauge** (5) ensuring that it is above the MIN mark and below the MAX mark.

**⚠ WARNING!** Do not overfill the kettle above the MAX mark as this will risk boil over and may damage the appliance.

**5**

Insert the mains plug (with dry hands) into the mains socket.

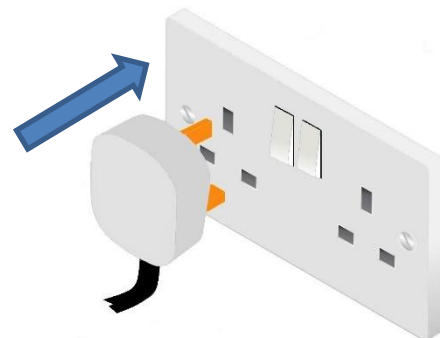

**6**

Push the **On/Off Switch** (6) down which will illuminate and the water will begin to boil.

At the end of the boiling cycle the **Switch** (6) will automatically switch off (pop up).

Wait until the water has finished boiling before removing the kettle from the **Base** (7).



### **Boil dry Protection**

Should you accidentally let the appliance operate without water; the boil-dry protection will automatically switch off the power. If this occurs, allow the appliance to cool and reset before use.

### **Important – Descaling your Argyle Kettle/Reducing Limescale Build up**

- To prolong the life of your kettle it is imperative that it is descaled regularly.
- The frequency of the descaling depends on the hardness of the water in your area and how often the appliance is used.
- In extreme hard water areas, descaling your kettle at least once a month is highly recommended also the use of filtered water in your kettle will increase the life expectancy and help prevent excessive lime scale build up.
- If the kettle switches off before it boils or has a white deposit building up inside then it will need to be descaled.
- Do not use vinegar but a commercially available descaling agent; carefully follow the quantities recommended in the instructions of the agent:

**1**

 
Fill your kettle to the 'MAX' mark on the body or the water quantity recommended by the descaling product.

**2**

Add a descaling agent to the kettle according to the descaling products instructions.

- 3** Allow the kettle to boil, switch off and then stand to allow the kettle to soak for approximately 15 – 20 minutes, (if necessary, adjust the standing time to the descaling products instructions).
- 4** Finally, empty the kettle and refill with fresh clean water and allow to come to the boil and switch off once more, then again pour the water away. Your kettle is now descaled and cleaned.

### Replacing the Filter (2)

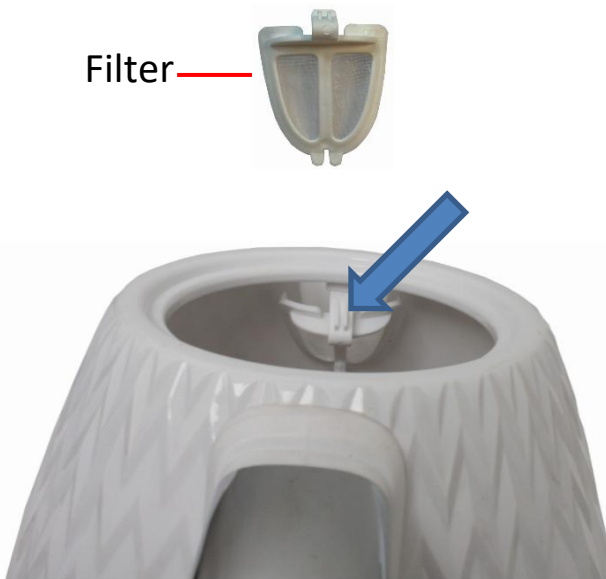

The **Filter (2)** is located inside the kettle behind the **Spout (1)** and is accessible from inside the kettle when the **Lid (3)** is removed.

Remove the **Lid (3)**. Press the catch (arrowed) down on the **Filter (2)** and then lift the out as shown left.

Replace the **Filter (2)** by pushing it back inside the kettle behind the **Spout (1)**, ensuring the catch is clicked back into place and then replace the **Lid (3)**.

### Cleaning and Maintenance

- Always unplug the Kettle from the mains supply and allow to cool before cleaning.
- Do not immerse the kettle or the base in water or any other liquids.
- Wipe the kettle clean with a clean damp cloth.
- Do not use harsh or abrasive scouring pads, powders or cleaners.
- Do not clean any part of the kettle in a dishwasher.

## ***Troubleshooting Guide***

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Fix</i>
<i>Kettle not boiling</i>	On/Off Switch is not pressed down.	Press the On/Off Switch (6) down.
	Plug not inserted into the mains socket and/or not switched on.	Ensure the mains plug is plugged into the mains socket and the socket is switched on.
	Kettle not seated on the base correctly.	Ensure the Kettle is seated correctly on the Base (7).
	Fuse blown in plug.	Check fuse by substitution.
Kettle switches off before boiling.	Not enough water in the Kettle.	Ensure the Kettle is filled with sufficient water and the water level is above the 'MIN' mark on the Water Gauge (5).
	Kettle requires descaling.	Follow 'Descaling your Argyle Kettle' above.
Kettle boils over.	Kettle is overfilled.	Ensure that the Kettle is not filled above the 'MAX' mark on the Water Gauge (5).

## ***Non-Rewireable Mains Plug***

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

## ***Technical Specification***

 
Model Number	SDA1780
Rated Voltage	220-240V~ 50/60Hz
Rated Power	2520-3000W
Protection Class	I (This appliance must be Earthed)
Capacity	1.7 Litre

## Recycling Information

### Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.  
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.  
Dispose of non-recyclable plastics in the appropriate plastics collection service.

### Disposal of the Product

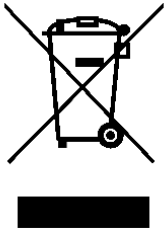

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site


## **Customer Support**

 Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: [help@daewooelectricals.com](mailto:help@daewooelectricals.com).

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

UK  
CA

C E

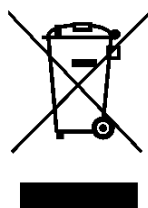



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo product.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

***To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at <https://help.daewooelectricals.com> or [Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)***

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.  
Produced and imported under license by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)