



With grinder

**500W BLENDER & COFFEE GRINDER**

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Jug Blender.**
- Before plugging your unit into the mains supply, visually check that it is intact and has not suffered any transit damage.
- **DO NOT** use this product with a programmer, timer, separate remote-control system or any other device.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- **DO NOT** immerse this appliance in water or any other liquids.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cable out of the reach of

children.

- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Protect the unit from moisture whilst using this appliance outdoors.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- It is imperative to unplug the mains cable after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- **DO NOT** operate this appliance with a damaged plug or mains cable, after a malfunction or after being dropped or damaged in any way.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.

- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- Switch off the appliance and disconnect from the mains supply before changing accessories or approaching parts that move in use.
- Grasp the plug, not the cord.
- **DO NOT** touch the blades whilst the smoothie and soup maker is connected to the mains.
- Wash the blades in warm soapy water, rinse and dry thoroughly.

**⚠ WARNING!** The blades on this blender are very sharp; extreme caution should be taken when cleaning.

### Explanation of Symbols

The following warning symbols or words are used in this instruction manual:



 
Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.

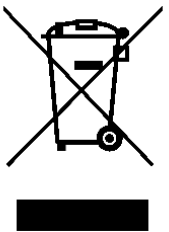

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to land fill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

## Description of Parts



1. Measuring Cup
2. Jug Lid
3. Jug
4. Handle
5. Blending Blade
6. Motor Unit
7. Pulse/Speed Control
8. Grinder Cup
9. Grinding Blade



\*Product may differ from images shown above

### Before the First Use of Your Jug Blender

 
- Remove all packing materials and discard responsibly.
- Ensure all parts are present see Description of Parts above.
- Remove the **Jug** (3) and wash in warm soapy water, rinse and dry thoroughly.
- Do not immerse the **Motor Unit** (6) in water or any other liquids.
- Do not use harsh or abrasive cleaners.
- Not Dishwasher safe, do not clean any part of your Jug Blender in a dishwasher. Hand wash only.

**⚠ WARNING!** The blades on this Jug Blender are not removable from the inside of the jug and are very sharp; extreme caution should be taken when cleaning the inside of the jug.

**⚠ WARNING!** DO NOT use the blender to process hot foods or liquids.

**i** Add a little water when blending fruit and vegetables.

## Pulse/Speed Control

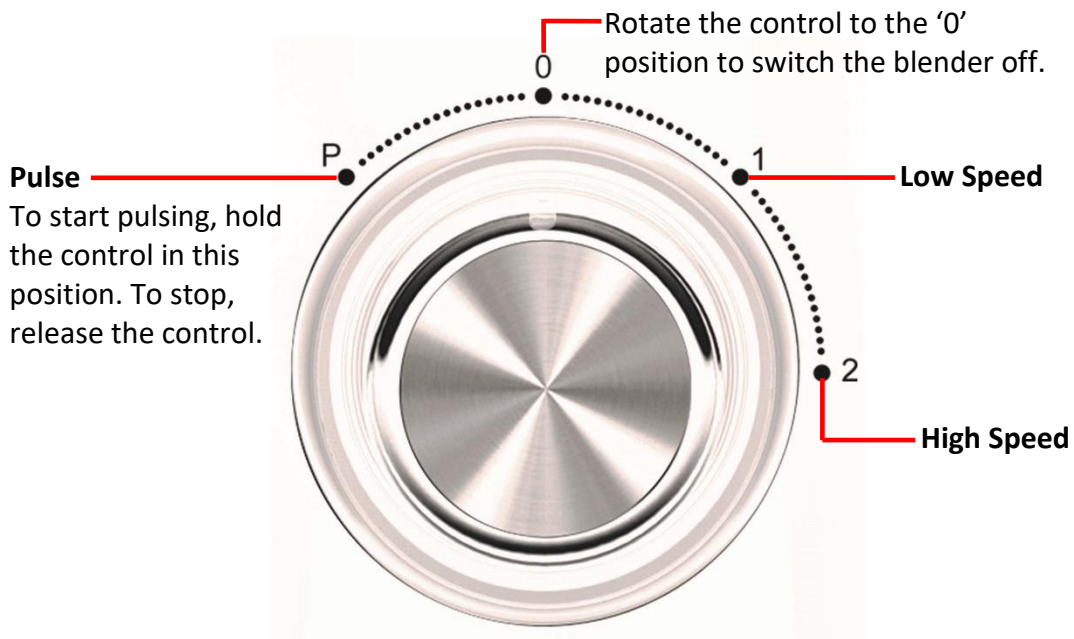

## Using Your Jug Blender

1. Place the **Motor Unit** (6) on a solid level surface.

**i** The appliance has a safety interlock device that prevents it from being operated if the jug is removed or is not positioned with the handle to the right-hand side of the appliance as in the image right.

2. Ensure the **Pulse/Speed Control** (7) is set to the '0' off position.

3. Place the **Jug** (3) onto the **Motor Unit** (6) and turn the **Jug** (3) clockwise until it clicks and locks into place as shown right.

4. Add the ingredients to be blended into the **Jug** (3), further ingredients can be added by removing the **Measuring Cup** (1) in the centre of the **Jug Lid** (2). Replace the **Measuring Cup** (1) before use.

5. Replace the **Jug Lid** (2) by rotating clockwise, until it clicks and locks into place.

**i** Do not overfill and exceed the MAX mark on the **Jug** (3).

**i** The **Jug Lid** (2) must be locked in place for the blender to operate.

6. Plug the unit into the mains supply.

 
 


7. Set the speed on the **Pulse/Speed Control (7)** to blend the ingredients to the required consistency. The speed can be adjusted clockwise to increase speed or anti-clockwise to decrease speed during blending.

- i** Ensure that the Lid is fitted whilst blending and never remove the lid mid blend.
- i** **DO NOT** blend continuously for more than 3 minutes at a time, after each blending cycle, stop and allow the unit to cool.


### Using the Pulse Control

The “Pulse” setting allows quick blending of ingredients, which is ideal for blending larger foods such as chunky vegetables. Rotate the **Pulse/Speed Control (7)** anticlockwise from the ‘0’ position to the ‘P’ position.

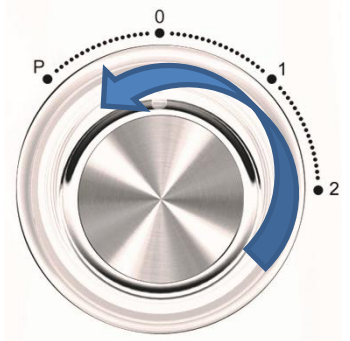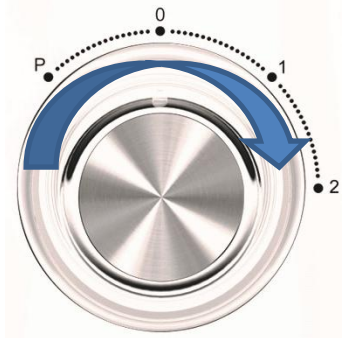

### Using the Grinder

 1. Place the ingredients into the **Grinder Cup (8)** and screw the **Grinder Blade (9)** on top of the cup.

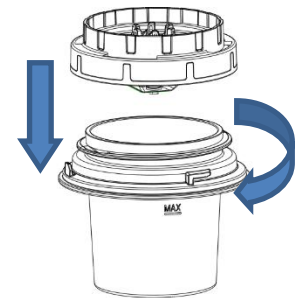

2. Turn the grinder the other way up and align the **Grinder Blade (9)** with the **Motor Unit (6)** and turn the **Grinder Cup (8)** clockwise until it clicks and locks into place.

3. Ensure that the **Pulse/Speed Control (7)** is set to the ‘0’ off position.  
4. Plug the unit into the mains supply.  
5. Set the desired speed on the **Pulse/Speed Control (7)** to grind ingredients.

- i** **DO NOT** run the grinder for more than 30 seconds at a time.
6. Allow the **Grinder Blade (9)** to come to a complete stop before removing the **Grinder Cup (8)** from the **Motor Unit (6)**.  
7. Turn the **Grinder Cup (8)** upside down, allow the ingredients to fall to the bottom of the upturned Jar and carefully remove the **Grinder Blade (9)**.

**⚠ WARNING! DO NOT use the grinder to process hot foods or liquids.**

 
### Care and Maintenance

Always disconnect the Jug Blender from the mains power supply before cleaning.


**⚠ WARNING!** The blades on this Jug Blender are not removable from the inside of the jug and are very sharp; extreme caution should be taken when cleaning the inside of the jug.

For quick cleaning pour a little lukewarm water into the jug or Grinder and select the low speed setting on the **Pulse/Speed Control** (7) for a few seconds, empty the **Jug** (3) and rinse.

1. To detach the **Blending Blade** (5) from the **Jug** (3),
  - a) Place the **Jug** (3) upside down.
  - b) Rotate the **Blending Blade** (5) anticlockwise,
  - c) Remove the silicon ring out of the **Blending Blade** (5).

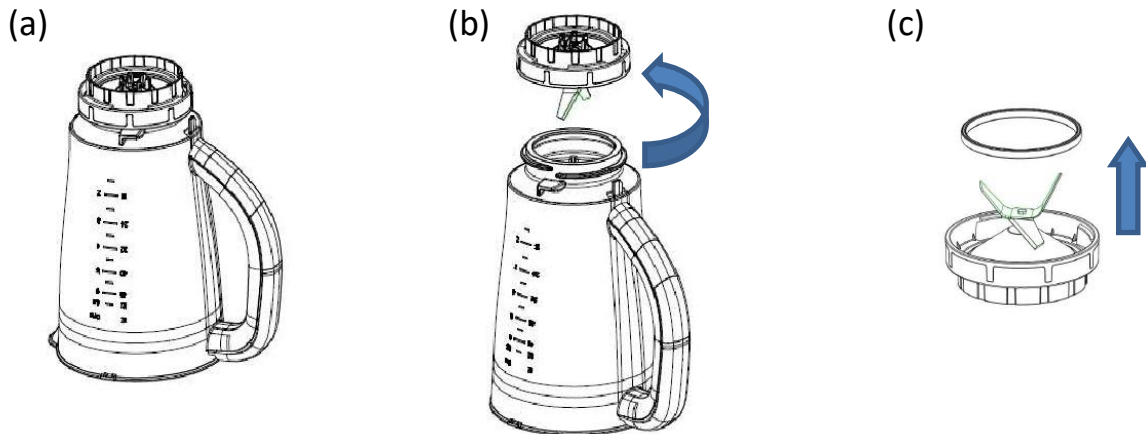

 2. To detach the **Grinder Blade** (9) from **Grinder Cup** (8),
  - d) Place The **Grinder Cup** (8) upside down.
  - e) Rotate the **Grinder Blade** (9) anticlockwise,
  - f) Remove the silicon ring out of the **Grinder Blade** (9).

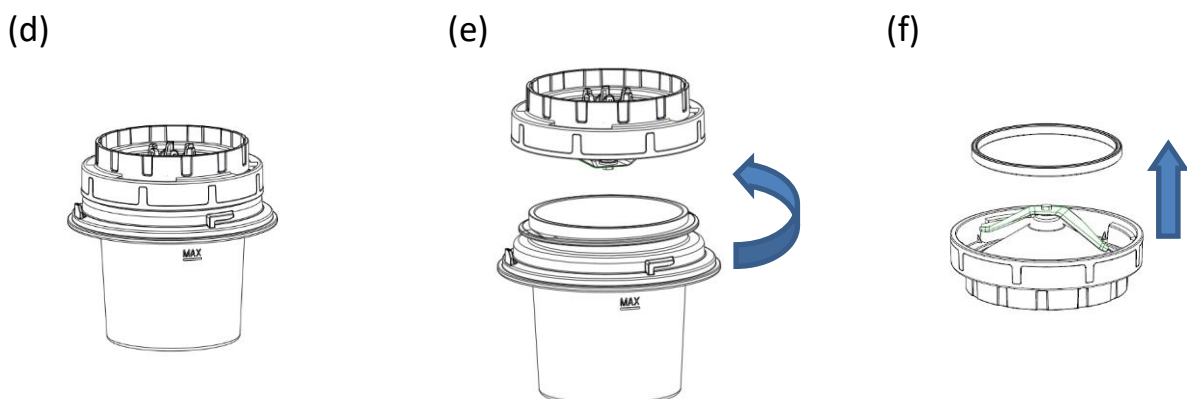

3. Clean all component parts in warm soapy water, rinse and dry thoroughly.
4. Wipe the outer surface of the **Motor Unit** (6) with a damp cloth.
5. DO NOT use harsh or abrasive cleaners.

6. DO NOT immerse any part of the **Motor Unit (6)** or cable in water or any other liquid.
7. Not Dishwasher safe, do not clean any part of your Jug Blender in a dishwasher. Hand wash only.

### **Recipe Ideas – Smoothies**

Your blender is perfect for making refreshing smoothies, the 1.5L capacity provides ample volume for multiple servings. Please see the following smoothie recipe ideas for you to try;

#### **Fruit Smoothie**

##### Ingredients

- 250g Red Grapes
- 200g Strawberries
- 120g Banana (peeled)
- 150g Ice Cubes

##### Method

1. Place all ingredients into the Jug in the order listed above and secure the lid.
2. Start the blender on its lowest speed and then gradually increase to its highest speed.
3. Blend for 1 minute, or until desired consistency is reached. If required add a little water to mix to provide a more liquid consistency.
4. Serve immediately.

#### **Fruit Salad Smoothie**

##### Ingredients

- 50g Green Grapes
- 85g Orange (peeled)
- 50g Pineapple (peeled)
- 25g Cucumber (peeled)
- 1/2 Carrot (peeled and chopped)
- 20g Apple
- 150g Ice Cubes

##### Method

1. Place all ingredients into the Jug in the order listed above and secure the lid.
2. Start the blender on its lowest speed and then gradually increase to its highest speed.
3. Blend for 1 minute and 30 seconds, or until desired consistency is reached. If required add a little water to mix to provide a more liquid consistency.
4. Serve immediately.

### Peanut Butter Berry Smoothie

#### Ingredients

- 150ml Milk
- 1 Banana (peeled)
- 30g Peanut Butter
- 180g Raspberries
- 75g Ice Cubes

#### Method

1. Place all ingredients into the Jug in the order listed above and secure the lid.
2. Start the blender on its lowest speed and then gradually increase to its highest speed.
3. Blend for 1 minute, or until desired consistency is reached. If required add a little water to mix to provide a more liquid consistency.
4. Serve immediately.

### Technical Specification

 
Model Number	SDA1907
Rated Voltage	220-240V~ 50-60Hz
Rated Power	500W
Protection Class	II
Capacity	1.5 Litre
Power consumption of equipment in Off Mode shall not exceed 0,50W	0,08W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

### Recycling Information

#### Disposal of the Packaging

- Dispose of paper and cardboard in appropriate paper re-cycling facilities.
- Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
- Dispose of non-recyclable plastics in the appropriate plastics collection service.

#### Disposal of the Product

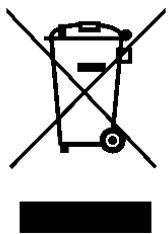

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.





Daewoo Essentials is a registered trademark.  
Produced and imported under license by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esg ltd.com](http://www.esg ltd.com)