



DAEWOO[®]



750W 2L FOOD PROCESSOR

2 speed settings with pulse function

User Manual

*Please refer to the warranty section for terms of your extended guarantee



READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- Read and familiarise yourself with all operating instructions before using this Food Processor.
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** use this Food Processor with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the power cord to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cord is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
- **DO NOT** allow the power cord to hang over sharp edges or come in contact with hot surfaces.
- Allow the unit to cool before storage.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- Grasp the plug, not the cord.
- **DO NOT** touch the blades whilst the blender is connected to the mains.
- Wash the blades in warm soapy water, rinse and dry thoroughly.
- **CAUTION:** the blades on this Food Processor are very sharp; extreme caution should be taken when cleaning.

Additional Safety Information

- **PLEASE NOTE:** Before use, ensure that the Food Processor is used in an open, well ventilated area well away from other appliances and other obstructions.
- Do not use the Food Processor in front of, near or below combustible materials such as plastics, curtains or cupboards, etc.
- Leave at least 10cm minimum free space between the appliance and any other surfaces.
- Do not place anything on top of the appliance.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.

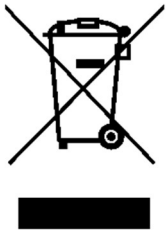

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie to find your nearest recycling point.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

Description of Parts



1. Feeding Hole Lid
2. Blender Jug Lid
3. Blender Jug
4. Blender Blade (not removable)
5. Processing Bowl
6. Processing Bowl Lid
7. Funnel
8. Pusher
9. Drive Shaft
10. Housing Unit
11. Non-slip Feet
12. Control Dial

Description of Parts - Accessories



- A. Driver
- B. Grating Blade
- C. Blade Adaptor
- D. Slicing Blade
- E. Blade Holder
- F. Chopper Blade
- G. Serrated Blade

Before Using Your Food Processor

- Remove all packing materials and discard responsibly.
- Check that all parts are present – see **Description of Parts** above.
- Before using the blender for the first time, it is recommended to wash all parts except the motor housing in warm soapy water, rinse and dry thoroughly.
- Never immerse the motor housing unit in water or other liquids.

CAUTION: the blades inside the jug are not removable and are very sharp; extreme caution should be taken whilst cleaning the inside of the jug. The blade attachments are very sharp – care must be taken whilst cleaning the blades.

CAUTION: NEVER BLEND OR PROCESS HOT OR WARM FOODSTUFFS OR LIQUIDS.

Safety Lock System

This appliance is equipped with a safety lock system which will prevent the motor starting without correct installation of the bowl and its lid.

CAUTION: DO NOT connect to the mains supply until the food processor is fully assembled.

1. Place the **Housing Unit (10)** on solid, level, non-flammable surface.
2. Place the **Lid (6)** onto the **Processing Bowl (5)** and turn the **Processing Bowl Lid (6)** clockwise until it clicks into place.

i The lid has an activator to trigger the safety lock system and must be fitted and locked into place onto the **Processing Bowl (5)**, before placing onto the **Housing Unit (10)**.

3. Insert the **Driver (A)** into the **Housing Unit (10)**.
4. Place the **Processing Bowl (5)** with **Lid (6)** over the **Driver (A)** and position onto the **Housing Unit (10)** with the handle to the right, turn clockwise until it clicks into place.

i If the **Processing Bowl (5)** and **Lid (6)** are not correctly locked into place, the food processor will not operate.



Fitting the Processor Bowl & Attachments

Note: All attachments must be securely attached to the blade adaptor.

⚠ WARNING! The Blades are very sharp, care should always be taken, handle blades by the central plastic section.

- Place the **Blade Adaptor (C)** onto the **Drive Shaft (9)**. See **Fig 1** below.
- **Grating and slicing blade** - Use to grate or slice cheese, vegetables, fruit for example. Insert either the **Grating Blade (B)** or the **Slicing Blade (D)** into the **Blade Holder (E)**. Fit the **Blade Holder (E)** onto the top of the **Blade Adaptor (C)**. The **Blade Holder (E)** is secured in place when the lid is locked into place. See **Fig 2** below.
- **Chopper blade** - Use to chop meat, nuts, vegetables, bread crumbs, puree foods and so on. Place the **Chopper Blade (F)** onto the **Blade Adaptor (C)** and push down until the blade is securely in place at the base of the **Blade Adaptor (C)**. See **Fig 3** below.



Using Your Food Processor

Grating and slicing blade

1. Carefully insert the required blade into the blade holder and fit the **Blade Holder (E)** as detailed in **Fig 1** and **Fig 2** above.

⚠ WARNING! The Blades are sharp so great care should be taken.

2. Place the **Lid (6)** onto the **Processing Bowl (5)** and insert the **Pusher (8)**, turn clockwise until its locks into place.
3. Put the **Processing Bowl (5)** onto the **Housing Unit (10)** and turn clockwise until it clicks into place.
4. Insert the mains plug into the nearest socket and switch the socket on.
5. Turn the **Control Dial (12)** to choose a processing speed.
6. Feed the ingredients to be grated or sliced down the **Funnel (7)** using the **Pusher (8)**.

IMPORTANT: Always use the pusher when feeding food into the funnel, never push with your fingers.

7. When processing is complete, turn the **Control Dial (12)** to '0'.
8. Hold the **Housing Unit (10)** and grasp the bowl handle, turn anti-clockwise and lift to release it.

- Remove the lid by turning anti-clockwise and carefully remove the **Blade Holder (E)** before removing the ingredients.

Chopper blade

- Fit the chopper blade as detailed in **Fig 1** and **Fig 3**.
- Place the ingredients into the **Processing Bowl (5)**.
- Place the **Lid (6)** onto the **Processing Bowl (5)** and insert the **Pusher (8)**, turn clockwise until its locks into place.
- Put the **Processing Bowl (5)** onto the **Housing Unit (10)**, and turn clockwise until it clicks into place.
- Connect the mains plug to the power socket and switch the socket on.
- Turn the **Control Dial (12)** to choose a processing speed.
- Further ingredients can be added whilst processing by removing the **Pusher (8)** and feeding down the **Funnel (7)**.

i IMPORTANT: Always use the pusher when feeding food into the funnel, never push with your fingers.

- When processing is complete, turn the **Control Dial (12)** to '0'.
- Hold the **Housing Unit (10)** and grasp the bowl handle, turn anti-clockwise and lift to release it.
- Remove the lid by turning anti-clockwise and carefully remove the **Chopper Blade (F)** before removing the ingredients.

Function	Attachment	Ingredient	Max Qty	Max Times	
				Slicing	Grating
Slicing and Grating		Potato	400g	50s	30s
		Carrot	500g	50s	30s
Chopping	Chopping blade	Meat	300g	30s	
		Ham	300g	30s	
		Onions	100g	30s	
		Cheese	100g	20s	
		Almonds	100g	20s	
		Hazelnuts	100g	20s	
		Walnuts	100g	20s	
Maximum Speed Setting: 2					

Do not operate for more than 40 seconds and allow the blender to rest for 1 minute between cycles. Repeat until the desired results are reached, to finish blending turn the Control Dial (12) to '0'.

Fitting the Jug Blender

This appliance is equipped with a safety lock system which will prevent the motor starting without correct installation of the blender jug and its lid.

⚠ WARNING! Do not connect to the mains supply until the blender is fully assembled.

Do not operate for more than 40 seconds and allow the blender to rest for 1 minute between cycles. Repeat until the desired results are reached.

1. Place the **Housing Unit** (10) with the **Control Dial** (12) facing you on a dry, level surface.
2. Place the **Blender Jug** (3) onto the **Housing Unit** (10) with the handle to the right, turn clockwise until it clicks into place.
3. Fit the **Lid** (2) onto the **Blender Jug** (3) ensuring the **Feeding Hole Lid** (1) is fitted and turn clockwise until it locks into place.



Using Your Jug Blender

- Pre-cut solid ingredients into smaller pieces (1.5cm) before you blend them.
- If you have a large amount of ingredients to blend, divide into small quantities instead of a large quantity at once.
- Whilst blending soup, use cooked ingredients that have been allowed to cool first.

⚠ WARNING! NEVER BLEND HOT INGREDIENTS.

To start blending:

1. Place the ingredients into the **Blender Jug** (3), add the required amount of liquid, never exceed the max level.
2. Place the ingredients into the **Blender Jug** (3), add the required amount of liquid, never exceed the max level.
3. Place the **Lid** (2) onto the **Blender Jug** (3) and turn clockwise until it locks.
4. Place the **Feeding Hole Lid** (1) into the hole in the **Lid** (2) and turn until secure.
5. Make sure the **Control Dial** (12) is set to '0' position and insert the mains plug into the socket.
6. Turn the **Control Dial** (12) to choose a blending speed.
7. For an extra control the pulse setting can be used during the blending.
8. Further ingredients can be added whilst blending by removing the feed hole lid.
9. Once blending is complete, return the **Control Dial** (12) to '0'.
10. Hold the **Housing Unit** (10) and grasp the bowl handle, turn anti-clockwise and lift to release it.

Food	Max Qty	Max Times
Apples	250g	30s
Oranges	300g	30s
Grapes	250g	30s
Strawberries	250g	30s
Maximum capacity 1200ml		

⚠ WARNING!

1. NEVER blend boiling liquids or hot ingredients. Allow them to cool before placing in the jug.
2. Do not operate without liquid
3. Do not crush ice or dried fruit.
4. Do not fill the jug above the Max level, some mixtures increase in volume during blending and create pressure in the jug.
5. Do not operate for more than 30 seconds and allow the blender to rest for 1 minute between cycles. Repeat until the desired results are reached, to finish blending turn the **Control Dial (12)** to '0'.
6. Do not allow the blender to work with thick mixtures or heavy foods which will not let the motor run freely. If the motor does not run freely, stop the blender and add liquid or reduce the contents of the jug.

Cleaning and Maintenance of Your Food Processor

Always disconnect the food processor from the mains power supply before cleaning.

Wash the jug, processing bowl and blade attachments in warm soapy water only.

⚠ WARNING! The blades inside the jug attachment are not removable and are very sharp; extreme caution should be taken whilst cleaning the inside of the jug and attachment.

Clean the outside of the housing unit with a clean damp cloth. Never clean with harsh or abrasive cleaners.

Do not submerge the housing unit in water or any other liquids.

Troubleshooting Guide

<i>Problem</i>	<i>Possible Cause</i>	<i>Possible Fix</i>
The unit is not operating	No power to the unit	Ensure the Mains plug is inserted and the socket on (if applicable)
	The unit is assembled incorrectly	Check that the unit is assembled correctly so that the safety lock system is activated
Unit stops running during use	Bowl lid may have come loose during processing.	Ensure the bowl lid is correctly fitted.
Motor is running but the unit is not processing food.	Driver not installed correctly.	Ensure the Driver is installed correctly.
Food is not blended well	Too lower processing speed.	Increase the speed setting on the Control Dial.

Technical Specification

Model Number	SDA2100
Rated Voltage	220-240V~ 50/60Hz
Rated Power	750W
Capacity – Blender	1800ml
Capacity – Processing Bowl	1200ml
Protection Class	II
Power consumption of equipment in Off Mode shall not exceed 0,30W	0,00W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). If in doubt, consult a qualified electrician. Never use a mains plug with the fuse cover missing.


If you need to remove the plug – **DISCONNECT FROM THE MAINS** – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

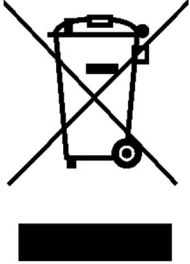Disposal of the Product

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie to find your nearest recycling point.

Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.



Notes



DAEWOO®

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty* please register your purchase online within 28 days of the original purchase date by registering at

<https://help.daewooelectricals.com>

or

[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)

****Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.***

Daewoo is a registered trademark.
Produced and imported under licence by
EuroSonic Group (ESG) Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com