



# DAEWOO®



## CORDLESS PRO CHOPPER



---

**Contents****Page No.**

2	Contents
3	Reading and Storing the User Manual
3	Important Safety Instructions for Proper Use
6	Explanation of Symbols
7	Description of Parts
7	Preparing for Use
8	Charging Your Pro Chopper
8	Assembling Your Pro Chopper
8	Using Your Pro Chopper
9	Indicator lights
9	Battery life during Use
9	Charging Indication
9	Overload Indication
10	Care and Maintenance
10	Cleaning Tips
10	To store
10	Technical specification
10	Customer support
11	Recycling information
Back Page	Warranty information

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

**When using electrical appliances, safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons.

The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Pro Chopper.**
- Before plugging your unit into the power supply, visually check that it is intact and has not suffered any transit damage.
- Do not immerse this appliance in water or any other liquids.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cable out of the reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

- 
- Cleaning and user maintenance shall not be made by children.
  - Do not leave the appliance unattended during use.
  - Do not leave the appliance unattended whilst connected to the mains supply.
  - Always use this appliance on a solid, level, non-flammable surface.
  - Protect the unit from moisture whilst using this appliance outdoors.
  - It is imperative to unplug the mains cable after the appliance has been used, before it is cleaned and whilst being repaired.
  - Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
  - If the mains cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after sales-service in order to avoid a hazard.
  - Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
  - Do not allow the USB cable to hang over sharp edges or come in contact with hot surfaces.
  - Do not use this appliance for anything other than its intended use.
  - Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
  - **CAUTION:** The blade is very sharp, handle the motor unit with care.
  - **DO NOT ATTEMPT TO SHARPEN THE BLADES**
  - **DO NOT** use the appliance if the blade assembly is bent or damaged.
  - **DO NOT** overfill the bowl.
  - **DO NOT** operate the appliance whilst it is empty.
  - **DO NOT** attempt to override the safety interlock device as
-

injury may occur.

- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- Do not use the Chopper for crushing or chopping hot or boiling foods.
- Do not use the Chopper to crush or chop bones or frozen foods (with the exception of ice cubes and frozen berries), coffee beans, grains or nutmeg.
- Non-food substances should also not be processed.
- **CAUTION: DO NOT PROCESS HOT FOODS OR LIQUIDS.**
- If the appliance overheats a thermal switch will activate and shut off the motor. To reset, unplug the appliance and allow it to cool for 30 minutes before using again.
- This product is intended for household use only. Do not use this appliance for anything other than its intended use.
- **WARNING:** Exercise caution when attaching or removing attachments from the Chopper and ensure the appliance is turned off and unplugged whilst fitting attachments.
- **NOTE:** The Chopper should not be used for more than 1 minute intervals. Ensure you allow a 10 minute rest period after every 1 minute cycle.
- **CAUTION:** Always remove the USB cable from the Chopper before use.

### Explanation of Symbols


The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

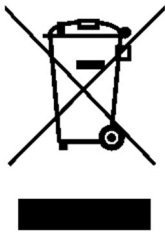

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) to find your nearest recycling point.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

## Description of Parts



1. Motor Housing Unit
2. Sealing Cover
3. Blade Shaft
4. Glass Bowl
5. Non-slip Mat
6. Low Speed Button
7. High Speed Button
8. Power Indicator Lights
9. USB Charger Port
10. USB Charger Cable



## Preparing For Use

- Carefully unpack the motor housing unit and all parts. Remove any tape, labels or packaging materials.
- Wash all product attachments carefully except for the motor housing unit with warm, soapy water. Rinse and dry thoroughly.
- Wipe exterior surfaces of the motor housing with a soft, moist cloth to remove dust particles collected during packing and handling.

**NEVER IMMERSIVE THE MOTOR HOUSING, USB CHARGING CABLE IN WATER OR ANY OTHER LIQUID.**

- Ensure all parts are properly assembled and in place before use.

### Charging Your Pro Chopper

1. Open the **USB Charging Port** (9) on the **Motor Housing Unit** (1). Attach micro end of **USB Charging Cable** (10) to the motor housing.
2. Attach the USB connector (larger end) into a suitable USB charger rated to at least 1 Amp. (**NB** most USB chargers are rated 1 Amp or above). The internal battery will begin to charge.
3. The **Power Indicator Lights** (8) will flash while charging. The lights will stop flashing once the unit is fully charged. See indicator Light section for details.

**NB:** The unit is shipped with approximately 30% charge in the batteries. One or two lights will be illuminated during use. It is recommended to fully charge before first use for best performance.

4. It will approximately 2.5 hours to fully charge the unit.

### Assembling Your Pro Chopper

Hold the chopper **Blade Shaft** (3) carefully and push onto the metal shaft in the bottom of the **Glass Bowl** (4) until secure. Align the U-shape openings on the **Sealing Cover** (2) with the U shapes in the **Glass Bowl** (4) and push in place. Align the pins in the **Sealing Cover** (2) with the small openings in the **Motor Housing Unit** (1) and place the **Motor Housing Unit** (1) onto the **Sealing Cover** (2). The **Motor Housing Unit** (1) should fit flush with no gaps.

### Using Your Pro Chopper

This chopper can also be used just like a normal chopper but without the cord!

1. Place **Blade Shaft** (3) onto metal shaft in the bottom of the **Glass Bowl** (4).
2. Place food to be chopped into the bowl. Do not overfill.
- ⚠️WARNING!** The Blades are sharp so great care should be taken.
3. Place the **Sealing Cover** (2) and **Motor Housing Unit** (1) onto the **Glass Bowl** (4). The **Power Indicator Lights** (8) will flash on the **Motor Housing Unit** (1) to indicate the unit is ready to use.
4. Press the **Low Speed button** (6) or the **High Speed button** (7) on top of the **Motor Housing Unit** (1). Allow the chopper to work through the chopping process. Do not shake or move the chopper while operating.
5. When chopping has finished, release the **Speed Button** (6) or (7) and the unit will stop. Make sure the **Blade Shaft** (3) has completely stopped before removing the **Motor Housing Unit** (1) and **Sealing Cover** (2).
6. Remove the **Blade Shaft** (3) by grasping the shaft firmly and lift it up. Be carefully, the blades are sharp!
7. After the **Blade Shaft** (3) has been removed the ingredients can be removed from the **Glass Bowl** (4).

**Do not use the chopper for longer than 1 minute continuously. After 1 minute of continuous use, the unit may become over-heated. Allow the unit to rest for at least 5 minutes before resuming use.**

8. The lights will extinguish as the battery life reduces. A fully charged unit will show all three lights. When only one light is illuminated and flashing, this indicates that the unit needs to be charged.
9. If food becomes lodged around the chopping blade during use:
  - Release the **Speed Button** (6) or (7) and wait for the blades to stop.
  - Remove the **Motor Housing Unit** (1) and sealing cover.
  - Use a spatula to carefully dislodge the food. **Do not** use fingers as the blades are sharp.
  - After the food has been removed and blades are clear, reassemble the **Sealing Cover** (2) and **Motor Housing Unit** (1) and continue.

### **Indicator Lights**

The motor housing indicator lights provide feedback for different situations:

#### **Battery Life During Use:**

As the motor housing is used and the battery begins to drain during performance, the **Power Indicator Lights** (8) will extinguish in sequence from the top to the bottom to indicate how much battery capacity is left.

- 66% to 100% of capacity: Lights 1, 2 and 3 will illuminate.
- 33% to 65% of capacity: Light 1 & 2 will illuminate.
- 20% to 30% of capacity: Light 1 will illuminate.
- If less than 20% of capacity: Light 1 flashes and the unit needs to be charged.

#### **Charging Indication:**

Indicator lights will also provide feedback during the charging process:

- If battery capacity is less than 33%, Lights 1, 2 and 3 will flash while charging.
- If battery capacity is within 33%-65%, Light 1 will illuminate and Lights 2 and 3 will flash.
- If battery capacity is within 66%-99%, Lights 1 and 2 will illuminate and only Light 3 will flash.
- If battery capacity is greater than 99%, Lights 1, 2 and 3 will illuminate.

#### **Overloading Indication:**

**Note:** The motor housing has an automatic protection system that will not allow overloading. If the load is too large, the unit will automatically shut off. If the unit senses an overload situation, the **Power Indicator Lights** (8) will flash 5 times and the unit will turn Off. Release the **Speed Button** (6) or (7) and the **Power Indicator Lights** (8) will turn off. Reduce the load on the chopper, allow it to rest for more than 15 minutes and then resume use.

Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C may cause an explosion.

### Care and Maintenance

**CAUTION:** Unplug the **USB Charging Cable** (10) from the Chopper before cleaning.

- Wash the attachments in warm soapy water and dry thoroughly.
- Clean the outside of the motor housing with a clean damp cloth. Never clean with harsh or abrasive cleaners.
- **Do not submerge the Motor Housing Unit in water or any other liquids.**

**⚠ WARNING!** **DO NOT CLEAN ANY PART OF YOUR HAND BLENDER IN A DISHWASHER. WASH IN WARM SOAPY WATER AND DRY THOROUGHLY.**

### Cleaning Tips

- To ease washing it is advised to rinse parts immediately after mixing.
- Use a small brush (not supplied) to remove particles lodged in the attachments.

### To Store:

Ensure all parts are clean and dry before storing. Never store it while it is wet. The unit can be stored for up to 3 months with a fully charged state. If storing for longer than 3 months the unit should be charged before next use. Store in a dry area in an ambient temperature of 5°C - 35°C.

### Technical Specification

Model no.	SDA2635
Battery	2000mAh Li-Ion
Rated Power	200W

### **Customer Support**

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: [help@daewooelectricals.com](mailto:help@daewooelectricals.com).

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

## Recycling Information

### Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

### Disposal of the Product



You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) enter your postcode to find your nearest recycling site.



This symbol means batteries and rechargeable batteries may not be disposed of with household waste!

As the end user you are required by law to bring all batteries and rechargeable batteries to a collection point run by the Local Authority or to a retailer, so that they can be disposed of in an environmentally friendly manner.



# DAEWOO®

## WARRANTY

*Thank you for purchasing your Cordless Pro Chopper*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty vacuum should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at:*

**<https://help.daewooelectricals.com>**

**or**

**[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)**

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.  
Produced and imported under licence by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)