



**DAEWOO®**



\*Please refer to the warranty section for terms of your extended guarantee



**WET & DRY MULTI GRINDER**

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

**When using electrical appliances, safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Wet & Dry Multi-Grinder.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Do not use this product with a programmer, timer, separate remote-control system or any other device.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Do not immerse this appliance in water or any other liquids.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cable out of the reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and

knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Protect the unit from moisture whilst using this appliance outdoors.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- It is imperative to unplug the mains cable after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- Do not operate this appliance with a damaged plug or mains cable, after a malfunction or after being dropped or damaged in any way.
- Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- Do not use this appliance for anything other than its intended use.
- Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- Switch off the appliance and disconnect from the mains supply before changing accessories or approaching parts

that move in use.

- Allow the unit to cool before storage.
- Do not touch the blades whilst the grinder is connected to the mains.
- Wash the blades in warm soapy water, rinse and dry thoroughly.

** WARNING!** The blades on this grinder are very sharp; extreme caution should be taken whilst cleaning.

### Explanation of Symbols

The following warning symbols or words are used in this instruction manual:




Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.

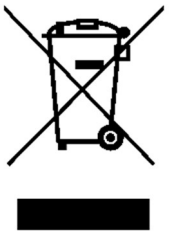

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to land fill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeiteland.ie](http://www.weeeiteland.ie), enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

## Description of Parts



1. Lid
2. Grinder
3. Safety Interlock Cover
4. Power Button
5. Motor Body

### Before First Use of Your Wet & Dry Multi Grinder

- Remove all packing materials and discard responsibly.
- Before use, Rinse the grinding chamber with warm water and wipe with a soft cloth.
- Wipe the outside of the unit with a soft damp cloth.
- Do not use harsh or abrasive cleaners.
- Do not clean any part of your Wet & Dry Multi Grinder in a dishwasher.
- Do not immerse the appliance in water or any other liquid.

**⚠ WARNING!** Extreme caution should be taken whilst cleaning the blades to avoid injury.

## Using Your Wet & Dry Multi Grinder

1. Place the grinder on a solid level, non-flammable surface.

2. Right: Remove the **Safety Interlock Cover (3)** by rotating it anti-clockwise.



3. Left: Lift the **Lid (1)** off the **Grinder (2)**.



4. Right: Remove the **Grinder (2)** from the **Motor Body (5)**



5. Left: Place coffee beans or chosen spices into the **Grinder (2)**, ensure that the 'MAX' mark on the inside of the grinder is not exceeded. The grinder can hold up to 85g of coffee beans or spices at a time.

6. Replace the **Grinder (2)** onto the **Motor Body (5)** by rotating clockwise and replace the **Lid (1)** onto the grinder.
7. Before use replace the **Safety Interlock Cover (3)** by rotating clockwise until it locks into place.  
The Wet & Dry Multi Grinder will not operate until the **Safety Interlock Cover (3)** is properly replaced.
8. Plug the grinder into the nearest socket outlet.
9. Press the **Power Button (4)** to grind the chosen contents, look through the clear **Lid (1)** to check the consistency of contents.
- i** Press and hold the **Power Button (4)** for a finer consistency.
10. Once the desired consistency has been reached release the **Power Button (4)** and allow the blades to stop spinning before opening the **Lid (1)**.
11. Remove the mains plug from the socket.

- i** The Grinder can also be used to chop herbs and spices such as pepper, cinnamon, dried chilli and coriander seeds. The **Grinder (2)** should be thoroughly cleaned after chopping herbs and spices to avoid odours and taste affecting the next usage.  
The Grinder can also be used to chop moist foods such as Hummus, Pesto, etc. Ensure that the Grinder is not filled above the 'MAX' mark.

**⚠ WARNING!** Do not run the appliance continuously for more than 1 minute, allow the appliance to cool down for 3 minutes between two continuous cycles.

### **Care and Maintenance**

- Always disconnect the grinder from the mains supply and allow to fully cool before cleaning.
- Rinse the **Grinder (1)** with warm water and wipe with a soft cloth after each use. Extreme care should be exercised whilst cleaning the grinder as the blades are sharp.
- Wipe the outside of the grinder with a soft damp cloth.
- Never clean with harsh or abrasive cleaners.
- Do not submerge the unit in water or any other liquids.
- Do not clean any part of your grinder in a dishwasher.
- Store the grinder in a cool, dry place out of direct sunshine.

### ***Technical Specification***

Model Number	SDA2697
Rated Voltage	220-240V ~ 50-60Hz
Rated Power	200W
Grinding Chamber Capacity	85g (Max)
Protection Class	II
ErP	0,00W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

### ***Troubleshooting***

<b><i>Symptom</i></b>	<b><i>Possible Cause</i></b>	<b><i>Possible Solution</i></b>
The Grinder is not grinding	The Safety Interlock is not positioned correctly.	Ensure that the Grinder is mounted correctly on the Motor Body and the Safety Interlock cover is in place to operate the Safety Interlock.
Consistency of coffee beans, herbs and spices is too coarse	The contents have not been ground sufficiently	Press and Hold the Power Button, ensuring that consistency is monitored through the clear Lid.
There is no power to the unit	The fuse in the plug has failed	Check the fuse by substitution
	The grinder is not connected to the mains supply	Check that the appliance is connected to the mains supply. Ensure the mains socket is switched on (if applicable)

## **Recycling Information**


### **Disposal of the Packaging**

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of recyclable plastics in appropriate plastic re-cycling facilities.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

### **Disposal of the Product**

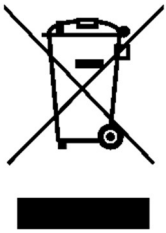

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeireland.ie](http://www.weeeireland.ie) enter your postcode to find out your nearest recycling site.

## ***Customer Support***

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: [help@daewooelectricals.com](mailto:help@daewooelectricals.com).

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.
- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

NOTES





# DAEWOO®

## WARRANTY

*Thank you for purchasing your Daewoo product.*

*As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee*

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty\* please register your purchase online within 28 days of the original purchase date by registering at:*

**<https://help.daewooelectricals.com>**

**or**

**[Contact Us \(daewooelectricals.com\)](https://www.daewooelectricals.com)**

\*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.  
Produced and imported under licence by  
Eurosonic Group Limited  
Brightgate House  
1 Brightgate Way  
Manchester M32 0TB UK  
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006  
[www.esgltd.com](http://www.esgltd.com)