



5 Speed Settings

150W HAND MIXER

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.


IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this hand mixer.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- **DO NOT** use this appliance with an extension cable.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance shall not be used by children.
- Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Children less than 3 years should be kept away unless continuously supervised.

-
- **DO NOT** immerse the appliance or its cord in water or any other liquids.
 - **DO NOT** leave the appliance unattended during use.
 - **DO NOT** leave the appliance unattended whilst connected to the mains supply.
 - Always use this appliance on a solid, level, non-flammable surface.
 - **DO NOT** use this appliance outdoors.
 - It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
 - Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
 - **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
 - Regular, periodic checks should be carried out on the power cord to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
 - If the power cord is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard.
 - **DO NOT** allow the power cord to hang over sharp edges or come in contact with hot surfaces.
 - Allow the unit to cool before storage.
 - Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
 - This appliance is intended for household use only and should not be used for industrial purposes.
 - **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
 - **DO NOT** use this appliance for anything other than its intended use.

- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
 - Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
 - Grasp the plug, not the cord.
 - **DO NOT** touch the blades whilst the appliance is connected to the mains.
 - Wash the blades in warm soapy water, rinse and dry thoroughly.
-  **WARNING!** The blades on this appliances are sharp; extreme caution should be taken whilst cleaning.
- **The maximum operating time should not exceed 3 minutes.**
 - **Allow 20 minutes rest time between two consecutive 3 minute operating cycles.**

Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.



Products labelled with this symbol conform to applicable provisions of the European Economic Area.

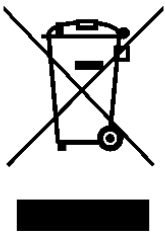

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.



This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

 


This Class 2 symbol indicates that the product is electrically double insulated and does not require an earth connection.



This designates a hazard with moderate risk, which may result in severe injury if not adhered to.

Description of Parts & Accessories

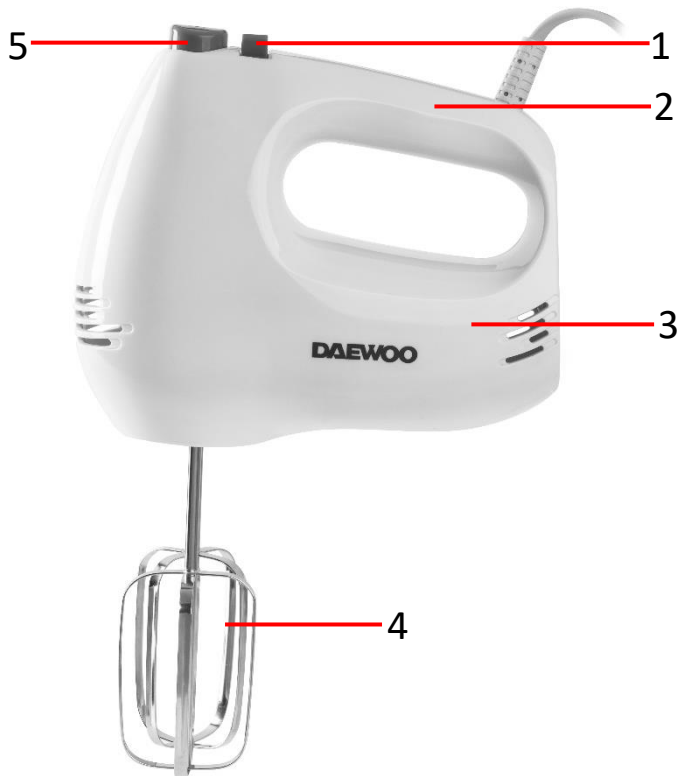

1. Speed Control Switch
2. Handle
3. Main Body
4. Whisk Attachments
5. Attachment Eject Button

Before first Use of Your Hand Mixer

- Remove all packing materials and discard responsibly.
- Check that all parts are present – See '**Description of Parts & Accessories**' above.
- Before using the mixer for the first time, wash the **Whisk Attachments (4)** in warm soapy water and dry thoroughly afterwards.
- Do not immerse the **Main Body (3)** of the mixer in water or any other liquids.

⚠ WARNING! The blades on this hand mixer set are sharp; extreme caution should be taken whilst cleaning.

- Do not clean any part of your hand mixer in a dishwasher
- Wipe over the **Main Body (3)** with a clean damp sponge or cloth.
- Do not use harsh or abrasive cleaners.

Attaching and Removing the Whisk Attachments (4)

⚠ WARNING! Ensure that the mixer is disconnected from the mains before removing or inserting the **Whisk Attachments (4)**.

1. To insert both **Whisk Attachments (4)**, push each one into one of the two holes on the underside of the **Main Body (3)** of the mixer until they lock into place and do not fall out.

i The **Whisk Attachments (4)** may need to be rotated a little for them to insert fully.

2. To remove the **Whisk Attachments (4)**, hold the attachments and press the **Attachment Eject Button (5)** to eject the **Whisk Attachments (4)**.

Using the Hand Mixer

1. Place the **Whisk Attachments (4)** into the hand mixer as described above.
2. Insert the mains plug into the nearest socket.
3. Place the whisk attachments into the food before operating the mixer to prevent splattering.
4. Push the **Speed Control Switch (1)** to the right to start mixing, move the switch forwards from 1 to 5 to change the mixing speed from low to high.
5. The speed will be dependent on both the quantity and consistency of the food being mixed, use lower speeds for small quantities and softer foods and the higher speeds for larger quantities and harder foods.
6. Return the **Speed Control Switch (1)** fully left to the ‘O’ position to switch off the mixer.

Care and Maintenance of Your Hand Mixer

⚠ WARNING! The blades are sharp, extreme caution should be taken whilst cleaning.

- Always disconnect the mixer from the mains power supply and remove the plug from the socket outlet before carrying out any cleaning.
- Do not immerse the **Main Body (3)** in water or any other liquids.
- Remove any accessories from the **Main Body (3)** and clean with a clean damp cloth.
- Wash the accessories only in warm soapy water and dry thoroughly afterwards.
- Do not use harsh or abrasive scouring pads, powders or cleaners.
- Do not place in a dishwasher.
- Store in a dry cool place away from direct heat and sunlight.

Non-Wireable Mains Plug

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.

If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification


Model Number	SDA2722
Rated Voltage	220-240V ~ 50Hz
Rated Power	150W
Protection Class	II

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

 Disposal of the Product

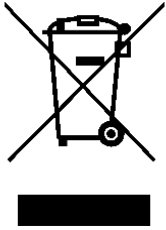

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk, enter your postcode to find out your nearest recycling site.



Daewoo Essentials is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com