

The
GRINCH
Dr. Seuss



SCOOPS
OF JOY



400ML ICE CREAM MAKER

Make your own ice cream and top it with extra Whoville joy!

SDA2794GE



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

READING AND STORING THE USER MANUAL



BEFORE USING THIS PRODUCT, PLEASE READ THROUGH THIS MANUAL CAREFULLY PAYING PARTICULAR ATTENTION TO THE SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY OR DAMAGE TO THE PRODUCT.

CAREFULLY SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE. ENSURE THE USER MANUAL IS INCLUDED WHEN PASSING THE PRODUCT ON TO ANY THIRD PARTIES.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

WHILST USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED.

- **READ AND FAMILIARISE YOURSELF WITH ALL OPERATING INSTRUCTIONS BEFORE USING THIS ICE CREAM MAKER.**
- **BEFORE PLUGGING YOUR UNIT INTO THE MAINS, VISUALLY CHECK THAT IT IS INTACT AND HAS NOT SUFFERED ANY TRANSIT DAMAGE.**
- **CHECK THAT THE VOLTAGE INDICATED ON THE DATA PLATE CORRESPONDS WITH THAT OF THE LOCAL NETWORK BEFORE CONNECTING THE APPLIANCE TO THE MAINS POWER SUPPLY.**
- **DO NOT USE THIS PRODUCT WITH A PROGRAMMER, TIMER, SEPARATE REMOTE-CONTROL SYSTEM OR ANY OTHER SUCH DEVICE.**
- **DO NOT IMMERSE THIS APPLIANCE IN WATER OR ANY OTHER LIQUIDS.**
- **CLOSE SUPERVISION IS REQUIRED WHEN USING THIS APPLIANCE NEAR CHILDREN.**
- **NEVER LEAVE THIS APPLIANCE WITHIN REACH OF CHILDREN.**
- **THIS APPLIANCE SHALL NOT BE USED BY CHILDREN FROM 0 TO 8 YEARS.**
- **THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED.**
- **CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.**
- **CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN UNLESS THEY ARE OLDER THAN 8 AND SUPERVISED.**
- **KEEP THE APPLIANCE AND ITS CORD OUT OF REACH OF CHILDREN LESS THAN 8 YEARS.**
- **CLEANING AND USER MAINTENANCE SHALL NOT BE MADE BY CHILDREN.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED DURING USE.**
- **DO NOT LEAVE THE APPLIANCE UNATTENDED WHILST CONNECTED TO THE MAINS SUPPLY.**
- **ALWAYS USE THIS APPLIANCE ON A SOLID, LEVEL, NON-FLAMMABLE SURFACE.**



- **DO NOT USE THIS APPLIANCE OUTDOORS.**
- **IT IS IMPERATIVE TO UNPLUG THE POWER CORD AFTER THE APPLIANCE HAS BEEN USED, BEFORE IT IS CLEANED AND WHILST BEING REPAIRED.**
- **REGULAR, PERIODIC CHECKS SHOULD BE CARRIED OUT ON THE SUPPLY CORD TO ENSURE NO DAMAGE IS EVIDENT. SHOULD THERE BE ANY SIGNS OF DAMAGE THE APPLIANCE SHOULD NOT BE USED.**
- **IF THE SUPPLY CORD IS DAMAGED IT IS TO BE REPLACED BY QUALIFIED PERSONNEL IN ORDER TO AVOID A HAZARD.**
- **DO NOT OPERATE THIS APPLIANCE WITH A DAMAGED PLUG OR CORD, AFTER A MALFUNCTION OR AFTER BEING DROPPED OR DAMAGED IN ANY WAY.**
- **DO NOT ALLOW THE MAINS CABLE TO HANG OVER SHARP EDGES OR COME IN CONTACT WITH HOT SURFACES.**
- **THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE ONLY AND SHOULD NOT BE USED FOR INDUSTRIAL PURPOSES.**
- **DO NOT USE ANY ACCESSORIES OR ATTACHMENTS WITH THIS APPLIANCE OTHER THAN THOSE SUPPLIED OR RECOMMENDED BY SUPPLIER.**
- **DO NOT USE THIS APPLIANCE FOR ANYTHING OTHER THAN ITS INTENDED USE.**
- **DO NOT PUSH OBJECTS INTO ANY OPENINGS AS DAMAGE TO THE APPLIANCE AND/OR ELECTRIC SHOCK MAY OCCUR.**
- **CAUTION: THE BLADE ASSEMBLY IS EXTREMELY SHARP, HANDLE WITH CARE. WHEN HANDLING THE BLADE LID ASSEMBLY ALWAYS HOLD BY THE HANDLE.**
- **DO NOT OVERFILL PAST THE MAX MARK.**
- **DO NOT OPERATE THE APPLIANCE WHILST IT IS EMPTY.**
- **ALWAYS REMOVE THE PLUG AND LID WHEN SERVING FROM THE JUG.**
- **UNPLUG AFTER EACH USE. GRASP THE PLUG, NOT THE CORD.**



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

EXPLANATION OF SYMBOLS

THE FOLLOWING WARNING SYMBOLS OR WORDS ARE USED IN THIS INSTRUCTION MANUAL:

**UK
CA**

PRODUCTS LABELLED WITH UK CONFORMITY ASSESSMENT IDENTIFIES PRODUCTS CONFORMING TO UK STATUTORY REQUIREMENTS.

CE

PRODUCTS LABELLED WITH THIS SYMBOL CONFORM TO APPLICABLE PROVISIONS OF THE EUROPEAN ECONOMIC AREA.



YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE AND NOT SENT TO LANDFILL. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT

WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



THIS SYMBOL PROVIDES USEFUL ADDITIONAL INFORMATION ON THE USE OF THIS PRODUCT.



THIS SYMBOL INDICATES THAT THE SUPPLY USES AN ALTERNATING CURRENT MAINS SUPPLY.



THIS CLASS 2 SYMBOL INDICATES THAT THE PRODUCT IS ELECTRICALLY DOUBLE INSULATED AND DOES NOT REQUIRE AN EARTH CONNECTION.

DESCRIPTION OF PARTS



- 1. FREEZER BOWL**
- 2. ON/OFF SWITCH**
- 3. MOTOR HOUSING**
- 4. MIXING PADDLE**
- 5. INGREDIENT FUNNEL**

BEFORE FIRST USE OF YOUR ICE CREAM MAKER


- REMOVE ALL PACKING MATERIALS AND DISPOSE OF RESPONSIBLY.
- ENSURE APPLIANCE IS SITUATED IN AN OPEN AREA, DO NOT ALLOW IT TO COME IN CONTACT WITH CUPBOARDS, CURTAINS, WALL COVERINGS, CLOTHING OR OTHER FLAMMABLE MATERIALS.
- LIFT OFF THE MOTOR HOUSING (3) AND WASH THE INSIDE OF THE FREEZER BOWL (1), MIXING PADDLE (4) AND THE INGREDIENT FUNNEL (5) IN A MILD DETERGENT AND THEN RINSE AND DRY THOROUGHLY BEFORE USE.
- DO NOT IMMERSE THE MOTOR HOUSING (3) IN WATER OR ANY OTHER LIQUIDS. TO CLEAN, WIPE WITH A DAMP CLOTH.

PREPARATION

- PLACE THE FREEZER BOWL (1) IN YOUR FREEZER FOR A MINIMUM OF 8 HOURS AT APPROXIMATELY -18°C OR THE LOWEST POSSIBLE TEMPERATURE.

i THE MAXIMUM TOTAL AMOUNT OF INGREDIENTS 500g.

- BEFORE YOU BEGIN MAKING YOUR ICE CREAM, MIX TOGETHER ALL YOUR ICE CREAM INGREDIENTS AND THOROUGHLY CHILLI IN A REFRIGERATOR.
- ATTACH THE PADDLE TO THE MOTOR HOUSING (1) (SEE FIG 1).

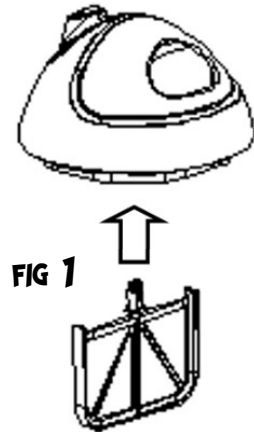

HOW TO MAKE ICE CREAM

- ONCE YOU HAVE COMPLETED THE PREPARATION PROCESS, YOU CAN BEGIN TO START MAKING YOUR ICE CREAM.
- REMOVE THE FREEZER BOWL (1) FROM YOUR FREEZER.
- PLACE THE FREEZER BOWL (1) ON A SOLID, LEVEL, SURFACE CLEAR OF ALL OBSTRUCTIONS AS DESCRIBED ABOVE.
- PLACE THE MOTOR HOUSING (3) ON TOP OF THE FREEZER BOWL (1) ENSURING IT IS FULLY SEATED AND ALIGNED WITH THE FREEZER BOWL (1).
- ENSURE THE ON/OFF SWITCH (2) IS IN THE OFF POSITION (O)
- INSERT THE MAINS PLUG INTO THE MAINS SOCKET AND SWITCH ON THE SOCKET (IF APPLICABLE)
- NOW SWITCH ON THE ON/OFF SWITCH (2) ON THE MOTOR HOUSING (3)
- THE PADDLE WILL BEGIN TO TURN AND START THE PROCESS OF TURNING YOUR MIXTURE INTO ICE CREAM.
- SLOWLY POUR IN THE INGREDIENT THROUGH THE INGREDIENT FUNNEL (5).
- THE ICE CREAM MIXING PROCESS WILL TAKE APPROXIMATELY 20 MINUTES OF RUN TIME.
- CHECK REGULARLY FOR CONSISTENCY AND DO NOT LEAVE THE ICE CREAM MAKER UNATTENDED WHILST RUNNING.
- WHEN YOU ARE HAPPY WITH THE RESULTS OR 20 MINUTES HAS PASSED. SWITCH OFF THE ICE CREAM MAKER ON/OFF SWITCH (2) AND UNPLUG FROM THE MAINS.

i DO NOT ALLOW THE MIXING PADDLE (4) TO STRUGGLE, AS THIS WILL INDICATE THE ICE CREAM IS READY OR THE INGREDIENTS NEED BREAKING UP.

i FOR THICKER ICE CREAM AFTER THE MIXING HAS BEEN COMPLETED, RETURN THE FREEZER BOWL (1) TO THE FREEZER WITH THE INGREDIENTS INSIDE. DO NOT PLACE THE MOTOR HOUSING (3) IN THE FREEZER OR FRIDGE.



TIPS FOR BEST RESULTS

- **WHEN ADDING SOLID INGREDIENTS SUCH AS CHOCOLATE CHIPS OR CHOPPED NUTS. WAIT AT LEAST 5 MINUTES FROM THE START OF THE MIXING PROCESS OR UNTIL THE MIXTURE IS THICK AND HAS STARTED TO FREEZE. MAKE SURE THE MIXING PADDLE (4) IS FIRMLY PRESSED DOWN TO THE BOTTOM OF THE FREEZER BOWL (1) WHEN REPLACING THE MOTOR HOUSING (3).**
- **THE FINISHED RESULT OF YOUR ICE CREAM WILL BE SOFTER THAN STORE-BOUGHT ICE CREAM.**
- **ICE CREAM TASTES BEST WHEN FRESH. IT WILL BEGIN TO LOSE ITS FRESH TASTE AFTER SEVERAL DAYS IN THE FREEZER.**
- **USING METAL UTENSILS MAY SCRATCH THE SURFACE OF THE FREEZER BOWL (1). THIS WILL NOT HARM THE UNIT. PLASTIC UTENSILS ARE RECOMMENDED WHEN EATING DIRECTLY FROM THE FREEZER BOWLS TO EXTEND THE LIFE OF YOUR UNIT.**
- **LIGHTLY PUSHING DOWN ON THE MOTOR HOUSING (3) BY HAND WILL HELP THE MIXING PROCESS AND PREVENT TOO MUCH ICE CREAM FROM STICKING TO THE SIDE OF THE BOWL. A THIN LAYER OF FROST WILL ALWAYS STICK TO THE OUTSIDE OF THE BOWL; THIS IS NORMAL.**
- **KEEP THE FREEZER BOWL IN THE FREEZER SO THAT YOU CAN MAKE ICE CREAM AT ANY TIME.**
- **FOR BEST RESULTS, THE FREEZER BOWL MUST BE FROZEN THOROUGHLY. MAKE SURE TO SET YOUR FREEZER TO THE COLDEST POSSIBLE SETTING (TEMPERATURE SHOULD NOT BE MORE THAN -18°C).**
- **THE FIRMNESS OF YOUR ICE CREAM DEPENDS ON VARIABLES SUCH AS THE RECIPE YOU HAVE USED, ROOM TEMPERATURE, AND TEMPERATURE OF INGREDIENTS BEFORE CHURNING.**
- **SOME RECIPES REQUIRE THE MIXTURE TO BE PRECOOKED. AS A RESULT MAKE THE RECIPE AT LEAST ONE DAY AHEAD. THIS WILL ALLOW THE MIXTURE TO COOL COMPLETELY AND INCREASE VOLUME. BASE MIXTURE MAY NOT FREEZE IF IT IS NOT THOROUGHLY CHILLED.**
- **DO NOT REMOVE FREEZER BOWL FROM THE FREEZER UNTIL READY TO USE.**
- **DO NOT PUNCTURE OR HEAT THE FREEZER BOWL.**

CARE AND MAINTENANCE OF ICE CREAM MAKER

- **ALWAYS DISCONNECT THE ICE CREAM MAKER FROM THE MAINS POWER SUPPLY BEFORE CLEANING.**
- **RINSE THE FREEZER BOWL OUT CAREFULLY AND DRY THOROUGHLY.**
- **CLEAN THE MOTOR HOUSING BY WIPING WITH A CLEAN DAMP CLOTH AND DRY THOROUGHLY.**
- **CLEAN OUTSIDE OF THE MOTOR HOUSING WITH A CLEAN DAMP CLOTH.**
- **USE A SMALL BRUSH TO REMOVE PARTICLES LODGED AROUND THE MIXING PADDLE.**
- **DO NOT SUBMERGE THE MOTOR HOUSING IN WATER OR ANY OTHER LIQUIDS.**
- **NEVER CLEAN ANY PART OF THE ICE CREAM MAKER WITH HARSH CHEMICALS OR ABRASIVE CLEANERS.**



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	
ICE CREAM IS NOT FIRM ENOUGH OR ICE CREAM MAKER IS STILL RUNNING AFTER 20 MINUTES	<ul style="list-style-type: none"> • THE FREEZER BOWL WAS NOT IN THE FREEZER LONG ENOUGH. • THE FREEZER IS NOT COLD ENOUGH. ICE CREAM SETS AT -12° TO -10°C. • TOO MUCH MIXTURE WAS PUT IN FREEZER BOWL. • INGREDIENTS ARE WARM OR AT ROOM TEMPERATURE. • THE FREEZER BOWL WAS LEFT AT ROOM TEMPERATURE FOR MORE THAN 5 MINUTES BEFORE USE • THE FREEZER DOOR WAS OPENED AND CLOSED TOO MANY TIMES DURING THE FREEZING PROCESS • THE FREEZER BOWL HAS A THICK COATING OF ICE ON THE WALLS. 	<ul style="list-style-type: none"> • FOR BEST RESULTS, AT LEAST 8 HOURS OR PREFERABLY OVERNIGHT. • LOWER YOUR FREEZER TEMPERATURE SETTING. • MAXIMUM FILL IS 400ML. • PRE CHILL LIQUID INGREDIENTS. • ENSURE THE FREEZER BOWL IS ONLY REMOVED IMMEDIATELY AT THE START OF THE MIXING PROCESS • ENSURE THE FREEZER BOWL IS FULLY FROZEN PRIOR TO USE • AFTER WASHING, DRY COMPLETELY PRIOR TO PLACING BACK IN FREEZER.
ICE CREAM MAKER STOPS CHURNING BEFORE ICE CREAM IS READY.	<ul style="list-style-type: none"> • THE SOLID INGREDIENTS, SUCH AS CHOCOLATE CHIPS OR CHOPPED NUTS, WERE ADDED TOO SOON. • THE SOLID INGREDIENTS ARE TOO LARGE, CAUSING THE MIXING PADDLE TO JAM. 	<ul style="list-style-type: none"> • WAIT UNTIL ICE CREAM HAS CHURNED FOR AT LEAST 15 MINUTES OR UNTIL MIXTURE IS THICK AND HAS STARTED TO FREEZE. • PRE CHOP NUTS OR OTHER INGREDIENTS.
ICE CREAM TOO FIRM.	<ul style="list-style-type: none"> • LETTING THE ICE CREAM SIT IN THE FREEZER BOWLS FOR SOME TIME AFTER CHURNING WILL MAKE THE MIXTURE VERY FIRM AND DIFFICULT TO SCOOP. 	<ul style="list-style-type: none"> • ALLOW THE CHURNED MIXTURE TO SIT FOR A FEW ADDITIONAL MINUTES AND IT WILL BEGIN TO SOFTEN AGAIN.
THICK LAYER OF ICE CREAM STICKING TO SIDES OF THE BOWL.	<ul style="list-style-type: none"> • A THIN LAYER OF ICE CREAM ON THE SIDES OF BOWL NORMAL. GREATER STICKING TENDS TO BE PRESENT IN LOWER-FAT/LOWER-SUGAR RECIPES. 	<ul style="list-style-type: none"> • WHEN CHURNING, PLACE HAND LIGHTLY ON LID FOR THE FIRST FEW MINUTES TO HELP THESE RECIPES BEGIN TO FREEZE.



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

ICE CREAM RECIPE

ULTIMATE VANILLA

INGREDIENTS

- **284ML** CARTON DOUBLE CREAM
- **300ML** FULL FAT MILK
- **115G** GOLDEN CASTER SUGAR
- **1** VANILLA POD
- **3** LARGE FREE-RANGE EGG YOLKS
-



DIRECTIONS

STEP 1

POUR THE CREAM AND MILK INTO A MEDIUM HEAVY-BASED PAN, THEN TIP IN HALF THE SUGAR. SLIT THE VANILLA POD DOWN ITS LENGTH WITH A SMALL SHARP KNIFE AND SCOOP OUT AS MANY OF THE TINY BLACK SEEDS AS YOU CAN INTO THE CREAM MIXTURE. CUT THE POD INTO THREE AND DROP IT INTO THE PAN.

STEP 2

HEAT THE CREAM AND MILK OVER A LOW HEAT, STIRRING OCCASIONALLY, UNTIL IT ALMOST BOILS — YOU’LL SEE A FEW BUBBLES AT THE EDGE. TAKE OFF THE HEAT AND SET ASIDE FOR **30 MINUTES SO THE VANILLA CAN INFUSE.**

STEP 3

MIX THE EGG YOLKS AND REMAINING SUGAR FOR **2 MINUTES UNTIL THE MIXTURE HAS THICKENED, IS PALER IN COLOUR AND FALLS IN THICK RIBBONS WHEN YOU LIFT WHISK. MEASURING OUT ABOUT **125ML/4FL OZ** OF YOUR CREAM MIXTURE AND BEAT INTO THE EGG YOLKS AND SUGAR MIX TO SLACKEN THEM. REHEAT THE CREAM UNTIL IT JUST COMES TO THE BOIL, TAKE OFF THE HEAT AND STIR IN THE EGG YOLK MIXTURE.**

STEP 4

RETURN THE PAN TO A LOW HEAT. STIRRING ALL THE TIME WITH A WOODEN SPOON. ONCE THE CUSTARD IS THICK ENOUGH TO COAT THE BACK OF THE SPOON (DO NOT BOIL**). IF YOU SEE ANY BUBBLES ABOUT TO BURST TO THE SURFACE, IT SHOULD BE THICK ENOUGH, TAKE THE PAN OFF THE HEAT SO THE MIXTURE DOESN’T CURDLE.**

STEP 5

POUR THE CUSTARD INTO A HEATPROOF BOWL, THEN SIT IT IN A BIGGER BOWL ONE THIRD FULL OF ICED WATER TO COOL. STIR OCCASIONALLY TO STOP A SKIN FORMING. NOW PUT THE BOWL OF CUSTARD IN THE FRIDGE FOR **8 HOURS, PREFERABLY OVERNIGHT, SO IT GETS REALLY COLD.**

STEP 6

NOW SIMPLY FOLLOW THE HOW TO MAKE ICE CREAM GUIDE (SEE PAGE 6)



TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

NON-REWIREABLE MAINS PLUG

IF YOUR APPLIANCE IS SUPPLIED WITH A NON-REWIREABLE PLUG FITTED TO THE MAINS LEAD AND SHOULD THE FUSE NEEDED REPLACING, YOU MUST USE AN ASTA APPROVED ONE (CONFORMING TO BS 1362 OF THE SAME RATING). NEVER USE A PLUG WITH THE FUSE COVER MISSING. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN.

IF YOU NEED TO REMOVE THE PLUG -**DISCONNECT FROM THE MAINS**- AND THEN CUT IT OFF THE MAINS LEAD AND IMMEDIATELY DISPOSE OF IT SAFELY. NEVER ATTEMPT TO REUSE THE PLUG OR INSERT IT INTO A SOCKET OUTLET AS THERE IS A DANGER OF ELECTRIC SHOCK.

TECHNICAL SPECIFICATION

MODEL NUMBER	SDA2794
RATED VOLTAGE	220-240V~ 50/60Hz
RATED POWER	8W
PROTECTION CLASS	CLASS II
POWER CONSUMPTION OF EQUIPMENT IN OFF MODE SHALL NOT EXCEED 0.30W	NO STANDBY MODE 0.00W
THIS EQUIPMENT COMPLIES WITH ANNEX III OF THE COMMISSION REGULATION (EU) 2023/826	

RECYCLING INFORMATION


DISPOSAL OF THE PACKAGING

DISPOSE OF PAPER AND CARDBOARD IN APPROPRIATE PAPER RE-CYCLING FACILITIES.

DISPOSE OF RECYCLABLE PLASTICS IN APPROPRIATE PLASTIC RE-CYCLING FACILITIES.

DISPOSE OF NON-RECYCLABLE PLASTICS IN THE APPROPRIATE PLASTICS COLLECTION SERVICE.

DISPOSAL OF THE PRODUCT

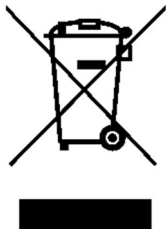

YOU SHOULD NOW RECYCLE YOUR WASTE ELECTRICAL GOODS AND IN DOING SO HELP THE ENVIRONMENT. THIS SYMBOL MEANS WASTE ELECTRICAL PRODUCTS AT THE END OF THEIR USEFUL LIFE SHOULD NOT BE DISPOSED OF WITH NORMAL HOUSEHOLD WASTE AND NOT SENT TO LANDFILL. PLEASE ENSURE IT IS TAKEN TO A SUITABLE FACILITY FOR DISPOSAL. CHECK WITH YOUR LOCAL AUTHORITY OR RETAILER FOR RECYCLING ADVICE OR VISIT WWW.RECYCLE-MORE.CO.UK OR WWW.WEEEIRELAND.IE. ENTER YOUR POSTCODE TO FIND OUT YOUR NEAREST RECYCLING SITE.



CUSTOMER SUPPORT

SHOULD YOU REQUIRE ANY PRODUCT INFORMATION, REPLACEMENT PARTS OR ACCESSORIES, PLEASE CONTACT OUR CUSTOMER CARE TEAM ON **0161 831 7879 (8.30AM-4.30PM MONDAY TO THURSDAY, 8.00AM-4.00PM FRIDAY)** AND SELECT OPTION **3** OR BY CONTACTING US VIA EMAIL **THEGRINCH@ESGLTD.COM**

- **REPLACEMENT PARTS AND ACCESSORIES ARE GUARANTEED FOR 1 YEAR FROM THE DATE OF PURCHASE.**
- **IT IS IMPORTANT TO NOTE THAT YOUR WARRANTY BECOMES INVALID SHOULD NON GRINCH PARTS OR ACCESSORIES BE USED WITH THIS APPLIANCE.**



WARRANTY

Thank you for purchasing your Grinch product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Grinch product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

*To validate your extended 2 year warranty *please email the model number and your receipt to :*

thegrinch@esgltd.com

**Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.*

TM & © 2025 Dr. Seuss Enterprises, L.P. All rights reserved.

Produced and imported under licence by Euro Group Ltd.
Brightgate House, 1 Brightgate Way, Manchester, M32 0TB, UK.
EU Rep: EuroSonic Magppie (ESM) Ltd. D05 X006, Ireland.
Made in China

www.esgltd.com