

 **DAEWOO**<sup>®</sup>  
**Essentials**



**10L WATER URN**

---

## READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully, paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

## IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

**When using electrical appliances, basic safety precautions should always be followed.**

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Water Urn.**
- Before plugging your Water Urn into the mains, visually check that the Water Urn is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- DO NOT leave the appliance unattended during use.
- DO NOT leave the appliance unattended whilst connected to the mains supply.

- 
- Always use this appliance on a solid, level, non-flammable surface.
  - DO NOT use this appliance outdoors.
  - It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
  - If the supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
  - Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
  - DO NOT operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
  - Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
  - DO NOT allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
  - DO NOT run the mains cable under carpets, rugs, etc.
  - Allow the unit to cool before storage.
  - Never place the appliance near to flammable material or high-pressure containers.
  - This appliance is intended for household use only and should not be used for industrial purposes.
  - DO NOT use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
  - DO NOT immerse the appliance, base or its cord in water or any other liquids.
  - DO NOT use this appliance for anything other than its intended use.
  - DO NOT push objects into any openings as damage to the appliance and/or electric shock may occur.
  - Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
  - Unplug after each use. Grasp the plug, not the cord.
  - DO NOT cover this appliance.
  - Never place this appliance on an electric, gas, or any other type of hob.
  - **⚠ WARNING! Do not open lid whilst the water is boiling.**
  - Never fill the Water Urn more than its capacity – ensure the water level does not exceed the 'Max' mark. If the Water Urn is overfilled, boiling water may be ejected.
  - Always close the lid during use and do not open the lid whilst the water

is boiling.

-  **WARNING!** The outside surface of the Water Urn will get hot during use.

**THIS APPLIANCE MUST BE EARTHED**

### Explanation of Symbols

 
The following warning symbols or words are used in this instruction manual:



Products labelled with this symbol conform to applicable provisions of the European Economic Area.



Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

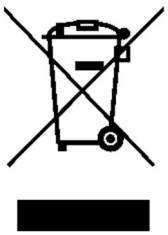

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or Visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk), enter your postcode to find out your nearest recycling site.



**WARNING!** This designates a hazard with moderate risk, which may result in severe injury or death if not adhered to.




This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.

## Description of Parts

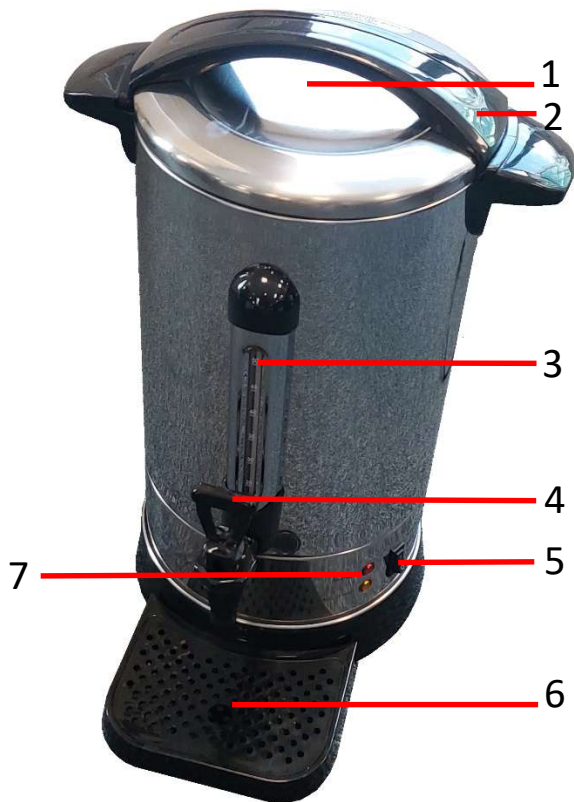 

1. Lid
2. Lid Lock/Carry Handle
3. Water Gauge
4. Water Tap
5. On/Off Switch
6. Drip Tray
7. Power/Keep Warm Indicators

### **Before the first time you use your Water Urn**

Please read these operating instructions thoroughly and keep them in a safe place for future reference.

 
Before using the Water Urn for the first time, fill to the max mark and allow the water to boil.

Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.

Do not immerse the Water Urn in water or any other liquids

### **Instructions for Use**

- Place the Water Urn on a solid, level, non-flammable surface.
- Remove the **Lid (1)** and fill the Water Urn with water to the desired level ensuring that it does not exceed the MAX mark.
- Replace the **Lid (1)** on the Water Urn and rotate anticlockwise until the **Lid (1)** locks into place (see image).
- Insert the mains plug (with dry hands) into the mains socket.
- Switch the unit on by pressing the **On/Off Switch (5)** to the on 'I' position.
- The Red **Power Indicator (7)** will illuminate, and the water will begin to heat.
- Once the Water Urn has reached temperature, the **Power Indicator (7)** will go out and the Amber **Keep Warm Indicator (7)** will illuminate, indicating that the Water Urn is keeping the contents hot.

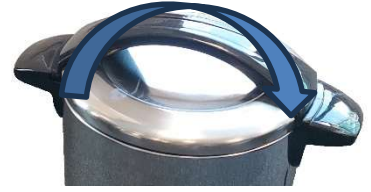

- **i** Both the **Power/Keep Warm Indicators (7)** will illuminate alternatively to indicate the water temperature is being maintained.
- Hot Water can be dispensed from the Water Urn by pulling the **Water Tap (4)** forwards.
- **i** The amount of water within the Water Urn will show on the **Water Gauge (3)**. When filled to the Max mark the water level will show as 8L on the **Water Gauge (3)**, 2 litres of water are retained below the **Water Tap (4)** to help prevent boiling dry.

### **Boil dry protection**

Should you accidentally let the appliance operate without water; the boil-dry protection will automatically switch off the power. If this occurs, disconnect from the mains supply and allow the appliance to cool. Repeatedly dry boiling will have an adverse effect on the life of the boil dry protection device and element, shortening the useful life of your Water Urn.

### **Important – Descaling your Water Urn/Reducing Limescale Build up**

- To prolong the life of your Water urn it is imperative that it is descaled regularly.
- The frequency of the descaling depends on the hardness of the water in your area and how often the appliance is used.
- In extreme hard water areas, descaling your Water Urn at least once a month is highly recommended also the use of filtered water in your Water Urn will increase the life expectancy and help prevent excessive lime scale build up.
- If the Water urn switches off before it boils or has a white deposit building up inside then it will need to be descaled.

- **i** Do not use vinegar but a commercially available descaling agent; carefully follow the quantities recommended in the instructions of the agent.

### **Care and Use of Your Water Urn**

- i** Always turn off the power supply, remove the mains plug and allow the Water Urn.
- Always rinse the Water urn immediately after each use.
  - Pour a small amount of hot water into the tank, brush the sides and bottom of the tank with a soft brush, removing any scale or sediment and rinse with hot water until it runs clean.
  - Clean the exterior with a soft cloth or sponge with warm water and a mild detergent, do not use harsh or abrasive cleaners as this could damage the surface finish of the Water urn and lead to corrosion.
  - Do not immerse the Water Urn in water or any other liquids.

### **Non-Wireable Mains Plug**

If your appliance is supplied with a non-wireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). If in doubt, consult a qualified electrician who will be pleased to do this for you. If you need to remove the plug – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

### **Technical Data**

Model Number	SDA2871
Rated Voltage	220-240V ~ AC 50/60Hz
Rated Power	1650W
Protection Class	I (This appliance must be Earthed)
Capacity	10 Litres
Power consumption of equipment in Off Mode shall not exceed 0,30W	No standby mode 0,00W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

---

**Recycling Information**

 
**Disposal of the Packaging**

Dispose of paper and cardboard in appropriate paper re-cycling facilities.

Dispose of plastics in the appropriate plastics collection service.

Dispose of non-recyclable plastics in the appropriate plastics collection service.

**Disposal of the Product**

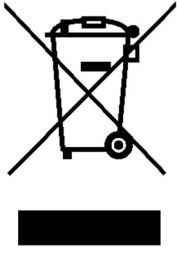

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or [www.weeeireland.ie](http://www.weeeireland.ie), enter your postcode to find out your nearest recycling site.

**UK  
CA**









Daewoo Essentials is a registered trademark.

Produced and imported under license by

Eurosonic Group Limited

Brightgate House

1 Brightgate Way

Manchester, M32 0TB, UK

EU Rep: EuroSonic Magpie (ESM) Ltd. Ireland D05 X006

[www.esg ltd.com](http://www.esg ltd.com)