DAEWOO®

WARRANTY 3* YEARS WARRANTY

*Please refer to the warranty section for terms of your extended guarantee



VACUUM SEALER

READING AND STORING THE USER MANUAL



Before using this product, please read through this manual carefully paying particular attention to the safety instructions. Failure to do so may result in personal injury or damage to the product.

Carefully save this instruction manual for future reference. Ensure the user manual is included when passing the product on to any third parties.

IMPORTANT SAFETY INSTRUCTIONS FOR PROPER USE

When using electrical appliances, basic safety precautions should always be followed.

Only use the product as described in this user manual. Any other use is considered improper and may result in damage to property or persons. The manufacturer or vendor cannot be held liable for damages or injury incurred through improper or incorrect use.

- **Read and familiarise yourself with all operating instructions before using this Vacuum Sealer.**
- Before plugging your unit into the mains, visually check that the unit is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

- Keep the appliance and its cord out of reach of children less than 8 years.
- **DO NOT** touch hot surfaces. The outer surfaces are liable to get hot during use.



- **DO NOT** immerse the appliance or its cord in water or any other liquids.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- **DO NOT** use this appliance with a programmer, timer, separate remote-control system or any other device that switches the appliance on automatically.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.
- Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the power cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after-sales-service in order to avoid a hazard
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.


- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Allow the unit to cool between continuous operation.
- Before cleaning, disconnect the appliance from the mains supply and allow to cool.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with Cupboards, Curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord
- **DO NOT** use self-made packaging bags. Only use bags provided.

Explanation of Symbols

The following warning symbols or words are used in this instruction manual:

Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements.

Products labelled with this symbol conform to applicable provisions of the European Economic Area.

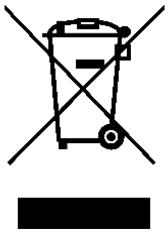

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.


This symbol provides useful additional information on the use of this product.



This symbol indicates that the supply uses an alternating current mains supply.



This symbol indicates that the surface gets hot and care must be taken.

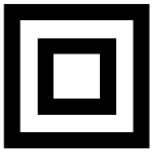


This symbol indicates that the appliance is electrically double insulated and therefore does not require an earth connection

Before first use of Your Vacuum Sealer


Remove all packing materials and discard responsibly.
Ensure all parts are present (if applicable) see ***Description of Parts*** below.

Description of Parts

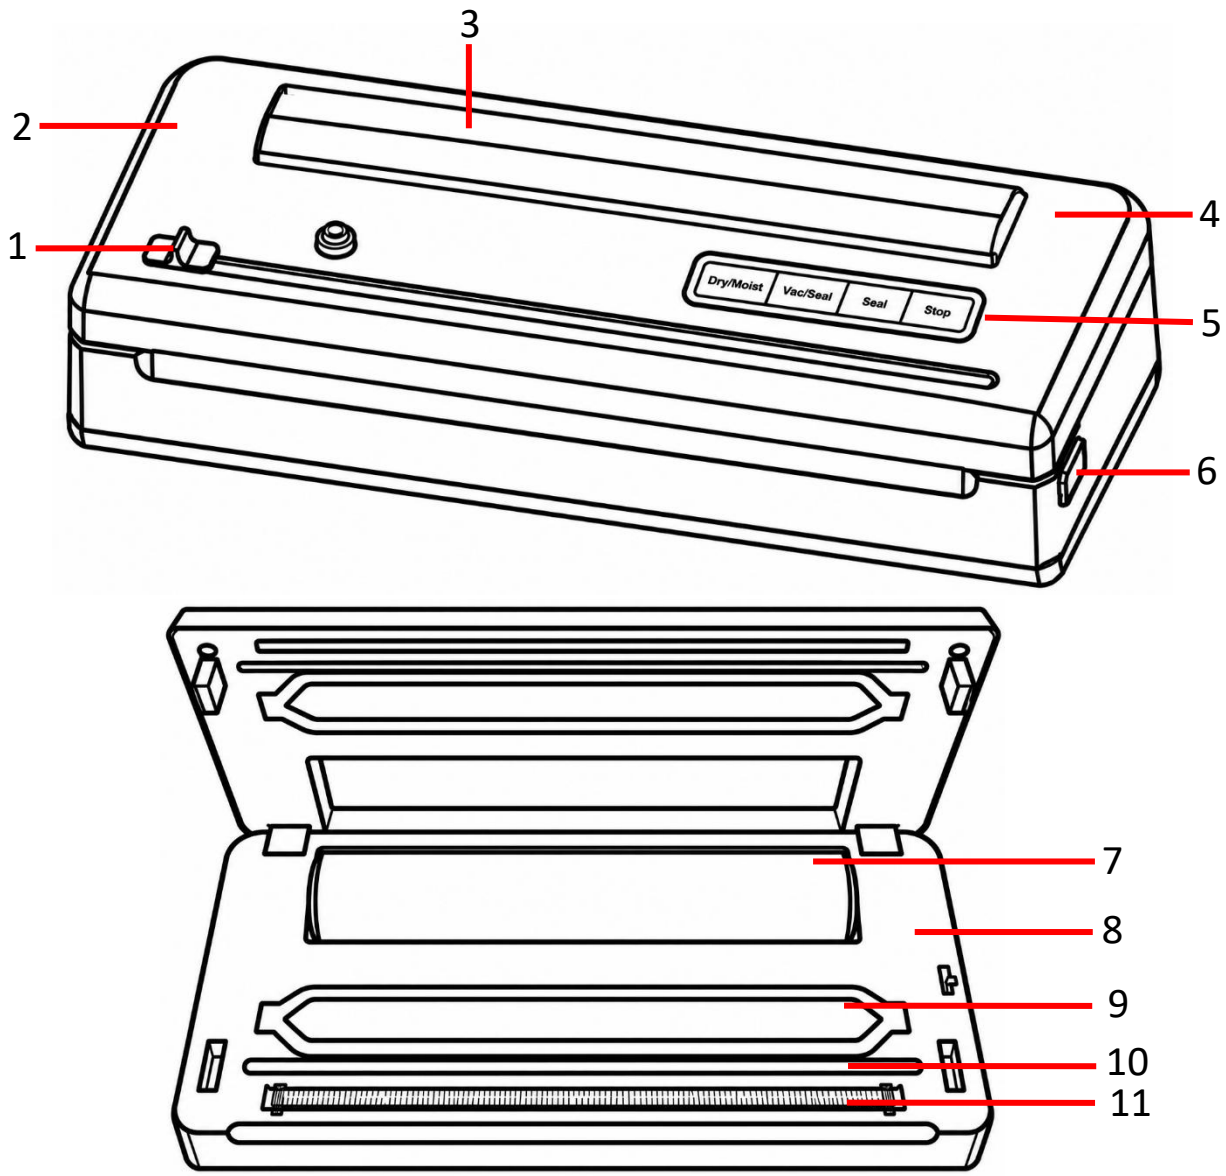

1. Cutter
2. Vacuum Sealer Main Unit
3. Transparent Cover
4. Upper Cover
5. Control Panel
6. Release Button
7. Vacuum Sealer Bag
8. Lower Cover
9. Vacuum Chamber
10. Sealing Strip
11. Rubber Sealing Strip

Description of Control Panel

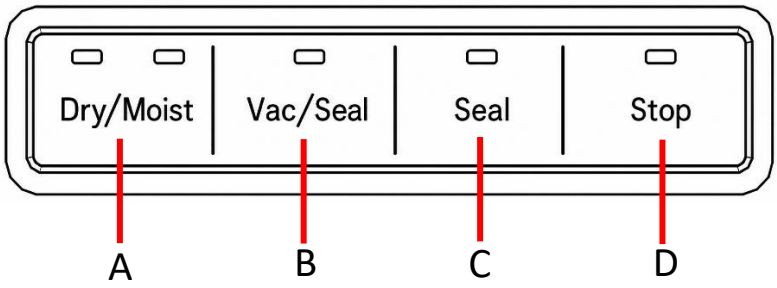

A – Dry/Moist Button:
The Vacuum Sealer will automatically operate in **Dry Mode**, indicated by the corresponding indicator light.
Dry Mode is suitable for dry food items only.
Press the **Dry/Moist Button** (A) to switch to **Moist Mode**. This mode is designed for foods containing a small amount of moisture. The corresponding Moist Mode indicator light will illuminate when selected.
Do not vacuum seal liquids, such as soups, or foods containing more than 20 ml of liquid directly, as this may result in ineffective vacuuming or poor sealing performance.

The only difference between the two modes is the sealing time. The default setting is Dry Mode. You can switch between the two modes at any time.

B – Vac/Seal Button:
Press the **Vac/Seal Button** (B) to initiate the vacuum sealing process. During the vacuum operation, the **Vac/Seal** indicator light will flash.
Once the vacuum process is complete, the appliance will automatically transition to the sealing function. The **Vac/Seal** indicator light will remain illuminated, while the **Seal** indicator light will begin flashing.
After the sealing process has finished, the **Seal** indicator light will stay illuminated for approximately 2 seconds, after which both the **Seal** and **Vac/Seal** indicator lights will turn off.
During the vacuum process, the **Seal Button** (C) may be pressed at any time to switch directly to sealing mode.

C – Seal Button:
Press the **Seal Button** (C) to begin the sealing process. During sealing, the **Seal** indicator light will flash.
Once sealing is complete, the **Seal** indicator light will remain illuminated for approximately 2 seconds before turning off.
After each sealing cycle, the unit requires a 10-second rest period. During this time, pressing any button will cause all indicator lights to flash for 3 seconds. Once the 10-second rest period has elapsed, the unit will resume normal operation.


D – Stop Button:
Press the **Stop Button** (D) at any time during the Vac/Seal or Seal operation to stop the unit immediately and return to standby mode.

Standby Mode:
After the **Vacuum Sealer Main Unit** (2) is powered on, the Dry Mode indicator light will illuminate by default. If no operation is performed for 5 minutes, the indicator light will turn off and the appliance will enter standby mode.
To use the appliance after it has entered standby mode, press any button to wake the unit, then select the desired function to begin operation.

Operating Instructions:


To Seal

- Place the **Vacuum Sealer Main Unit** (2) on a solid, level non-flammable surface.
- Insert the mains plug into a suitable socket outlet.
- Press the **Release Button** (6) to lift and open the **Upper Cover** (4).
- Pull the **Vacuum Sealer Bag** (7) out to the required length.
- Close the **Upper Cover** (4) ensuring it locks firmly in place.
- Press the **Seal Button** (C) to start the sealing process. Once sealing is complete, the **Seal** indicator light will turn off.
- Cut the **Vacuum Sealer Bag** (7) by sliding the **Cutter** (1) across the **Sealing Strip** (10).
- Open the **Upper Cover** (4) by pressing the **Release Button** (6) and remove the sealed bag.

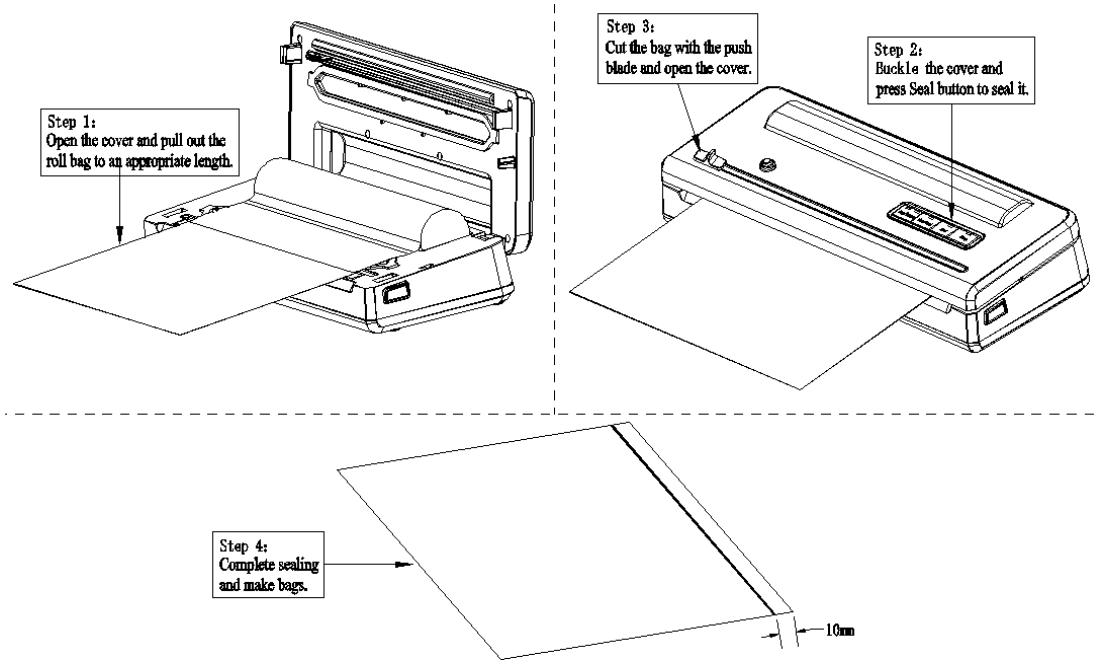

To Vacuum and Seal

- Place food into the **Vacuum Sealer Bag** (7), ensuring one end of the bag is sealed.
- Press the **Release Button** (6) to lift and open the **Upper Cover** (4).
- Position the open end of the **Vacuum Sealer Bag** (7) inside the unit, ensuring it is correctly placed over the **Vacuum Chamber** (9).
- Close the **Upper Cover** (4) ensuring it locks firmly in place.
- Press the **Dry/Moist Button** (A) to select the appropriate setting for the food type. The corresponding indicator light will illuminate to confirm selection.
- Press the **Vac/Seal Button** (B) to begin the vacuum sealing process. The appliance will first vacuum the bag and will then automatically switch to sealing once the vacuum process is complete.
- When the vacuum sealing process has finished, the indicator lights will turn off.
- Cut the **Vacuum Sealer Bag** (7) by sliding the **Cutter** (1) across the **Sealing Strip** (10).
- Press the **Release Button** (6) to open the **Upper Cover** (4), then remove the sealed bag.

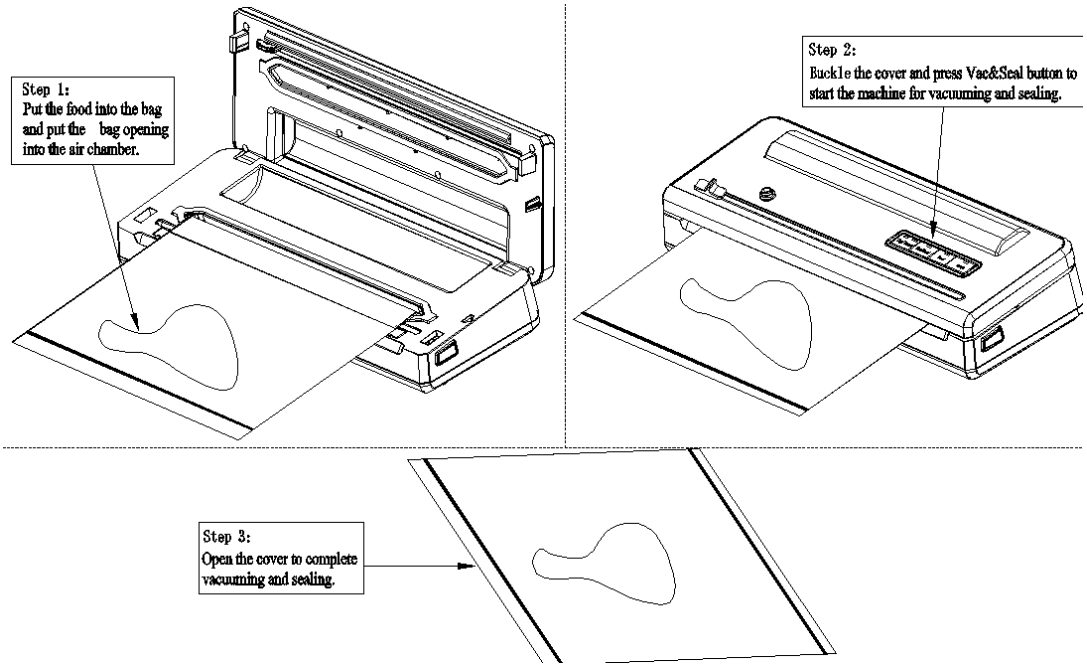

Care and Use of Vacuum Sealer

- Always disconnect the Vacuum Sealer from the mains power supply and allow to cool before cleaning.
- Clean the outside of the Vacuum Sealer with a soft damp cloth. Never clean the Vacuum Sealer with harsh or abrasive cleaners.
- Do not submerge any part of the Vacuum Sealer or its cord in water or any other liquids.

Troubleshooting Guide

Problem	*Possible Cause*	*Possible Fix*
No response or startup when powered on.	Abnormal power supply, overheating protection, damaged fuse.	1.Check the socket, plug and fuse and power cable. 2. Check the mains socket is switched on. 3. Check for overheating during continuous operation and allow to cool.
Machine running, unable to extract vacuum/weak suction.	Bag mismatch, seal leakage, air duct blockage.	1. Check if you are using the correct vacuum bags. 2. Check for wrinkles and water and oil residue at the bag opening. 3. Check if the sealing strip and exhaust port are dirty or blocked.
Normal pumping, loose sealing/air leakage.	Insufficient sealing time, aging rubber strip, and damp bag opening.	1. Check if the bag opening is attached. 2. Check the silicone pressure strip. 3. Wipe the bag opening dry. 4. Adjust the sealing duration to the appropriate level.
The seal is burnt, smoking, and has a burnt smell.	The seal is burnt or is smoking and has a burning smell.	1. Inspection. 2. Check if the heating strip has carbon deposits or is damaged. 3. Clean the carbon deposits on the heating strip, replace if damaged.
High noise level during use and or abnormal noise.	The machine is placed on an uneven surface.	1. Check the unit is mounted on a solid, level surface.
Frequent shutdowns during use.	Overheating and overload protection triggered.	1. Check if the units heat dissipation port is blocked.

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse needed replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a plug with the fuse cover missing. If in doubt, consult a qualified electrician.
If you need to remove the plug -**DISCONNECT FROM THE MAINS**- and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Technical Specification


Model Number	SDA2920
Rated Voltage	220-240V~ 50-60Hz
Rated Power	110W
Protection Class	II
ErP: Power consumption of equipment in off mode shall not exceed 0,5W	0,26W
This equipment complies with Annex III of Commission Regulation (EU) 2023/826	

Recycling Information

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

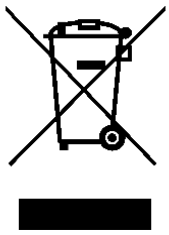

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.


Customer Support

Should you require any product information, replacement parts or accessories, please contact our customer care team on 0161 831 7879 (8.30am-4.30pm Monday to Thursday, 8.00am-4.00pm Friday) and select option 3 or by contacting us via email: help@daewooelectricals.com.

- Replacement parts and accessories are guaranteed for 1 year from the date of purchase.

- It is important to note that your warranty becomes invalid should non Daewoo parts or accessories be used with this appliance.

Safety Marks

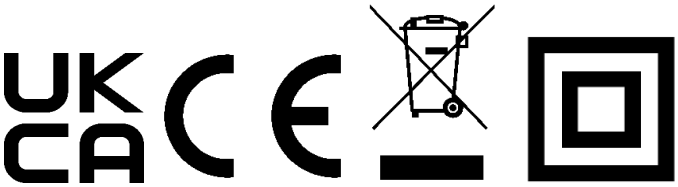

WARRANTY

Thank you for purchasing your Daewoo product.

As part of our commitment to quality, we are offering you an extra 2 years warranty in addition to your 1 year guarantee

Your Daewoo product is guaranteed for 1 year from the date of original purchase, with proof of purchase or receipt. If any defect should occur due to faulty workmanship or material, your faulty product should be returned to the place of purchase, replacement or refund is at the discretion of the retailer.

The guarantee is subject to the following provisions:

- The product must be correctly installed and operated in accordance with the requirements contained in the instruction manual.
- The product must be used solely for domestic purposes.
- It does not cover general wear and tear, damage, misuse or any consumable parts.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged through inexpert repair.
- The guarantee is only valid within the UK and Eire.

Your standard 1 year guarantee will only be extended to the maximum available for your individual product upon registration. (Note: products must be registered individually and covers the main body and housing). If you do not register your product within 28 days of the original purchase date, your product will only be guaranteed for 1 year.

To validate your extended 2 year warranty*please register your purchase online within 28 days of the original purchase date by registering at:

https://help.daewooelectricals.com
or
Contact Us (daewooelectricals.com)

*Your extended warranty is only valid with proof of purchase receipt and subject to the conditions outlined above.

Daewoo is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China