
1800W Steam Iron

SDA3052

User Manual

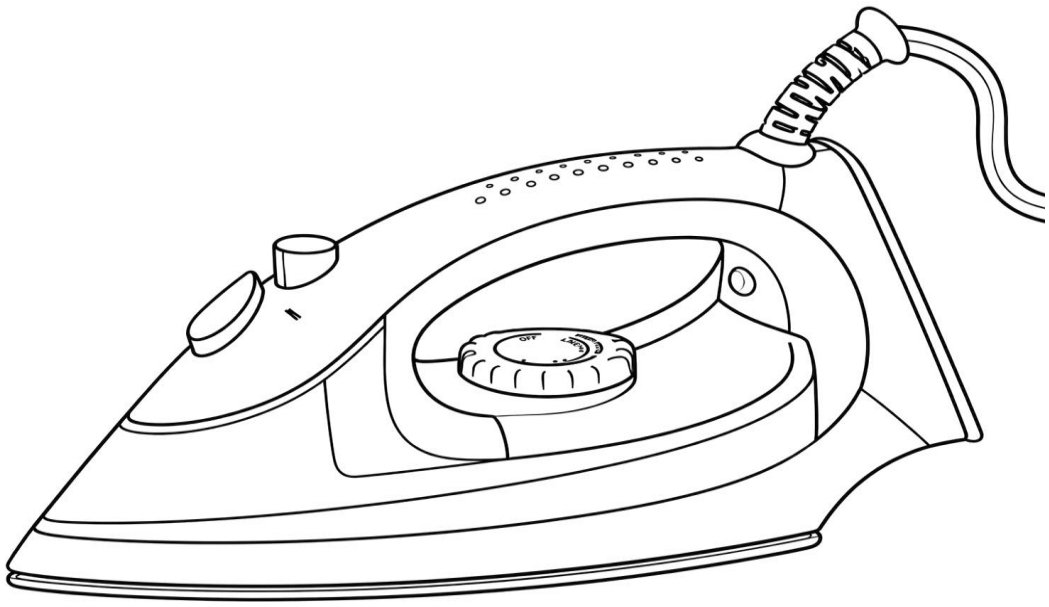

2 Contents
3 Getting Started
3 Safety Advice
5 Description of Symbols
6 What's in the Box
7 Description of Parts
7 Notes About Ironing
8 Using the Steam Iron
Dry Ironing
9 Steam Ironing
10 Temperature Table
10 Care and Cleaning
11 Technical Specification
11 Troubleshooting
12 The Mains Plug
13 Recycling
14 Safety Marks
15 Notes
16 Back Page

- Check that the product is intact and undamaged and all parts are present.
- No tools are needed to assemble your Steam Iron.
- Remove all packing materials, including the plastic protective cover from the soleplate and discard responsibly.
- Wipe the soleplate of the steam iron using a soft, clean damp cloth and dry thoroughly.

Safety Advice




- **IMPORTANT** – The first step you need to take is to ensure your safety! Please take time to read and understand these instructions before using the product.
- Please keep these instructions for future reference.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory and mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use if the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- **DO NOT** leave the appliance unattended during use.
- **DO NOT** leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- **DO NOT** use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used, before it is cleaned and whilst being repaired.


- If the power cable is damaged, it should only be replaced by suitable qualified personnel in order to avoid a hazard.
- Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
- **DO NOT** operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- **DO NOT** allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
- **DO NOT** run the mains cable under carpets, rugs, etc.
- Allow the unit to cool before storage.
- Never place the appliance near to flammable material or high pressure containers.
- This appliance is intended for household use only and should not be used for industrial purposes.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
- **DO NOT** immerse the appliance, base or its cord in water or any other liquids.
- **DO NOT** use this appliance for anything other than its intended use.
- **DO NOT** push objects into any openings as damage to the appliance and/or electric shock may occur.
- Ensure appliance is situated in an open area, do not allow it to come in contact with or place beneath cupboards, curtains, wall coverings, clothing or other flammable materials.
- Unplug after each use. Grasp the plug, not the cord.
- **DO NOT** cover this appliance.
- **CAUTION: The soleplate of the steam iron will get hot during use.**
- **THIS APPLIANCE MUST BE EARTHED**




The following warning symbols or words are used in this instruction manual:

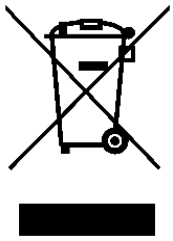UKCA	Products labelled with UK Conformity Assessment identifies products conforming to UK statutory requirements
CE	Products labelled with this symbol conform to applicable provisions of the European Economic Area.
	You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.
WARNING!	This designates a hazard with moderate risk, which may result in severe injury or damage to the product if not adhered to.
	This symbol indicates that the supply uses an alternating current mains supply.
	This symbol indicates that the surface gets hot and care must be taken
	This symbol indicates that the appliance is class I and therefore requires an earth connection

- Steam Iron
- Filling Cup
- User Manual (this booklet)

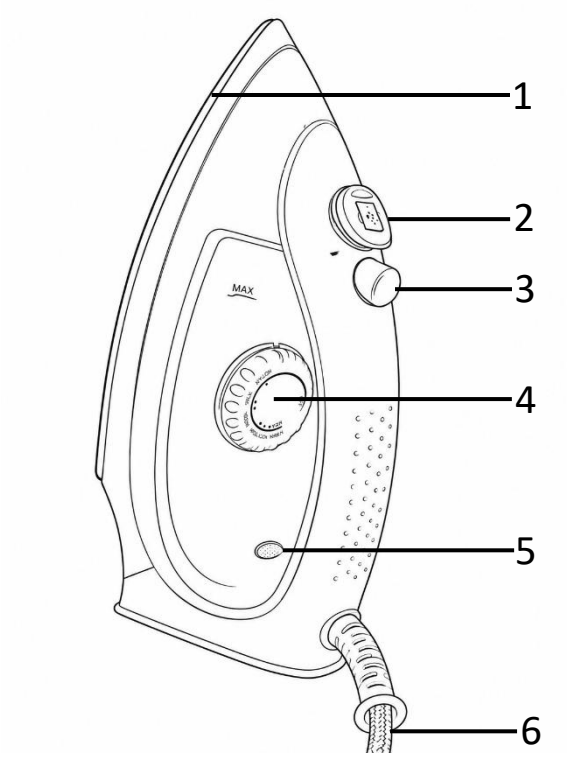

1. Soleplate
2. Tank Filler
3. Steam Button
4. Temperature Dial
5. Indicator Light
6. Mains Cable
7. Filling Cup

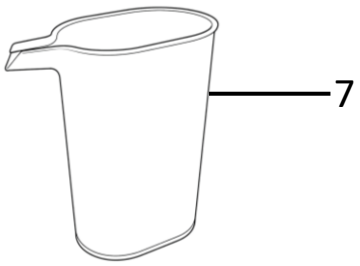


Notes About Ironing

- To keep the base smooth and scratch free do not run the iron over metal objects such as zips, buttons etc.
- It is highly recommended, especially if your area has hard water, to use distilled or demineralised water, otherwise white, Calcium deposits will form which will damage and shorten the life of the product.
- Do not store the iron with water in the water tank.
- During any breaks whilst ironing, always ensure that the iron is placed in the upright position.
- After use, disconnect the iron from the mains and allow to cool before pouring off any remaining water.

WARNING! Do not use chemically de-limed or perfumed water.


Dry Ironing

1. Refer to the ironing instructions on the garment to be ironed.

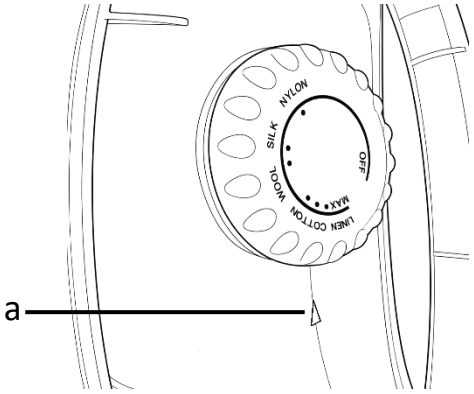

2. Rotate the **Temperature Dial** (4) so that the pointer (a) lines up with the appropriate setting for the garment material – See the temperature table below.
   NB the further clockwise the dial, the higher the temperature, Nylon being the lowest and Linen being the highest temperature.

3. Ensure **Steam Button** (3) is not pressed.

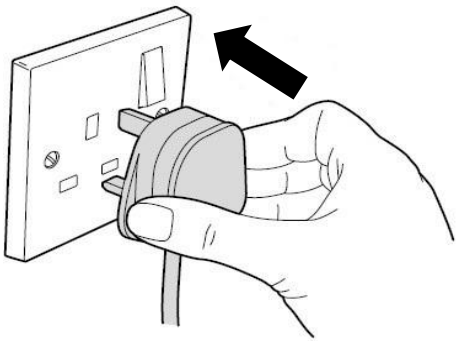

4. Insert the mains plug into the nearest socket.

5. The **Indicator Light** (5) will illuminate to show the iron is heating up. Once the **Indicator Light** (5) goes out, the iron is ready to use.
   NB during use the Indicator Light will go on and off to show the set temperature is being maintained, this is quite normal.


6. If the garment doesn't have any ironing instructions but you know the type of fabric used in the garment, use the guide on the **Temperature Dial** (4) and the temperature table below.

7. Fabrics with special finishes such as polishing, pleats etc. should be ironed at the lowest temperature setting.


8. With mixed fibres always select the lowest applicable temperature.

9. Group items with similar fibres together, as the iron heats up faster than it cools, start ironing items requiring the lowest temperature first.


Steam Ironing

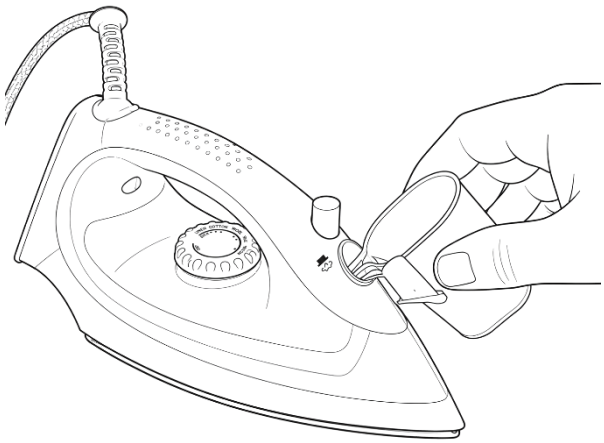

1. Pull the plug out of the **Tank Filler** (2) and fill the steam iron tank with water using the **Filling Cup** (7).
2. Ensure that when the iron is stood upright that the 'MAX' mark is not exceeded.
3. Replace the plug into the **Tank Filler** (2).

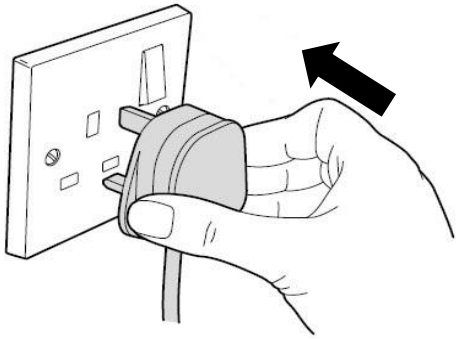

4. Insert the mains plug into the nearest socket.

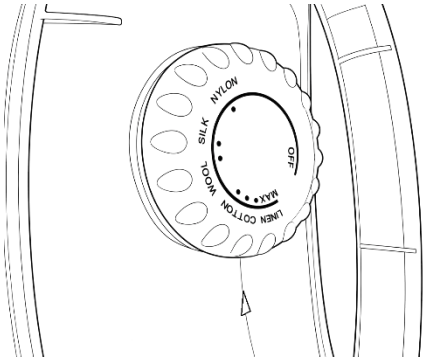

5. Rotate the **Temperature Dial** (4) fully clockwise to the 'MAX/LINEN' position.

6. The **Indicator Light** (5) will illuminate whilst the iron is heating up. Once the light goes out, the iron is ready to use.
   NB during use the **Indicator Light** (5) will go on and off to show the set temperature is being maintained, this is quite normal.

7. Press the **Steam Button** (3) down to release steam from the **Soleplate** (1).
   NB after steam ironing, empty the iron of water and press the **Steam Button** (3) again to switch the steam mode off. Do not store the iron with water in the tank.

Temperature Table

Ironing Label	*Textile Type*	*Fabrics*
	Synthetic	Acrylic Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Polyamide (Nylon) Polyester Viscose (Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

Care & Cleaning

- Before carrying out any cleaning, ensure that the steam iron is unplugged from the mains power supply and has fully cooled.
- Wipe the soleplate with a soft damp cloth and dry thoroughly, after pouring off any remaining water from the water tank.
- The body of the iron can be wiped down with a soft damp cloth, do not use harsh or abrasive cleaning products.
- Do not submerge the appliance or its mains cable in water or any other liquids.

Model No.	SDA3052
Rated Voltage	220-240V~ 50-60Hz
Rated Power	1650-1950W
Protection Class	I (This Appliance must be Earthed)
Water Tank Capacity	80ml
Power consumption of equipment in Off Mode shall not exceed 0,30W	In off mode 0,00W
This Equipment complies with Annex III of the Commission Regulation (EU) 2023/826	

Troubleshooting


Problem	***Possible Cause***	***Possible Fix***
Unit not powering up.	Mains plug not in socket	Check that the mains plug is inserted into the socket and is switched on.
	Temperature Dial is too low and not set to the correct setting.	Rotate the Temperature Dial clockwise to the required heat setting.
	Fuse has blown in the mains plug.	Check by substitution.
Unit does not steam.	The water reservoir may be empty.	Unplug the iron and fill as per the instructions.
Water dripping from Soleplate whilst dry ironing.	Steam button pressed.	Ensure Steam button is not pressed and that water is not in the water tank.
No steam produced whilst steam ironing.	Temperature Dial too low Steam button not pressed	Increase Temperature Dial to maximum. Press steam button down.
White substance is appearing around spray outlet and soleplate.	Calcium deposits.	Use distilled or demineralised water

This appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating). Never use a mains plug with the fuse cover missing. If in doubt, consult a qualified electrician.
If the plug is to be removed – DISCONNECT FROM THE MAINS – and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of electric shock.

Disposal of the Packaging

Dispose of paper and cardboard in appropriate paper re-cycling facilities.
Dispose of recyclable plastics in appropriate plastic re-cycling facilities.
Dispose of non-recyclable plastics in the appropriate plastics collection service.

Disposal of the Product

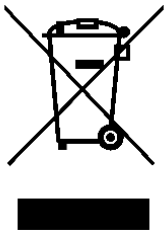

You should now recycle your waste electrical goods and in doing so help the environment. This symbol means waste electrical products at the end of their useful life should not be disposed of with normal household waste and not sent to landfill. Please ensure it is taken to a suitable facility for disposal. Check with your Local Authority or retailer for recycling advice or visit www.recycle-more.co.uk or www.weeeireland.ie enter your postcode to find out your nearest recycling site.





Daewoo Essentials is a registered trademark.
Produced and imported under licence by
Eurosonic Group Limited
Brightgate House
1 Brightgate Way
Manchester M32 0TB UK
EU Rep: EuroSonic Magppie (ESM) Ltd. Ireland D05 X006
www.esgltd.com
Made in China